



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-551](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-104](#)
 MAC, displaying [2-350](#)
access map configuration mode [2-180](#)
access mode [2-504](#)
access ports [2-504](#)
ACEs [2-56](#), [2-240](#)
ACLs
 deny [2-54](#)
 displaying [2-270](#)
 for non-IP protocols [2-160](#)
 IP [2-104](#)
 matching [2-180](#)
 on Layer 2 interfaces [2-104](#)
 permit [2-238](#)
action command [2-6](#)
address aliasing [2-229](#)
aggregate-port learner [2-234](#)
allowed VLANs [2-518](#)
apply command [2-551](#)
archive download-sw command [2-8](#)
archive tar command [2-11](#)

archive upload-sw command [2-14](#)
audience [xv](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-80](#)
autonegotiation of duplex mode [2-87](#)
auto qos voip command [2-16](#)

B

BackboneFast, for STP [2-442](#)
backup interfaces
 configuring [2-499](#)
 displaying [2-317](#)
boot (boot loader) command [A-2](#)
boot bootlpr command [2-20](#)
boot config-file command [2-21](#)
boot enable-break command [2-22](#)
boot helper command [2-23](#)
boot helper-config file command [2-24](#)
booting
 Cisco IOS image [2-27](#)
 displaying environment variables [2-278](#)
 interrupting [2-22](#)
 manually [2-25](#)
boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)

boot loader (continued)

- helper image [2-23](#)
- directories
 - creating [A-15](#)
 - displaying a list of [A-7](#)
 - removing [A-19](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-14](#)
 - version [A-26](#)
- environment variables
 - described [A-20](#)
 - displaying settings [A-20](#)
 - location of [A-21](#)
 - setting [A-20](#)
 - unsetting [A-24](#)
- files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-16, A-23](#)
 - renaming [A-17](#)
- file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
- loading helper images [A-13](#)
- resetting the system [A-18](#)
- boot manual command [2-25](#)
- boot private-config-file command [2-26](#)
- boot system command [2-27](#)
- BPDU filtering, for spanning tree [2-443, 2-476](#)
- BPDU guard, for spanning tree [2-445, 2-476](#)
- break key detection [2-260, A-1](#)
- broadcast storm control [2-494](#)

C

- cat (boot loader) command [A-4](#)
- caution, description [xvi](#)
- channel-group command [2-28](#)
- channel-protocol command [2-31](#)
- Cisco SoftPhone
 - auto-QoS configuration [2-16](#)
 - trusting packets sent from [2-220](#)
- class command [2-32](#)
- class-map command [2-34](#)
- class maps
 - creating [2-34](#)
 - defining the match criteria [2-182](#)
 - displaying [2-280](#)
- class of service
 - See CoS
- clear dot1x command [2-36](#)
- clear eap sessions command [2-37](#)
- clear errdisable interface [2-38](#)
- clear ip dhcp snooping database command [2-39](#)
- clear lacp command [2-41](#)
- clear mac address-table command [2-42, 2-43](#)
- clear pagp command [2-44](#)
- clear port-security command [2-45](#)
- clear spanning-tree counters command [2-47](#)
- clear spanning-tree detected-protocols command [2-48](#)
- clear vmmps statistics command [2-49](#)
- clear vtp counters command [2-50](#)
- clusters
 - SNMP trap [2-433](#)
- command modes defined [1-1](#)
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-21, 2-26](#)
- configuring multiple interfaces [2-101](#)

config-vlan mode

- commands [2-538](#)
- description [1-4](#)
- entering [2-537](#)
- summary [1-2](#)

conventions

- command [xv](#)
- for examples [xvi](#)
- publication [xv](#)
- text [xv](#)

copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-190](#)
- overriding the incoming value [2-190](#)

CoS-to-DSCP map [2-194](#)

CPU ASIC statistics, displaying [2-281](#)

crashinfo files [2-94](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug interface command [B-9](#)

debug ip igmp filter command [B-10](#)

debug ip igmp max-groups command [B-11](#)

debug ip igmp snooping command [B-12](#)

debug lacp command [B-13](#)

debug mac-notification command [B-14](#)

debug matm command [B-15](#)

debug matm move update command [B-16](#)

debug monitor command [B-17](#)

debug mvrdbg command [B-18](#)

debug nvram command [B-19](#)

debug pagp command [B-20](#)

debug platform acl command [B-21](#)

debug platform backup interface command [B-22](#)

debug platform cpu-queues command [B-23](#)

debug platform dot1x command [B-24](#)

debug platform etherchannel command [B-25](#)

debug platform forw-tcam command [B-26](#)

debug platform ip dhcp command [B-27](#)

debug platform ip igmp snooping command [B-28](#)

debug platform led command [B-30](#)

debug platform matm command [B-31](#)

debug platform messaging application command [B-32](#)

debug platform phy command [B-33](#)

debug platform pm command [B-35](#)

debug platform port-asic command [B-37](#)

debug platform port-security command [B-38](#)

debug platform qos-acl-tcam command [B-39](#)

debug platform remote-commands command [B-40](#)

debug platform resource-manager command [B-41](#)

debug platform snmp command [B-42](#)

debug platform span command [B-43](#)

debug platform supervisor-asic command [B-44](#)

debug platform sw-bridge command [B-45](#)

debug platform tcam command [B-46](#)

debug platform udd command [B-48](#)

debug platform vlan command [B-49](#)

debug pm command [B-50](#)

debug port-security command [B-52](#)

debug qos-manager command [B-53](#)

debug spanning-tree backbonefast command [B-56](#)

debug spanning-tree bpdu command [B-57](#)

debug spanning-tree bpdu-opt command [B-58](#)

debug spanning-tree command [B-54](#)

debug spanning-tree mstp command [B-59](#)

debug spanning-tree switch command [B-61](#)

debug spanning-tree uplinkfast command [B-63](#)

debug sw-vlan command [B-64](#)

debug sw-vlan ifs command [B-66](#)

debug sw-vlan notification command [B-67](#)

debug sw-vlan vtp command [B-68](#)

debug udd command [B-70](#)

- debug vqpc command [B-72](#)
- define interface-range command [2-51](#)
- delete (boot loader) command [A-6](#)
- delete command [2-53](#)
- deny command [2-54](#)
- detect mechanism, causes [2-89](#)
- device manager requirements [xvi](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-114](#)
 - enabling
 - on a VLAN [2-121](#)
 - option 82 [2-112, 2-114](#)
 - trust on an interface [2-119](#)
 - error recovery timer [2-91](#)
 - rate limiting [2-118](#)
- DHCP snooping binding database
 - bindings
 - displaying [2-329](#)
 - clearing database agent statistics [2-39](#)
 - displaying
 - binding entries [2-329](#)
 - database agent status [2-331](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-53](#)
- documentation, related [xvi](#)
- document conventions [xv](#)
- domain name, VTP [2-560, 2-564](#)
- dot1x auth-fail max-attempts [2-59](#)
- dot1x auth-fail vlan [2-61](#)
- dot1x command [2-57](#)
- dot1x control-direction command [2-63](#)
- dot1x critical global configuration command [2-65](#)
- dot1x critical interface configuration command [2-67](#)
- dot1x default command [2-69](#)
- dot1x fallback command [2-70](#)
- dot1x guest-vlan command [2-71](#)
- dot1x host-mode command [2-73](#)
- dot1x initialize command [2-74](#)
- dot1x mac-auth-bypass command [2-75](#)
- dot1x max-reauth-req command [2-77](#)
- dot1x max-req command [2-78](#)
- dot1x pae command [2-79](#)
- dot1x port-control command [2-80](#)
- dot1x re-authenticate command [2-82](#)
- dot1x reauthentication command [2-83](#)
- dot1x timeout command [2-84](#)
- dropping packets, with ACL matches [2-6](#)
- DSCP-to-CoS map [2-194](#)
- DSCP-to-DSCP-mutation map [2-194](#)
- DTP [2-505](#)
- DTP flap
 - error detection for [2-89](#)
 - error recovery timer [2-91](#)
- DTP negotiation [2-506](#)
- duplex command [2-87](#)
- dynamic-access ports
 - configuring [2-497](#)
 - restrictions [2-497](#)
- dynamic auto VLAN membership mode [2-504](#)
- dynamic desirable VLAN membership mode [2-504](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-78](#)
 - response time before retransmitting [2-84](#)
- encapsulation methods [2-518](#)
- environment variables, displaying [2-278](#)
- errdisable detect cause command [2-89](#)
- errdisable recovery command [2-91](#)
- error conditions, displaying [2-306](#)
- error disable detection [2-89](#)
- error-disabled interfaces, displaying [2-317](#)

EtherChannel

- assigning Ethernet interface to channel group [2-28](#)
- creating port-channel logical interface [2-99](#)
- debug EtherChannel/PAgP, display [B-8](#)
- debug platform-specific events, display [B-25](#)
- displaying [2-310](#)
- interface information, displaying [2-317](#)

LACP

- clearing channel-group information [2-41](#)
- debug messages, display [B-13](#)
- displaying [2-344](#)
- modes [2-28](#)
- port priority for hot-standby ports [2-148](#)
- restricting a protocol [2-31](#)
- system priority [2-150](#)

- load-distribution methods [2-248](#)

PAgP

- aggregate-port learner [2-234](#)
- clearing channel-group information [2-44](#)
- debug messages, display [B-20](#)
- displaying [2-394](#)
- error detection for [2-89](#)
- error recovery timer [2-91](#)
- learn method [2-234](#)
- modes [2-28](#)
- physical-port learner [2-234](#)
- priority of interface for transmitted traffic [2-236](#)

- Ethernet controller, internal register display [2-283](#)

- Ethernet statistics, collecting [2-259](#)

- examples, conventions for [xvi](#)

- exception crashinfo command [2-94](#)

- exit command [2-551](#)

extended-range VLANs

- and allowed VLAN list [2-518](#)
- and pruning-eligible list [2-518](#)
- configuring [2-537](#)

- extended system ID for STP [2-451](#)

F

- fallback profile command [2-95](#)

fallback profiles

- displaying [2-313](#)

- file name, VTP [2-560](#)

- files, deleting [2-53](#)

- flash_init (boot loader) command [A-9](#)

Flex Links

- configuring [2-499](#)

- displaying [2-317](#)

- flowcontrol command [2-97](#)

- format (boot loader) command [A-10](#)

- forwarding packets, with ACL matches [2-6](#)

- forwarding results, display [C-6](#)

- frame forwarding information, displaying [C-6](#)

- fsck (boot loader) command [A-11](#)

G

- global configuration mode [1-2, 1-3](#)

H

- hardware ACL statistics [2-270](#)

- help (boot loader) command [A-12](#)

- hierarchical policy maps [2-246](#)

- host connection, port configuration [2-503](#)

I

IEEE 802.1x

- and switchport modes [2-505](#)

- violation error recovery [2-91](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

- enabling guest VLAN supplicant [2-60, 2-70, 2-96](#)

IGMP filters

- applying [2-124](#)
- debug messages, display [B-10](#)

IGMP groups, setting maximum [2-126](#)IGMP maximum groups, debugging [B-11](#)

IGMP profiles

- creating [2-128](#)
- displaying [2-334](#)

IGMP snooping

- adding ports as a static member of a group [2-144](#)
- displaying [2-335, 2-340, 2-342](#)
- enabling [2-130](#)
- enabling the configurable-leave timer [2-132](#)
- enabling the Immediate-Leave feature [2-141](#)
- flooding query count [2-138](#)
- interface topology change notification behavior [2-140](#)
- multicast table [2-338](#)
- querier [2-134](#)
- query solicitation [2-138](#)
- report suppression [2-136](#)
- switch topology change notification behavior [2-138](#)

images

See software images

Immediate-Leave feature, MVR [2-231](#)immediate-leave processing [2-141](#)

initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)interface port-channel command [2-99](#)interface range command [2-101](#)interface-range macros [2-51](#)

interfaces

- assigning Ethernet interface to channel group [2-28](#)
- configuring [2-87](#)
- configuring multiple [2-101](#)
- creating port-channel logical [2-99](#)
- debug messages, display [B-9](#)
- disabling [2-431](#)

interfaces (continued)i

- displaying the MAC address table [2-362](#)
- restarting [2-431](#)

interface speed, configuring [2-486](#)interface vlan command [2-103](#)internal registers, displaying [2-283, 2-290](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

- error detection for [2-89](#)
- error recovery timer [2-91](#)

ip access-group command [2-104](#)ip address command [2-106](#)IP addresses, setting [2-106](#)IP address matching [2-180](#)ip admission command [2-108](#)ip admission name proxy http command [2-109](#)

IP DHCP snooping

See DHCP snooping

ip dhcp snooping command [2-111](#)ip dhcp snooping information option allow-untrusted command [2-114](#)ip dhcp snooping information option command [2-112](#)ip dhcp snooping information option format remote-id command [2-116](#)ip dhcp snooping limit rate command [2-118](#)ip dhcp snooping trust command [2-119](#)ip dhcp snooping verify command [2-120](#)ip dhcp snooping vlan command [2-121](#)ip dhcp snooping vlan information option format-type circuit-id string command [2-122](#)ip igmp filter command [2-124](#)ip igmp max-groups command [2-126](#)ip igmp profile command [2-128](#)ip igmp snooping command [2-130](#)ip igmp snooping last-member-query-interval command [2-132](#)ip igmp snooping querier command [2-134](#)ip igmp snooping report-suppression command [2-136](#)ip igmp snooping tcn command [2-138](#)

ip igmp snooping tcn flood command [2-140](#)
 ip igmp snooping vlan immediate-leave command [2-141](#)
 ip igmp snooping vlan mrouter command [2-142](#)
 ip igmp snooping vlan static command [2-144](#)
 IP multicast addresses [2-228](#)
 IP phones
 auto-QoS configuration [2-16](#)
 trusting packets sent from [2-220](#)
 IP-precedence-to-DSCP map [2-194](#)
 IP source guard
 displaying
 dynamic binding entries only [2-329](#)
 ip ssh command [2-146](#)

J

jumbo frames
 See MTU

L

LACP
 See EtherChannel
 lacp port-priority command [2-148](#)
 lacp system-priority command [2-150](#)
 Layer 2 traceroute
 IP addresses [2-528](#)
 MAC addresses [2-525](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-89](#)
 error recovery timer [2-91](#)
 link state group command [2-152](#)
 link state track command [2-154](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-248](#)

logging event command [2-155](#)
 logging file command [2-156](#)
 logical interface [2-99](#)
 loopback error
 detection for [2-89](#)
 recovery timer [2-91](#)
 loop guard, for spanning tree [2-452, 2-456](#)

M

mac access-group command [2-158](#)
 MAC access-groups, displaying [2-350](#)
 MAC access list configuration mode [2-160](#)
 mac access-list extended command [2-160](#)
 MAC access lists [2-54](#)
 MAC addresses
 displaying
 aging time [2-356](#)
 all [2-354](#)
 dynamic [2-360](#)
 MAC address-table move updates [2-364](#)
 notification settings [2-366](#)
 number of addresses in a VLAN [2-358](#)
 per interface [2-362](#)
 per VLAN [2-370](#)
 static [2-368](#)
 static and dynamic entries [2-352](#)
 dynamic
 aging time [2-162](#)
 deleting [2-42](#)
 displaying [2-360](#)
 enabling MAC address notification [2-165](#)
 enabling MAC address-table move update [2-163](#)
 matching [2-180](#)
 static
 adding and removing [2-167](#)
 displaying [2-368](#)
 dropping on an interface [2-168](#)
 tables [2-354](#)

- mac address notification, debugging [B-14](#)
- mac address-table aging-time [2-158, 2-180](#)
- mac address-table aging-time command [2-162](#)
- mac address-table move update command [2-163](#)
- mac address-table notification command [2-165](#)
- mac address-table static command [2-167](#)
- mac address-table static drop command [2-168](#)
- macro apply command [2-170](#)
- macro description command [2-173](#)
- macro global command [2-174](#)
- macro global description command [2-177](#)
- macro name command [2-178](#)
- macros
 - adding a description [2-173](#)
 - adding a global description [2-177](#)
 - applying [2-174](#)
 - creating [2-178](#)
 - displaying [2-396](#)
 - interface range [2-51, 2-101](#)
 - specifying parameter values [2-174](#)
 - tracing [2-174](#)
- manual
 - audience [xv](#)
 - purpose of [xv](#)
- maps
 - QoS
 - defining [2-194](#)
 - displaying [2-380](#)
 - VLAN
 - creating [2-548](#)
 - defining [2-180](#)
 - displaying [2-422](#)
- match (access-map configuration) command [2-180](#)
- match (class-map configuration) command [2-182](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-184](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-188](#)
- mls qos command [2-186](#)
- mls qos cos command [2-190](#)
- mls qos dscp-mutation command [2-192](#)
- mls qos map command [2-194](#)
- mls qos queue-set output buffers command [2-198](#)
- mls qos queue-set output threshold command [2-200](#)
- mls qos rewrite ip dscp command [2-202](#)
- mls qos srr-queue input bandwidth command [2-204](#)
- mls qos srr-queue input buffers command [2-206](#)
- mls qos-srr-queue input cos-map command [2-208](#)
- mls qos srr-queue input dscp-map command [2-210](#)
- mls qos srr-queue input priority-queue command [2-212](#)
- mls qos srr-queue input threshold command [2-214](#)
- mls qos-srr-queue output cos-map command [2-216](#)
- mls qos srr-queue output dscp-map command [2-218](#)
- mls qos trust command [2-220](#)
- mls qos vlan-based command [2-222](#)
- mode, MVR [2-228](#)
- modes, commands [1-1](#)
- monitor session command [2-223](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-405](#)
 - interoperability [2-48](#)
 - link type [2-454](#)
 - MST region
 - aborting changes [2-460](#)
 - applying changes [2-460](#)
 - configuration name [2-460](#)
 - configuration revision number [2-460](#)
 - current or pending display [2-460](#)
 - displaying [2-405](#)
 - MST configuration mode [2-460](#)
 - VLANs-to-instance mapping [2-460](#)
 - path cost [2-462](#)
 - protocol mode [2-458](#)
 - restart protocol migration process [2-48](#)

MSTP (continued)

root port

- loop guard [2-452](#)
- preventing from becoming designated [2-452](#)
- restricting which can be root [2-452](#)
- root guard [2-452](#)

root switch

- affects of extended system ID [2-451](#)
- hello-time [2-465, 2-472](#)
- interval between BPDU messages [2-466](#)
- interval between hello BPDU messages [2-465, 2-472](#)
- max-age [2-466](#)
- maximum hop count before discarding BPDU [2-467](#)
- port priority for selection of [2-468](#)
- primary or secondary [2-472](#)
- switch priority [2-471](#)

state changes

- blocking to forwarding state [2-478](#)
- enabling BPDU filtering [2-443, 2-476](#)
- enabling BPDU guard [2-445, 2-476](#)
- enabling Port Fast [2-476, 2-478](#)
- forward-delay time [2-464](#)
- length of listening and learning states [2-464](#)
- rapid transition to forwarding [2-454](#)
- shutting down Port Fast-enabled ports [2-476](#)

state information display [2-404](#)**MTU**

- configuring size [2-523](#)
- displaying global setting [2-412](#)
- multicast group address, MVR [2-231](#)
- multicast groups, MVR [2-229](#)
- multicast router learning method [2-142](#)
- multicast router ports, configuring [2-142](#)
- multicast storm control [2-494](#)
- multicast VLAN, MVR [2-228](#)
- multicast VLAN registration
 - See MVR

- multiple hosts on authorized port [2-73](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [2-229](#)
- configuring [2-228](#)
- configuring interfaces [2-231](#)
- debug messages, display [B-18](#)
- displaying [2-388](#)
- displaying interface information [2-390](#)
- members, displaying [2-392](#)

mvr (global configuration) command [2-228](#)mvr (interface configuration) command [2-231](#)mvr vlan group command [2-232](#)

Nnative VLANs [2-518](#)

nonegotiate

DTP messaging [2-506](#)nonegotiate, speed [2-486](#)

non-IP protocols

- denying [2-54](#)
- forwarding [2-238](#)

non-IP traffic access lists [2-160](#)

non-IP traffic forwarding

- denying [2-54](#)
- permitting [2-238](#)

normal-range VLANs [2-537, 2-542](#)note, description [xvi](#)no vlan command [2-537, 2-546](#)

P**PAgP**

See EtherChannel

pagp learn-method command [2-234](#)pagp port-priority command [2-236](#)

- password, VTP [2-560, 2-564](#)
- password-recovery mechanism, enabling and disabling [2-260](#)
- permit (MAC access-list configuration) command [2-238](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [2-234](#)
- PID, displaying [2-326](#)
- PIM-DVMRP, as multicast router learning method [2-142](#)
- police aggregate command [2-243](#)
- police command [2-241](#)
- policed-DSCP map [2-194](#)
- policy-map command [2-245](#)
- policy maps
 - applying to an interface [2-262, 2-267](#)
 - creating [2-245](#)
 - displaying [2-399](#)
 - hierarchical [2-246](#)
 - policers
 - displaying [2-373](#)
 - for a single class [2-241](#)
 - for multiple classes [2-188, 2-243](#)
 - policed-DSCP map [2-194](#)
 - traffic classification
 - defining the class [2-32](#)
 - defining trust states [2-530](#)
 - setting DSCP or IP precedence values [2-265](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - debug messages, display [B-5](#)
 - enabling IEEE 802.1x
 - globally [2-57](#)
 - per interface [2-80](#)
 - guest VLAN [2-71](#)
 - host modes [2-73](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-74](#)
 - port-based authentication (continued)
 - MAC authentication bypass [2-75](#)
 - manual control of authorization state [2-80](#)
 - multiple hosts on authorized port [2-73](#)
 - PAE as authenticator [2-79](#)
 - periodic re-authentication
 - enabling [2-83](#)
 - time between attempts [2-84](#)
 - quiet period between failed authentication exchanges [2-84](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-82](#)
 - resetting configurable IEEE 802.1x parameters [2-69](#)
 - switch-to-authentication server retransmission time [2-84](#)
 - switch-to-client frame-retransmission number [2-77 to 2-78](#)
 - switch-to-client retransmission time [2-84](#)
 - port-channel load-balance command [2-248](#)
 - Port Fast, for spanning tree [2-478](#)
 - port ranges, defining [2-51](#)
 - ports, debugging [B-50](#)
 - ports, protected [2-517](#)
 - port security
 - aging [2-513](#)
 - debug messages, display [B-52](#)
 - enabling [2-508](#)
 - violation error recovery [2-91](#)
 - port trust states for QoS [2-220](#)
 - port types, MVR [2-231](#)
 - priority-queue command [2-250](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-326](#)
 - protected ports, displaying [2-322](#)
 - pruning
 - VLANs [2-518](#)
 - VTP
 - displaying interface information [2-317](#)
 - enabling [2-560, 2-564](#)
 - pruning-eligible VLAN list [2-520](#)

PVST+

See STP

Q

QoS

auto-QoS

configuring [2-16](#)

debug messages, display [B-2](#)

displaying [2-274](#)

class maps

creating [2-34](#)

defining the match criteria [2-182](#)

displaying [2-280](#)

defining the CoS value for an incoming packet [2-190](#)

displaying configuration information [2-274, 2-372](#)

DSCP transparency [2-202](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-192](#)

defining DSCP-to-DSCP-mutation map [2-194](#)

egress queues

allocating buffers [2-198](#)

defining the CoS output queue threshold map [2-216](#)

defining the DSCP output queue threshold map [2-218](#)

displaying buffer allocations [2-376](#)

displaying CoS output queue threshold map [2-380](#)

displaying DSCP output queue threshold map [2-380](#)

displaying queueing strategy [2-376](#)

displaying queue-set settings [2-383](#)

enabling bandwidth shaping and scheduling [2-490](#)

enabling bandwidth sharing and scheduling [2-492](#)

limiting the maximum output on a port [2-488](#)

mapping a port to a queue-set [2-252](#)

mapping CoS values to a queue and threshold [2-216](#)

QoS (continued)

mapping DSCP values to a queue and threshold [2-218](#)

setting maximum and reserved memory allocations [2-200](#)

setting WTD thresholds [2-200](#)

enabling [2-186](#)

ingress queues

allocating buffers [2-206](#)

assigning SRR scheduling weights [2-204](#)

defining the CoS input queue threshold map [2-208](#)

defining the DSCP input queue threshold map [2-210](#)

displaying buffer allocations [2-376](#)

displaying CoS input queue threshold map [2-380](#)

displaying DSCP input queue threshold map [2-380](#)

displaying queueing strategy [2-376](#)

displaying settings for [2-374](#)

enabling the priority queue [2-212](#)

mapping CoS values to a queue and threshold [2-208](#)

mapping DSCP values to a queue and threshold [2-210](#)

setting WTD thresholds [2-214](#)

maps

defining [2-194, 2-208, 2-210, 2-216, 2-218](#)

displaying [2-380](#)

policy maps

applying an aggregate policer [2-243](#)

applying to an interface [2-262, 2-267](#)

creating [2-245](#)

defining policers [2-188, 2-241](#)

displaying policers [2-373](#)

displaying policy maps [2-399](#)

hierarchical [2-246](#)

policed-DSCP map [2-194](#)

setting DSCP or IP precedence values [2-265](#)

traffic classifications [2-32](#)

trust states [2-530](#)

QoS (continued)

- port trust states [2-220](#)
- queues, enabling the expedite [2-250](#)
- statistics
 - in-profile and out-of-profile packets [2-376](#)
 - packets enqueued or dropped [2-376](#)
 - sent and received CoS values [2-376](#)
 - sent and received DSCP values [2-376](#)
- trusted boundary for IP phones [2-220](#)
- VLAN-based [2-222](#)
- quality of service
 - See QoS
- querytime, MVR [2-228](#)
- queue-set command [2-252](#)

R

- radius-server dead-criteria command [2-253](#)
- radius-server host command [2-255](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- re-authenticating IEEE 802.1x-enabled ports [2-82](#)
- re-authentication
 - periodic [2-83](#)
 - time between attempts [2-84](#)
- receiver ports, MVR [2-231](#)
- receiving flow-control packets [2-97](#)
- recovery mechanism
 - causes [2-91](#)
 - display [2-38, 2-304, 2-308](#)
 - timer interval [2-91](#)
- remote-span command [2-257](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-17](#)
- requirements
 - device manager [xvi](#)

- reset (boot loader) command [A-18](#)
- reset command [2-551](#)
- restricted VLAN
 - See dot1x auth-fail vlan
- rmdir (boot loader) command [A-19](#)
- rmon collection stats command [2-259](#)
- root guard, for spanning tree [2-452](#)
- RSPAN
 - configuring [2-223](#)
 - displaying [2-386](#)
 - filter RSPAN traffic [2-223](#)
 - remote-span command [2-257](#)
 - sessions
 - add interfaces to [2-223](#)
 - displaying [2-386](#)
 - start new [2-223](#)

S

- secure ports, limitations [2-510](#)
- sending flow-control packets [2-97](#)
- service password-recovery command [2-260](#)
- service-policy command [2-262](#)
- set (boot loader) command [A-20](#)
- set command [2-265](#)
- setup command [2-267](#)
- show access-lists command [2-270](#)
- show archive status command [2-273](#)
- show auto qos command [2-274](#)
- show boot command [2-278](#)
- show changes command [2-551](#)
- show class-map command [2-280](#)
- show controllers cpu-interface command [2-281](#)
- show controllers ethernet-controller command [2-283](#)
- show controllers team command [2-290](#)
- show controller utilization command [2-292](#)
- show current command [2-551](#)
- show dot1x command [2-294](#)
- show dtp [2-298](#)

- show eap command [2-300](#)
- show env command [2-303](#)
- show errdisable detect command [2-304](#)
- show errdisable flap-values command [2-306](#)
- show errdisable recovery command [2-308](#)
- show etherchannel command [2-310](#)
- show fallback profile command [2-313](#)
- show flowcontrol command [2-315](#)
- show interfaces command [2-317](#)
- show interfaces counters command [2-324](#)
- show inventory command [2-326](#)
- show ip dhcp snooping binding command [2-329](#)
- show ip dhcp snooping command [2-328](#)
- show ip dhcp snooping database command [2-331](#)
- show ip igmp profile command [2-334](#)
- show ip igmp snooping command [2-335](#)
- show ip igmp snooping groups command [2-338](#)
- show ip igmp snooping mrouter command [2-340](#)
- show ip igmp snooping querier command [2-342](#)
- show lacp command [2-344](#)
- show link state group command [2-348](#)
- show mac access-group command [2-350](#)
- show mac address-table address command [2-354](#)
- show mac address-table aging time command [2-356](#)
- show mac address-table command [2-352](#)
- show mac address-table count command [2-358](#)
- show mac address-table dynamic command [2-360](#)
- show mac address-table interface command [2-362](#)
- show mac address-table move update command [2-364](#)
- show mac address-table notification command [2-43, 2-366, B-16](#)
- show mac address-table static command [2-368](#)
- show mac address-table vlan command [2-370](#)
- show mls qos aggregate-policer command [2-373](#)
- show mls qos command [2-372](#)
- show mls qos input-queue command [2-374](#)
- show mls qos interface command [2-376](#)
- show mls qos maps command [2-380](#)
- show mls qos queue-set command [2-383](#)
- show mls qos vlan command [2-385](#)
- show monitor command [2-386](#)
- show mvr command [2-388](#)
- show mvr interface command [2-390](#)
- show mvr members command [2-392](#)
- show pagp command [2-394](#)
- show parser macro command [2-396](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform layer4op command [C-10](#)
- show platform mac-address-table command [C-11](#)
- show platform messaging command [C-12](#)
- show platform monitor command [C-13](#)
- show platform mvr table command [C-14](#)
- show platform pm command [C-15](#)
- show platform port-asic command [C-16](#)
- show platform port-security command [C-21](#)
- show platform qos command [C-22](#)
- show platform resource-manager command [C-23](#)
- show platform snmp counters command [C-25](#)
- show platform spanning-tree command [C-26](#)
- show platform stp-instance command [C-27](#)
- show platform team command [C-28](#)
- show platform vlan command [C-30](#)
- show policy-map command [2-399](#)
- show port security command [2-401](#)
- show proposed command [2-551](#)
- show spanning-tree command [2-404](#)
- show storm-control command [2-410](#)
- show system mtu command [2-412](#)
- show trust command [2-530](#)
- show udd command [2-413](#)
- show version command [2-416](#)
- show vlan access-map command [2-422](#)
- show vlan command [2-418](#)

- show vlan command, fields [2-420](#)
- show vlan filter command [2-423](#)
- show vmps command [2-424](#)
- show vtp command [2-427](#)
- shutdown command [2-431](#)
- shutdown vlan command [2-432](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-436](#)
- SNMP informs, enabling the sending of [2-433](#)
- snmp-server enable traps command [2-433](#)
- snmp-server host command [2-436](#)
- snmp trap mac-notification command [2-440](#)
- SNMP traps
 - enabling MAC address notification trap [2-440](#)
 - enabling the MAC address notification feature [2-165](#)
 - enabling the sending of [2-433](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-53](#)
 - downloading [2-8](#)
 - upgrading [2-8](#)
 - uploading [2-14](#)
- software version, displaying [2-416](#)
- source ports, MVR [2-231](#)
- SPAN
 - configuring [2-223](#)
 - debug messages, display [B-17](#)
 - displaying [2-386](#)
 - filter SPAN traffic [2-223](#)
 - sessions
 - add interfaces to [2-223](#)
 - displaying [2-386](#)
 - start new [2-223](#)
- spanning [2-480](#)
- spanning-tree backbonefast command [2-442](#)
- spanning-tree bpdupfilter command [2-443](#)
- spanning-tree bpduguard command [2-445](#)
- spanning-tree cost command [2-447](#)
- spanning-tree etherchannel command [2-449](#)
- spanning-tree extend system-id command [2-451](#)
- spanning-tree guard command [2-452](#)
- spanning-tree link-type command [2-454](#)
- spanning-tree loopguard default command [2-456](#)
- spanning-tree mode command [2-458](#)
- spanning-tree mst configuration command [2-460](#)
- spanning-tree mst cost command [2-462](#)
- spanning-tree mst forward-time command [2-464](#)
- spanning-tree mst hello-time command [2-465](#)
- spanning-tree mst max-age command [2-466](#)
- spanning-tree mst max-hops command [2-467](#)
- spanning-tree mst port-priority command [2-468](#)
- spanning-tree mst pre-standard command [2-470](#)
- spanning-tree mst priority command [2-471](#)
- spanning-tree mst root command [2-472](#)
- spanning-tree portfast (global configuration) command [2-476](#)
- spanning-tree portfast (interface configuration) command [2-478](#)
- spanning-tree port-priority command [2-474](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-480](#)
- spanning-tree uplinkfast command [2-481](#)
- spanning-tree vlan command [2-483](#)
- speed command [2-486](#)
- srr-queue bandwidth limit command [2-488](#)
- srr-queue bandwidth shape command [2-490](#)
- srr-queue bandwidth share command [2-492](#)
- SSH, configuring version [2-146](#)
- static-access ports, configuring [2-497](#)
- statistics, Ethernet group [2-259](#)
- sticky learning, enabling [2-508](#)
- storm-control command [2-494](#)
- STP
 - BackboneFast [2-442](#)
 - counters, clearing [2-47](#)

STP (continued)

- debug messages, display
 - BackboneFast events [B-56](#)
 - MSTP [B-59](#)
 - optimized BPDUs handling [B-58](#)
 - spanning-tree activity [B-54](#)
 - switch shim [B-61](#)
 - transmitted and received BPDUs [B-57](#)
 - UplinkFast [B-63](#)
- detection of indirect link failures [2-442](#)
- EtherChannel misconfiguration [2-449](#)
- extended system ID [2-451](#)
- path cost [2-447](#)
- protocol modes [2-458](#)
- root port
 - accelerating choice of new [2-481](#)
 - loop guard [2-452](#)
 - preventing from becoming designated [2-452](#)
 - restricting which can be root [2-452](#)
 - root guard [2-452](#)
 - UplinkFast [2-481](#)
- root switch
 - affects of extended system ID [2-451, 2-484](#)
 - hello-time [2-483](#)
 - interval between BDPU messages [2-483](#)
 - interval between hello BPDU messages [2-483](#)
 - max-age [2-483](#)
 - port priority for selection of [2-474](#)
 - primary or secondary [2-483](#)
 - switch priority [2-483](#)
- state changes
 - blocking to forwarding state [2-478](#)
 - enabling BPDU filtering [2-443, 2-476](#)
 - enabling BPDU guard [2-445, 2-476](#)
 - enabling Port Fast [2-476, 2-478](#)
 - enabling timer to recover from error state [2-91](#)
 - forward-delay time [2-483](#)
 - length of listening and learning states [2-483](#)
 - shutting down Port Fast-enabled ports [2-476](#)

STP (continued)

- state information display [2-404](#)
- VLAN options [2-471, 2-483](#)
- Switched Port Analyzer
 - See SPAN
- switchport access command [2-497](#)
- switchport backup interface command [2-499](#)
- switchport block command [2-502](#)
- switchport host command [2-503](#)
- switchport mode command [2-504](#)
- switchport nonegotiate command [2-506](#)
- switchport port-security aging command [2-513](#)
- switchport port-security command [2-508](#)
- switchport priority extend command [2-515](#)
- switchport protected command [2-517](#)
- switchports, displaying [2-317](#)
- switchport trunk command [2-518](#)
- switchport voice vlan command [2-521](#)
- system message logging, save message to flash [2-156](#)
- system mtu command [2-523](#)

T

- tar files, creating, listing, and extracting [2-11](#)
- traceroute mac command [2-525](#)
- traceroute mac ip command [2-528](#)
- trunking, VLAN mode [2-504](#)
- trunk mode [2-504](#)
- trunk ports [2-504](#)
- trunks, to non-DTP device [2-505](#)
- trusted boundary for QoS [2-220](#)
- trusted port states for QoS [2-220](#)
- type (boot loader) command [A-23](#)

U

- UDLD
 - aggressive mode [2-532, 2-534](#)

UDLD (continued)

- debug messages, display [B-70](#)
- enable globally [2-532](#)
- enable per interface [2-534](#)
- error recovery timer [2-91](#)
- message timer [2-532](#)
- normal mode [2-532, 2-534](#)
- reset a shutdown interface [2-536](#)
- status [2-413](#)
- udld command [2-532](#)
- udld port command [2-534](#)
- udld reset command [2-536](#)
- unicast storm control [2-494](#)
- UniDirectional Link Detection
 - See UDLD
- unknown multicast traffic, preventing [2-502](#)
- unknown unicast traffic, preventing [2-502](#)
- unset (boot loader) command [A-24](#)
- upgrading
 - software images [2-8](#)
 - monitoring status of [2-273](#)
- upgrading information
 - See release notes
- UplinkFast, for STP [2-481](#)
- user EXEC mode [1-2, 1-3](#)

V

- version (boot loader) command [A-26](#)
- VLAN
 - enabling guest VLAN supplicant [2-60, 2-70](#)
- vlan (global configuration) command [2-537](#)
- vlan (VLAN configuration) command [2-542](#)
- vlan access-map command [2-548](#)
- VLAN access map configuration mode [2-548](#)
- VLAN access maps
 - actions [2-6](#)
 - displaying [2-422](#)
- VLAN-based QoS [2-222](#)

VLAN configuration

- rules [2-540, 2-544](#)
- saving [2-537, 2-546](#)

VLAN configuration mode

- commands
 - VLAN [2-542](#)
 - VTP [2-564](#)
- description [1-5](#)
- entering [2-550](#)

summary [1-2](#)vlan database command [2-550](#)vlan filter command [2-553](#)VLAN filters, displaying [2-423](#)VLAN ID range [2-537, 2-542](#)

VLAN maps

- applying [2-553](#)
- creating [2-548](#)
- defining [2-180](#)
- displaying [2-422](#)

VLAN Query Protocol

See VQP

VLANs

- adding [2-537](#)
- configuring [2-537, 2-542](#)
- debug messages, display
 - ISL [B-67](#)
 - VLAN IOS file system error tests [B-66](#)
 - VLAN manager activity [B-64](#)
 - VTP [B-68](#)
- displaying configurations [2-418](#)
- enabling guest VLAN supplicant [2-96](#)
- extended-range [2-537](#)
- MAC addresses
 - displaying [2-370](#)
 - number of [2-358](#)
- media types [2-539, 2-544](#)
- normal-range [2-537, 2-542](#)
- restarting [2-432](#)
- saving the configuration [2-537](#)

VLANs (continued)

- shutting down [2-432](#)
- SNMP traps for VTP [2-434, 2-437](#)
- suspending [2-432](#)
- variables [2-542](#)

VLAN Trunking Protocol

See VTP

VMPS

- configuring servers [2-558](#)
- displaying [2-424](#)
- error recovery timer [2-91](#)
- reconfirming dynamic VLAN assignments [2-555](#)

vmmps reconfirm (global configuration) command [2-556](#)

vmmps reconfirm (privileged EXEC) command [2-555](#)

vmmps retry command [2-557](#)

vmmps server command [2-558](#)

voice VLAN

- configuring [2-521](#)
- setting port priority [2-515](#)

VQP

- and dynamic-access ports [2-497](#)
- clearing client statistics [2-49](#)
- displaying information [2-424](#)
- per-server retry count [2-557](#)
- reconfirmation interval [2-556](#)
- reconfirming dynamic VLAN assignments [2-555](#)

VTP

- changing characteristics [2-560](#)
- clearing pruning counters [2-50](#)
- configuring
 - domain name [2-560, 2-564](#)
 - file name [2-560](#)
 - mode [2-560, 2-564](#)
 - password [2-560, 2-564](#)
- counters display fields [2-428](#)
- displaying information [2-427](#)
- enabling
 - pruning [2-560, 2-564](#)
 - Version 2 [2-560, 2-564](#)

VTP (continued)

- mode [2-560, 2-564](#)
- pruning [2-560, 2-564](#)
- saving the configuration [2-537, 2-546](#)
- statistics [2-427](#)
- status [2-427](#)
- status display fields [2-429](#)
- vtp (global configuration) command [2-560](#)
- vtp (VLAN configuration) command [2-564](#)

