



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-670](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-113](#)
 MAC, displaying [2-452](#)
access list, IPv6 [2-165](#)
access map configuration mode [2-223](#)
access mode [2-615](#)
access ports [2-615](#)
ACEs [2-58](#), [2-293](#)
ACLs
 deny [2-56](#)
 displaying [2-336](#)
 for non-IP protocols [2-203](#)
 IP [2-113](#)
 matching [2-223](#)
 on Layer 2 interfaces [2-113](#)
 permit [2-291](#)
action command [2-6](#)
address aliasing [2-274](#)
aggregate-port learner [2-279](#)
allowed VLANs [2-635](#)
apply command [2-670](#)
archive download-sw command [2-8](#)

archive tar command [2-11](#)
archive upload-sw command [2-14](#)
audience [xvii](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-82](#)
autonegotiation of duplex mode [2-92](#)
auto qos voip command [2-16](#)

B

BackboneFast, for STP [2-554](#)
backup interfaces
 displaying [2-389](#)
boot (boot loader) command [A-2](#)
boot bootlpr command [2-20](#)
boot config-file command [2-21](#)
boot enable-break command [2-22](#)
boot helper command [2-23](#)
boot helper-config file command [2-24](#)
booting
 Cisco IOS image [2-27](#)
 displaying environment variables [2-343](#)
 interrupting [2-22](#)
 manually [2-25](#)
boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)

boot loader (continued)

- helper image [2-23](#)
- directories
 - creating [A-15](#)
 - displaying a list of [A-7](#)
 - removing [A-19](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-13](#)
 - version [A-26](#)
- environment variables
 - described [A-20](#)
 - displaying settings [A-20](#)
 - location of [A-21](#)
 - setting [A-20](#)
 - unsetting [A-24](#)
- files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-16, A-23](#)
 - renaming [A-17](#)
- file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
- resetting the system [A-18](#)
- boot manual command [2-25](#)
- boot private-config-file command [2-26](#)
- boot system command [2-27](#)
- BPDUs filtering, for spanning tree [2-555, 2-588](#)
- BPDUs guard, for spanning tree [2-557, 2-588](#)
- break key detection [2-323](#)
- broadcast storm control [2-606](#)

C

- cat (boot loader) command [A-4](#)
- caution, description [xviii](#)

- CDP, enabling protocol tunneling for [2-183](#)
- channel-group command [2-28](#)
- channel-protocol command [2-31](#)
- Cisco SoftPhone
 - auto-QoS configuration [2-16](#)
 - trusting packets sent from [2-265](#)
- class command [2-32](#)
- class-map command [2-34](#)
- class maps
 - creating [2-34](#)
 - defining the match criteria [2-225](#)
 - displaying [2-347](#)
- class of service
 - See CoS
- clear dot1x command [2-36](#)
- clear eap sessions command [2-37](#)
- clear errdisable interface [2-38](#)
- clear ipc command [2-39](#)
- clear ip dhcp snooping database command [2-41](#)
- clear l2protocol-tunnel counters command [2-40](#)
- clear lacp command [2-43](#)
- clear mac address-table command [2-44, 2-45](#)
- clear pagp command [2-46](#)
- clear port-security command [2-47](#)
- clear spanning-tree counters command [2-49](#)
- clear spanning-tree detected-protocols command [2-50](#)
- clear vmpls statistics command [2-51](#)
- clear vtp counters command [2-52](#)
- clusters
 - SNMP trap [2-545](#)
- command modes defined [1-1](#)
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-21, 2-26](#)
- configuring multiple interfaces [2-109](#)

config-vlan mode

- commands [2-656](#)
- description [1-4](#)
- entering [2-655](#)
- summary [1-2](#)

conventions

- command [xvii](#)
- for examples [xviii](#)
- publication [xvii](#)
- text [xvii](#)

copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-235](#)
- assigning to Layer 2 protocol packets [2-186](#)
- overriding the incoming value [2-235](#)

CoS-to-DSCP map [2-239](#)

CPU ASIC statistics, displaying [2-348](#)

crashinfo files [2-102](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug interface command [B-11](#)

debug ip dhcp snooping command [B-9](#)

debug ip igmp filter command [B-12](#)

debug ip igmp max-groups command [B-13](#)

debug ip igmp snooping command [B-14](#)

debug ip verify source packet command [B-10](#)

debug lacp command [B-15](#)

debug mac-notification command [B-16](#)

debug matm command [B-17](#)

debug matm move update command [B-18](#)

debug monitor command [B-19](#)

debug mvrdbg command [B-20](#)

debug nvram command [B-21](#)

debug pagp command [B-22](#)

debug platform acl command [B-23](#)

debug platform backup interface command [B-24](#)

debug platform cli-redirection main command [B-25](#)

debug platform cpu-queues command [B-26](#)

debug platform dot1x command [B-28](#)

debug platform etherchannel command [B-29](#)

debug platform fallback-bridging command [B-30](#)

debug platform forw-tcam command [B-31](#)

debug platform ip arp inspection command [B-32](#)

debug platform ipc command [B-40](#)

debug platform ip dhcp command [B-33](#)

debug platform ip igmp snooping command [B-34](#)

debug platform ip multicast command [B-36](#)

debug platform ip unicast command [B-38](#)

debug platform led command [B-41](#)

debug platform matm command [B-42](#)

debug platform messaging application command [B-43](#)

debug platform phy command [B-44](#)

debug platform pm command [B-46](#)

debug platform port-asic command [B-48](#)

debug platform port-security command [B-49](#)

debug platform qos-acl-tcam command [B-50](#)

debug platform remote-commands command [B-51](#)

debug platform resource-manager command [B-52](#)

debug platform snmp command [B-53](#)

debug platform span command [B-54](#)

debug platform supervisor-asic command [B-55](#)

debug platform sw-bridge command [B-56](#)

debug platform tcam command [B-57](#)

debug platform udd command [B-60](#)

debug platform vlan command [B-61](#)

debug pm command [B-62](#)

debug port-security command [B-64](#)

debug qos-manager command [B-65](#)

debug spanning-tree backbonefast command [B-68](#)

debug spanning-tree bpdu command [B-69](#)

debug spanning-tree bpdu-opt command [B-70](#)

- debug spanning-tree command [B-66](#)
- debug spanning-tree mstp command [B-71](#)
- debug spanning-tree switch command [B-73](#)
- debug spanning-tree uplinkfast command [B-75](#)
- debug sw-vlan command [B-76](#)
- debug sw-vlan ifs command [B-78](#)
- debug sw-vlan notification command [B-79](#)
- debug sw-vlan vtp command [B-80](#)
- debug udd command [B-82](#)
- debug vqpc command [B-84](#)
- define interface-range command [2-53](#)
- delete (boot loader) command [A-6](#)
- delete command [2-55](#)
- deny command [2-56](#)
- detect mechanism, causes [2-93](#)
- device manager requirements [xviii](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-128](#)
 - enabling
 - on a VLAN [2-134](#)
 - option 82 [2-126, 2-128](#)
 - trust on an interface [2-132](#)
 - error recovery timer [2-99](#)
 - rate limiting [2-131](#)
- DHCP snooping binding database
 - binding file, configuring [2-124](#)
 - bindings
 - adding [2-122](#)
 - deleting [2-122](#)
 - displaying [2-404](#)
 - clearing database agent statistics [2-41](#)
 - database agent, configuring [2-124](#)
 - displaying
 - binding entries [2-404](#)
 - database agent status [2-406, 2-408](#)
 - renewing [2-317](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-55](#)
- documentation, related [xviii](#)
- document conventions [xvii](#)
- domain name, VTP [2-681, 2-685](#)
- dot1x auth-fail max-attempts [2-61](#)
- dot1x auth-fail vlan [2-63](#)
- dot1x command [2-59](#)
- dot1x control-direction command [2-65](#)
- dot1x critical global configuration command [2-67](#)
- dot1x critical interface configuration command [2-69](#)
- dot1x default command [2-71](#)
- dot1x fallback command [2-72](#)
- dot1x guest-vlan command [2-73](#)
- dot1x host-mode command [2-75](#)
- dot1x initialize command [2-76](#)
- dot1x mac-auth-bypass command [2-77](#)
- dot1x max-reauth-req command [2-79](#)
- dot1x max-req command [2-80](#)
- dot1x pae command [2-81](#)
- dot1x port-control command [2-82](#)
- dot1x re-authenticate command [2-84](#)
- dot1x reauthentication command [2-85](#)
- dot1x test eapol-capable command [2-86](#)
- dot1x test timeout command [2-87](#)
- dot1x timeout command [2-88](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-183](#)
- DSCP-to-CoS map [2-239](#)
- DSCP-to-DSCP-mutation map [2-239](#)
- DTP [2-616](#)
- DTP flap
 - error detection for [2-93](#)
 - error recovery timer [2-99](#)
- DTP negotiation [2-620](#)
- dual IPv4 and IPv6 templates [2-285](#)
- dual-purpose uplink ports
 - selecting the type [2-229](#)
- duplex command [2-91](#)
- dynamic-access ports
 - configuring [2-611](#)
 - restrictions [2-611](#)

dynamic ARP inspection

ARP ACLs

permit packets [2-283](#)error detection for [2-93](#)dynamic auto VLAN membership mode [2-615](#)dynamic desirable VLAN membership mode [2-615](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-80](#)response time before retransmitting [2-88](#)encapsulation methods [2-635](#)environment variables, displaying [2-343](#)errdisable detect cause command [2-93](#)errdisable detect cause small-frame comand [2-96](#)errdisable recovery cause small-frame [2-98](#)errdisable recovery command [2-99](#)error conditions, displaying [2-375](#)error disable detection [2-93](#)error-disabled interfaces, displaying [2-389](#)

EtherChannel

assigning Ethernet interface to channel group [2-28](#)creating port-channel logical interface [2-107](#)debug EtherChannel/PAgP, display [B-8](#)debug platform-specific events, display [B-29](#)displaying [2-379](#)

enabling Layer 2 protocol tunneling for

LACP [2-184](#)PAgP [2-184](#)UDLD [2-184](#)interface information, displaying [2-389](#)

LACP

clearing channel-group information [2-43](#)debug messages, display [B-15](#)**EtherChannel (continued)**displaying [2-442](#)modes [2-28](#)port priority for hot-standby ports [2-187](#)restricting a protocol [2-31](#)system priority [2-189](#)load-distribution methods [2-301](#)

PAgP

aggregate-port learner [2-279](#)clearing channel-group information [2-46](#)debug messages, display [B-22](#)displaying [2-497](#)error detection for [2-93](#)error recovery timer [2-99](#)learn method [2-279](#)modes [2-28](#)physical-port learner [2-279](#)priority of interface for transmitted traffic [2-281](#)Ethernet controller, internal register display [2-350](#)Ethernet statistics, collecting [2-319](#)examples, conventions for [xviii](#)exception crashinfo command [2-102](#)exit command [2-670](#)

extended-range VLANs

and allowed VLAN list [2-635](#)and pruning-eligible list [2-635](#)configuring [2-655](#)extended system ID for STP [2-563](#)

Ffallback profile command [2-103](#)

fallback profiles

displaying [2-382](#)file name, VTP [2-681](#)files, deleting [2-55](#)flash_init (boot loader) command [A-9](#)

Flex Links

displaying [2-389](#)

flowcontrol command [2-105](#)
 format (boot loader) command [A-10](#)
 forwarding packets, with ACL matches [2-6](#)
 forwarding results, display [C-6](#)
 frame forwarding information, displaying [C-6](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-336](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-299](#)
 host connection, port configuration [2-614](#)
 host ports, private VLANs [2-618](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-672](#)
 IEEE 802.1Q tunnel ports
 configuring [2-615](#)
 displaying [2-362](#)
 limitations [2-616](#)
 IEEE 802.1x
 and switchport modes [2-616](#)
 violation error recovery [2-99](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-62, 2-72, 2-104](#)
 IGMP filters
 applying [2-137](#)
 debug messages, display [B-12](#)
 IGMP groups, setting maximum [2-139](#)
 IGMP maximum groups, debugging [B-13](#)

IGMP profiles

creating [2-141](#)
 displaying [2-411](#)

IGMP snooping

adding ports as a static member of a group [2-157](#)
 displaying [2-412, 2-417, 2-419](#)
 enabling [2-143](#)
 enabling the configurable-leave timer [2-145](#)
 enabling the Immediate-Leave feature [2-154](#)
 flooding query count [2-151](#)
 interface topology change notification behavior [2-153](#)
 multicast table [2-415](#)
 querier [2-147](#)
 query solicitation [2-151](#)
 report suppression [2-149](#)
 switch topology change notification behavior [2-151](#)

images

See software images

Immediate-Leave feature, MVR [2-276](#)

Immediate-Leave processing

IPv6 [2-179](#)

immediate-leave processing [2-154](#)

initial configuration

See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-107](#)

interface range command [2-109](#)

interface-range macros [2-53](#)

interfaces

assigning Ethernet interface to channel group [2-28](#)
 configuring [2-91](#)
 configuring multiple [2-109](#)
 creating port-channel logical [2-107](#)
 debug messages, display [B-11](#)
 disabling [2-541](#)
 displaying the MAC address table [2-464](#)
 restarting [2-541](#)

interface speed, configuring [2-598](#)

- interface vlan command [2-111](#)
 - internal registers, displaying [2-350, 2-358](#)
 - Internet Group Management Protocol
 - See IGMP
 - invalid GBIC
 - error detection for [2-93](#)
 - error recovery timer [2-99](#)
 - ip access-group command [2-113](#)
 - ip address command [2-116](#)
 - IP addresses, setting [2-116](#)
 - IP address matching [2-223](#)
 - ip admission command [2-118](#)
 - ip admission name proxy http command [2-119](#)
 - IP DHCP snooping
 - See DHCP snooping
 - ip dhcp snooping binding command [2-122](#)
 - ip dhcp snooping command [2-121](#)
 - ip dhcp snooping database command [2-124](#)
 - ip dhcp snooping information option allow-untrusted command [2-128](#)
 - ip dhcp snooping information option command [2-126](#)
 - ip dhcp snooping information option format remote-id command [2-130](#)
 - ip dhcp snooping limit rate command [2-131](#)
 - ip dhcp snooping trust command [2-132](#)
 - ip dhcp snooping verify command [2-133](#)
 - ip dhcp snooping vlan command [2-134](#)
 - ip dhcp snooping vlan information option format-type circuit-id string command [2-135](#)
 - ip igmp filter command [2-137](#)
 - ip igmp max-groups command [2-139](#)
 - ip igmp profile command [2-141](#)
 - ip igmp snooping command [2-143](#)
 - ip igmp snooping last-member-query-interval command [2-145](#)
 - ip igmp snooping querier command [2-147](#)
 - ip igmp snooping report-suppression command [2-149](#)
 - ip igmp snooping tcn command [2-151](#)
 - ip igmp snooping tcn flood command [2-153](#)
 - ip igmp snooping vlan immediate-leave command [2-154](#)
 - ip igmp snooping vlan mrouter command [2-155](#)
 - ip igmp snooping vlan static command [2-157](#)
 - IP multicast addresses [2-273](#)
 - IP phones
 - auto-QoS configuration [2-16](#)
 - trusting packets sent from [2-265](#)
 - IP-precedence-to-DSCP map [2-239](#)
 - ip snap forwarding command [2-159](#)
 - ip source binding command [2-160](#)
 - IP source guard
 - disabling [2-164](#)
 - displaying
 - binding entries [2-421](#)
 - configuration [2-423](#)
 - dynamic binding entries only [2-404](#)
 - enabling [2-164](#)
 - static IP source bindings [2-160](#)
 - ip ssh command [2-162](#)
 - ipv6 access-list command [2-165](#)
 - ipv6 mld snooping command [2-167](#)
 - ipv6 mld snooping last-listener-query count command [2-169](#)
 - ipv6 mld snooping last-listener-query-interval command [2-171](#)
 - ipv6 mld snooping listener-message-suppression command [2-173](#)
 - ipv6 mld snooping robustness-variable command [2-175](#)
 - ipv6 mld snooping tcn command [2-177](#)
 - ipv6 mld snooping vlan command [2-179](#)
 - IPv6 SDM template [2-320](#)
 - ipv6 traffic-filter command [2-181](#)
 - ip verify source command [2-164](#)
-
- ## J
- jumbo frames
 - See MTU

L

l2protocol-tunnel command [2-183](#)
 l2protocol-tunnel cos command [2-186](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-187](#)
 lacp system-priority command [2-189](#)
 Layer 2 mode, enabling [2-609](#)
 Layer 2 protocol ports, displaying [2-439](#)
 Layer 2 protocol-tunnel
 error detection for [2-93](#)
 error recovery timer [2-99](#)
 Layer 2 protocol tunnel counters [2-40](#)
 Layer 2 protocol tunneling error recovery [2-184](#)
 Layer 2 traceroute
 IP addresses [2-646](#)
 MAC addresses [2-643](#)
 Layer 3 mode, enabling [2-609](#)
 line configuration mode [1-2, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-93](#)
 error recovery timer [2-99](#)
 link state group command [2-195](#)
 link state track command [2-197](#)
 load-distribution methods for EtherChannel [2-301](#)
 location (global configuration) command [2-191](#)
 location (interface configuration) command [2-193](#)
 logging event command [2-198](#)
 logging file command [2-199](#)
 logical interface [2-107](#)
 loopback error
 detection for [2-93](#)
 recovery timer [2-99](#)
 loop guard, for spanning tree [2-564, 2-568](#)

M

mac access-group command [2-201](#)
 MAC access-groups, displaying [2-452](#)
 MAC access list configuration mode [2-203](#)
 mac access-list extended command [2-203](#)
 MAC access lists [2-56](#)
 MAC addresses
 displaying
 aging time [2-458](#)
 all [2-456](#)
 dynamic [2-462](#)
 MAC address-table move updates [2-466](#)
 notification settings [2-468](#)
 number of addresses in a VLAN [2-460](#)
 per interface [2-464](#)
 per VLAN [2-472](#)
 static [2-470](#)
 static and dynamic entries [2-454](#)
 dynamic
 aging time [2-205](#)
 deleting [2-44](#)
 displaying [2-462](#)
 enabling MAC address notification [2-208](#)
 enabling MAC address-table move update [2-206](#)
 matching [2-223](#)
 static
 adding and removing [2-210](#)
 displaying [2-470](#)
 dropping on an interface [2-211](#)
 tables [2-456](#)
 mac address notification, debugging [B-16](#)
 mac address-table aging-time [2-201, 2-223](#)
 mac address-table aging-time command [2-205](#)
 mac address-table move update command [2-206](#)
 mac address-table notification command [2-208](#)
 mac address-table static command [2-210](#)
 mac address-table static drop command [2-211](#)
 macro apply command [2-213](#)

- macro description command [2-216](#)
- macro global command [2-217](#)
- macro global description command [2-220](#)
- macro name command [2-221](#)
- macros
 - adding a description [2-216](#)
 - adding a global description [2-220](#)
 - applying [2-217](#)
 - creating [2-221](#)
 - displaying [2-499](#)
 - interface range [2-53, 2-109](#)
 - specifying parameter values [2-217](#)
 - tracing [2-217](#)
- manual
 - audience [xvii](#)
 - purpose of [xvii](#)
- maps
 - QoS
 - defining [2-239](#)
 - displaying [2-482](#)
 - VLAN
 - creating [2-667](#)
 - defining [2-223](#)
 - displaying [2-531](#)
- match (access-map configuration) command [2-223](#)
- match (class-map configuration) command [2-225](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-227](#)
- MDL snooping
 - displaying [2-433](#)
- media-type command [2-229](#)
- memory (boot loader) command [A-13](#)
- mkdir (boot loader) command [A-15](#)
- MLD snooping
 - configuring [2-173, 2-175](#)
 - configuring queries [2-169, 2-171](#)
 - configuring topology change notification [2-177](#)
 - displaying [2-431, 2-435, 2-437](#)
- MLD snooping (continued)
 - enabling [2-167](#)
- MLD snooping on a VLAN
 - enabling [2-179](#)
- mls qos aggregate-policer command [2-233](#)
- mls qos command [2-231](#)
- mls qos cos command [2-235](#)
- mls qos dscp-mutation command [2-237](#)
- mls qos map command [2-239](#)
- mls qos queue-set output buffers command [2-243](#)
- mls qos queue-set output threshold command [2-245](#)
- mls qos rewrite ip dscp command [2-247](#)
- mls qos srr-queue input bandwidth command [2-249](#)
- mls qos srr-queue input buffers command [2-251](#)
- mls qos-srr-queue input cos-map command [2-253](#)
- mls qos srr-queue input dscp-map command [2-255](#)
- mls qos srr-queue input priority-queue command [2-257](#)
- mls qos srr-queue input threshold command [2-259](#)
- mls qos-srr-queue output cos-map command [2-261](#)
- mls qos srr-queue output dscp-map command [2-263](#)
- mls qos trust command [2-265](#)
- mls qos vlan-based command [2-267](#)
- mode, MVR [2-273](#)
- Mode button, and password recovery [2-323](#)
- modes, commands [1-1](#)
- monitor session command [2-268](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-512](#)
 - interoperability [2-50](#)
 - link type [2-566](#)
 - MST region
 - aborting changes [2-572](#)
 - applying changes [2-572](#)
 - configuration name [2-572](#)
 - configuration revision number [2-572](#)
 - current or pending display [2-572](#)
 - displaying [2-512](#)
 - MST configuration mode [2-572](#)

MSTP (continued)

- VLANs-to-instance mapping [2-572](#)
 - path cost [2-574](#)
 - protocol mode [2-570](#)
 - restart protocol migration process [2-50](#)
 - root port
 - loop guard [2-564](#)
 - preventing from becoming designated [2-564](#)
 - restricting which can be root [2-564](#)
 - root guard [2-564](#)
 - root switch
 - affects of extended system ID [2-563](#)
 - hello-time [2-577, 2-584](#)
 - interval between BPDU messages [2-578](#)
 - interval between hello BPDU messages [2-577, 2-584](#)
 - max-age [2-578](#)
 - maximum hop count before discarding BPDU [2-579](#)
 - port priority for selection of [2-580](#)
 - primary or secondary [2-584](#)
 - switch priority [2-583](#)
 - state changes
 - blocking to forwarding state [2-590](#)
 - enabling BPDU filtering [2-555, 2-588](#)
 - enabling BPDU guard [2-557, 2-588](#)
 - enabling Port Fast [2-588, 2-590](#)
 - forward-delay time [2-576](#)
 - length of listening and learning states [2-576](#)
 - rapid transition to forwarding [2-566](#)
 - shutting down Port Fast-enabled ports [2-588](#)
 - state information display [2-511](#)
- MTU**
- configuring size [2-640](#)
 - displaying global setting [2-519](#)
- Multicast Listener Discovery**
- See MLD
 - multicast group address, MVR [2-276](#)
 - multicast groups, MVR [2-274](#)

Multicast Listener Discovery

- See MLD
 - multicast router learning method [2-155](#)
 - multicast router ports
 - IPv6 [2-179](#)
 - multicast router ports, configuring [2-155](#)
 - multicast storm control [2-606](#)
 - multicast VLAN, MVR [2-273](#)
 - multicast VLAN registration
 - See MVR
 - multiple hosts on authorized port [2-75](#)
- Multiple Spanning Tree Protocol**
- See MSTP
- MVR**
- and address aliasing [2-274](#)
 - configuring [2-273](#)
 - configuring interfaces [2-276](#)
 - debug messages, display [B-20](#)
 - displaying [2-491](#)
 - displaying interface information [2-493](#)
 - members, displaying [2-495](#)
 - mvr (global configuration) command [2-273](#)
 - mvr (interface configuration) command [2-276](#)
 - mvr vlan group command [2-277](#)

N

- native VLANs [2-635](#)
- native VLAN tagging [2-672](#)
- nonegotiate
 - DTP messaging [2-620](#)
- nonegotiate, speed [2-598](#)
- non-IP protocols
 - denying [2-56](#)
 - forwarding [2-291](#)
- non-IP traffic access lists [2-203](#)
- non-IP traffic forwarding
 - denying [2-56](#)
 - permitting [2-291](#)

normal-range VLANs [2-655, 2-661](#)

note, description [xviii](#)

no vlan command [2-655, 2-665](#)

O

online diagnostics

displaying

configured boot-up coverage level [2-362](#)

current scheduled tasks [2-362](#)

event logs [2-362](#)

supported test suites [2-362](#)

test ID [2-362](#)

test results [2-362](#)

test statistics [2-362](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-279](#)

pagp port-priority command [2-281](#)

password, VTP [2-681, 2-685](#)

password-recovery mechanism, enabling and disabling [2-323](#)

permit (ARP access-list configuration) command [2-283](#)

permit (IPv6) command [2-285](#)

permit (MAC access-list configuration) command [2-291](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-279](#)

PID, displaying [2-401](#)

PIM-DVMRP, as multicast router learning method [2-155](#)

police aggregate command [2-296](#)

police command [2-294](#)

policed-DSCP map [2-239](#)

policy-map command [2-298](#)

policy maps

applying to an interface [2-326, 2-331](#)

policy maps (continued)

creating [2-298](#)

displaying [2-502](#)

hierarchical [2-299](#)

policers

displaying [2-475](#)

for a single class [2-294](#)

for multiple classes [2-233, 2-296](#)

policed-DSCP map [2-239](#)

traffic classification

defining the class [2-32](#)

defining trust states [2-648](#)

setting DSCP or IP precedence values [2-329](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-5](#)

enabling IEEE 802.1x

globally [2-59](#)

per interface [2-82](#)

guest VLAN [2-73](#)

host modes [2-75](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-76, 2-87](#)

MAC authentication bypass [2-77](#)

manual control of authorization state [2-82](#)

multiple hosts on authorized port [2-75](#)

PAE as authenticator [2-81](#)

periodic re-authentication

enabling [2-85](#)

time between attempts [2-88](#)

quiet period between failed authentication exchanges [2-88](#)

re-authenticating IEEE 802.1x-enabled ports [2-84](#)

resetting configurable IEEE 802.1x parameters [2-71](#)

switch-to-authentication server retransmission time [2-88](#)

switch-to-client frame-retransmission number [2-79 to 2-80](#)

policy maps (continued)

- switch-to-client retransmission time [2-88](#)
- test for IEEE 802.1x readiness [2-86](#)
- port-channel load-balance command [2-301](#)
- Port Fast, for spanning tree [2-590](#)
- port ranges, defining [2-53](#)
- ports, debugging [B-62](#)
- ports, protected [2-633](#)
- port security
 - aging [2-627](#)
 - debug messages, display [B-64](#)
 - enabling [2-622](#)
 - violation error recovery [2-99](#)
- port trust states for QoS [2-265](#)
- port types, MVR [2-276](#)
- priority-queue command [2-303](#)
- private-vlan command [2-305](#)
- private-vlan mapping command [2-308](#)
- private VLANs
 - association [2-631](#)
 - configuring [2-305](#)
 - configuring ports [2-618](#)
 - displaying [2-525](#)
 - host ports [2-618](#)
 - mapping
 - configuring [2-631](#)
 - displaying [2-389](#)
 - promiscuous ports [2-618](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-401](#)
- promiscuous ports, private VLANs [2-618](#)
- protected ports, displaying [2-395](#)
- pruning
 - VLANs [2-635](#)
 - VTP
 - displaying interface information [2-389](#)
 - enabling [2-681, 2-685](#)
- pruning-eligible VLAN list [2-637](#)
- PVST+

See STP

Q**QoS**

- auto-QoS
 - configuring [2-16](#)
 - debug messages, display [B-2](#)
 - displaying [2-340](#)
- class maps
 - creating [2-34](#)
 - defining the match criteria [2-225](#)
 - displaying [2-347](#)
- defining the CoS value for an incoming packet [2-235](#)
- displaying configuration information [2-340, 2-474](#)
- DSCP transparency [2-247](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-237](#)
 - defining DSCP-to-DSCP-mutation map [2-239](#)
- egress queues
 - allocating buffers [2-243](#)
 - defining the CoS output queue threshold map [2-261](#)
 - defining the DSCP output queue threshold map [2-263](#)
 - displaying buffer allocations [2-478](#)
 - displaying CoS output queue threshold map [2-482](#)
 - displaying DSCP output queue threshold map [2-482](#)
 - displaying queueing strategy [2-478](#)
 - displaying queue-set settings [2-485](#)
 - enabling bandwidth shaping and scheduling [2-602](#)
 - enabling bandwidth sharing and scheduling [2-604](#)
 - limiting the maximum output on a port [2-600](#)
 - mapping a port to a queue-set [2-310](#)
 - mapping CoS values to a queue and threshold [2-261](#)

QoS (continued)

- mapping DSCP values to a queue and threshold [2-263](#)
- setting maximum and reserved memory allocations [2-245](#)
- setting WTD thresholds [2-245](#)
- enabling [2-231](#)
- ingress queues
 - allocating buffers [2-251](#)
 - assigning SRR scheduling weights [2-249](#)
 - defining the CoS input queue threshold map [2-253](#)
 - defining the DSCP input queue threshold map [2-255](#)
 - displaying buffer allocations [2-478](#)
 - displaying CoS input queue threshold map [2-482](#)
 - displaying DSCP input queue threshold map [2-482](#)
 - displaying queueing strategy [2-478](#)
 - displaying settings for [2-476](#)
 - enabling the priority queue [2-257](#)
 - mapping CoS values to a queue and threshold [2-253](#)
 - mapping DSCP values to a queue and threshold [2-255](#)
 - setting WTD thresholds [2-259](#)
- maps
 - defining [2-239, 2-253, 2-255, 2-261, 2-263](#)
 - displaying [2-482](#)
- policy maps
 - applying an aggregate policer [2-296](#)
 - applying to an interface [2-326, 2-331](#)
 - creating [2-298](#)
 - defining policers [2-233, 2-294](#)
 - displaying policers [2-475](#)
 - displaying policy maps [2-502](#)
 - hierarchical [2-299](#)
 - policed-DSCP map [2-239](#)
 - setting DSCP or IP precedence values [2-329](#)
 - traffic classifications [2-32](#)
 - trust states [2-648](#)

QoS (continued)

- port trust states [2-265](#)
- queues, enabling the expedite [2-303](#)
- statistics
 - in-profile and out-of-profile packets [2-478](#)
 - packets enqueued or dropped [2-478](#)
 - sent and received CoS values [2-478](#)
 - sent and received DSCP values [2-478](#)
- trusted boundary for IP phones [2-265](#)
- VLAN-based [2-267](#)
- quality of service
 - See QoS
- querytime, MVR [2-273](#)
- queue-set command [2-310](#)

R

- radius-server dead-criteria command [2-311](#)
- radius-server host command [2-313](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- re-authenticating IEEE 802.1x-enabled ports [2-84](#)
- re-authentication
 - periodic [2-85](#)
 - time between attempts [2-88](#)
- receiver ports, MVR [2-276](#)
- receiving flow-control packets [2-105](#)
- recovery mechanism
 - causes [2-99](#)
 - display [2-38, 2-345, 2-373, 2-377](#)
 - timer interval [2-100](#)
- remote-span command [2-315](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-317](#)

requirements

- device manager [xviii](#)

- reset (boot loader) command [A-18](#)

- reset command [2-670](#)

- resource templates, displaying [2-507](#)

restricted VLAN

- See dot1x auth-fail vlan

- rmdir (boot loader) command [A-19](#)

- rmon collection stats command [2-319](#)

- root guard, for spanning tree [2-564](#)

routed ports

- IP addresses on [2-117](#)

- number supported [2-117](#)

RSPAN

- configuring [2-268](#)

- displaying [2-488](#)

- filter RSPAN traffic [2-268](#)

- remote-span command [2-315](#)

sessions

- add interfaces to [2-268](#)

- displaying [2-488](#)

- start new [2-268](#)

S

- sdm prefer command [2-320](#)

SDM templates

- allowed resources [2-321](#)

- displaying [2-507](#)

- dual IPv4 and IPv6 [2-320](#)

- secure ports, limitations [2-624](#)

- sending flow-control packets [2-105](#)

- service password-recovery command [2-323](#)

- service-policy command [2-326](#)

- set (boot loader) command [A-20](#)

- set command [2-329](#)

- setup command [2-331](#)

- setup express command [2-334](#)

- show access-lists command [2-336](#)

- show archive status command [2-339](#)

- show auto qos command [2-340](#)

- show boot command [2-343](#)

- show cable-diagnostics tdr command [2-345](#)

- show changes command [2-670](#)

- show class-map command [2-347](#)

- show controllers cpu-interface command [2-348](#)

- show controllers ethernet-controller command [2-350](#)

- show controllers team command [2-358](#)

- show controller utilization command [2-360](#)

- show current command [2-670](#)

- show dot1q-tunnel command [2-362](#)

- show dot1x command [2-363](#)

- show dtp [2-367](#)

- show eap command [2-369](#)

- show env command [2-372](#)

- show errdisable detect command [2-373](#)

- show errdisable flap-values command [2-375](#)

- show errdisable recovery command [2-377](#)

- show etherchannel command [2-379](#)

- show fallback profile command [2-382](#)

- show flowcontrol command [2-384](#)

- show idprom command [2-386](#)

- show interfaces command [2-389](#)

- show interfaces counters command [2-398](#)

- show inventory command [2-401](#)

- show ipc command [2-425](#)

- show ip dhcp snooping binding command [2-404](#)

- show ip dhcp snooping command [2-403](#)

- show ip dhcp snooping database command [2-406, 2-408](#)

- show ip igmp profile command [2-411](#)

- show ip igmp snooping address command [2-433](#)

- show ip igmp snooping command [2-412, 2-431](#)

- show ip igmp snooping groups command [2-415](#)

- show ip igmp snooping mrouter command [2-417, 2-435](#)

- show ip igmp snooping querier command [2-419, 2-437](#)

- show ip source binding command [2-421](#)

- show ipv6 access-list command [2-429](#)

- show ip verify source command [2-423](#)

- show l2protocol-tunnel command [2-439](#)
- show lacp command [2-442](#)
- show link state group command [2-448, 2-450](#)
- show location [2-446](#)
- show mac access-group command [2-452](#)
- show mac address-table address command [2-456](#)
- show mac address-table aging time command [2-458](#)
- show mac address-table command [2-454](#)
- show mac address-table count command [2-460](#)
- show mac address-table dynamic command [2-462](#)
- show mac address-table interface command [2-464](#)
- show mac address-table move update command [2-466](#)
- show mac address-table notification command [2-45, 2-468, B-18](#)
- show mac address-table static command [2-470](#)
- show mac address-table vlan command [2-472](#)
- show mls qos aggregate-policer command [2-475](#)
- show mls qos command [2-474](#)
- show mls qos input-queue command [2-476](#)
- show mls qos interface command [2-478](#)
- show mls qos maps command [2-482](#)
- show mls qos queue-set command [2-485](#)
- show mls qos vlan command [2-487](#)
- show monitor command [2-488](#)
- show mvr command [2-491](#)
- show mvr interface command [2-493](#)
- show mvr members command [2-495](#)
- show pagp command [2-497](#)
- show parser macro command [2-499](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform etherchannel command [C-5](#)
- show platform forward command [C-6](#)
- show platform igmp snooping command [C-8](#)
- show platform ipc trace command [C-15](#)
- show platform ip multicast command [C-10](#)
- show platform ip unicast command [C-11](#)
- show platform ipv6 unicast command [C-16](#)
- show platform layer4op command [C-18](#)
- show platform mac-address-table command [C-19](#)
- show platform messaging command [C-20](#)
- show platform monitor command [C-21](#)
- show platform mvr table command [C-22](#)
- show platform pm command [C-23](#)
- show platform port-asic command [C-24](#)
- show platform port-security command [C-30](#)
- show platform qos command [C-31](#)
- show platform resource-manager command [C-32](#)
- show platform snmp counters command [C-34](#)
- show platform spanning-tree command [C-35](#)
- show platform stp-instance command [C-36](#)
- show platform team command [C-37](#)
- show platform vlan command [C-40](#)
- show policy-map command [2-502](#)
- show port security command [2-504](#)
- show proposed command [2-670](#)
- show sdm prefer command [2-507](#)
- show setup express command [2-510](#)
- show spanning-tree command [2-511](#)
- show storm-control command [2-517](#)
- show system mtu command [2-519](#)
- show trust command [2-648](#)
- show udd command [2-520](#)
- show version command [2-523](#)
- show vlan access-map command [2-531](#)
- show vlan command [2-525](#)
- show vlan command, fields [2-527](#)
- show vlan filter command [2-532](#)
- show vmps command [2-533](#)
- show vtp command [2-536](#)
- shutdown command [2-541](#)
- shutdown threshold, Layer 2 protocol tunneling [2-183](#)
- shutdown vlan command [2-542](#)
- small violation-rate command [2-543](#)
- Smartports macros
 - See macros
 - SNMP host, specifying [2-548](#)

SNMP informs, enabling the sending of [2-545](#)

snmp-server enable traps command [2-545](#)

snmp-server host command [2-548](#)

snmp trap mac-notification command [2-552](#)

SNMP traps

enabling MAC address notification trap [2-552](#)

enabling the MAC address notification feature [2-208](#)

enabling the sending of [2-545](#)

SoftPhone

See Cisco SoftPhone

software images

deleting [2-55](#)

downloading [2-8](#)

upgrading [2-8](#)

uploading [2-14](#)

software version, displaying [2-523](#)

source ports, MVR [2-276](#)

SPAN

configuring [2-268](#)

debug messages, display [B-19](#)

displaying [2-488](#)

filter SPAN traffic [2-268](#)

sessions

add interfaces to [2-268](#)

displaying [2-488](#)

start new [2-268](#)

spanning [2-592](#)

spanning-tree backbonefast command [2-554](#)

spanning-tree bpdupfilter command [2-555](#)

spanning-tree bpduguard command [2-557](#)

spanning-tree cost command [2-559](#)

spanning-tree etherchannel command [2-561](#)

spanning-tree extend system-id command [2-563](#)

spanning-tree guard command [2-564](#)

spanning-tree link-type command [2-566](#)

spanning-tree loopguard default command [2-568](#)

spanning-tree mode command [2-570](#)

spanning-tree mst configuration command [2-572](#)

spanning-tree mst cost command [2-574](#)

spanning-tree mst forward-time command [2-576](#)

spanning-tree mst hello-time command [2-577](#)

spanning-tree mst max-age command [2-578](#)

spanning-tree mst max-hops command [2-579](#)

spanning-tree mst port-priority command [2-580](#)

spanning-tree mst pre-standard command [2-582](#)

spanning-tree mst priority command [2-583](#)

spanning-tree mst root command [2-584](#)

spanning-tree portfast (global configuration) command [2-588](#)

spanning-tree portfast (interface configuration) command [2-590](#)

spanning-tree port-priority command [2-586](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [2-592](#)

spanning-tree uplinkfast command [2-593](#)

spanning-tree vlan command [2-595](#)

speed command [2-598](#)

srr-queue bandwidth limit command [2-600](#)

srr-queue bandwidth shape command [2-602](#)

srr-queue bandwidth share command [2-604](#)

SSH, configuring version [2-162](#)

static-access ports, configuring [2-611](#)

statistics, Ethernet group [2-319](#)

sticky learning, enabling [2-622](#)

storm-control command [2-606](#)

STP

BackboneFast [2-554](#)

counters, clearing [2-49](#)

debug messages, display

BackboneFast events [B-68](#)

MSTP [B-71](#)

optimized BPDUs handling [B-70](#)

spanning-tree activity [B-66](#)

switch shim [B-73](#)

transmitted and received BPDUs [B-69](#)

UplinkFast [B-75](#)

detection of indirect link failures [2-554](#)

STP (continued)

- enabling protocol tunneling for [2-183](#)
 - EtherChannel misconfiguration [2-561](#)
 - extended system ID [2-563](#)
 - path cost [2-559](#)
 - protocol modes [2-570](#)
 - root port
 - accelerating choice of new [2-593](#)
 - loop guard [2-564](#)
 - preventing from becoming designated [2-564](#)
 - restricting which can be root [2-564](#)
 - root guard [2-564](#)
 - UplinkFast [2-593](#)
 - root switch
 - affects of extended system ID [2-563, 2-596](#)
 - hello-time [2-595](#)
 - interval between BPDU messages [2-595](#)
 - interval between hello BPDU messages [2-595](#)
 - max-age [2-595](#)
 - port priority for selection of [2-586](#)
 - primary or secondary [2-595](#)
 - switch priority [2-595](#)
 - state changes
 - blocking to forwarding state [2-590](#)
 - enabling BPDU filtering [2-555, 2-588](#)
 - enabling BPDU guard [2-557, 2-588](#)
 - enabling Port Fast [2-588, 2-590](#)
 - enabling timer to recover from error state [2-99](#)
 - forward-delay time [2-595](#)
 - length of listening and learning states [2-595](#)
 - shutting down Port Fast-enabled ports [2-588](#)
 - state information display [2-511](#)
 - VLAN options [2-583, 2-595](#)
- SVIs, creating [2-111](#)
- Switched Port Analyzer
- See SPAN
- switching characteristics
- modifying [2-609](#)
 - returning to interfaces [2-609](#)
 - switchport access command [2-611](#)
 - switchport block command [2-613](#)
 - switchport command [2-609](#)
 - switchport host command [2-614](#)
 - switchport mode command [2-615](#)
 - switchport mode private-vlan command [2-618](#)
 - switchport nonegotiate command [2-620](#)
 - switchport port-security aging command [2-627](#)
 - switchport port-security command [2-622](#)
 - switchport priority extend command [2-629](#)
 - switchport private-vlan command [2-631](#)
 - switchport protected command [2-633](#)
 - switchports, displaying [2-389](#)
 - switchport trunk command [2-635](#)
 - switchport voice vlan command [2-638](#)
 - system message logging, save message to flash [2-199](#)
 - system mtu command [2-640](#)
 - system resource templates [2-320](#)

T

- tar files, creating, listing, and extracting [2-11](#)
- TDR, running [2-642](#)
- templates, system resources [2-320](#)
- test cable-diagnostics tdr command [2-642](#)
- traceroute mac command [2-643](#)
- traceroute mac ip command [2-646](#)
- trunking, VLAN mode [2-615](#)
- trunk mode [2-615](#)
- trunk ports [2-615](#)
- trunks, to non-DTP device [2-616](#)
- trusted boundary for QoS [2-265](#)
- trusted port states for QoS [2-265](#)
- tunnel ports, Layer 2 protocol, displaying [2-439](#)
- type (boot loader) command [A-23](#)

U

UDLD

- aggressive mode [2-650, 2-652](#)
- debug messages, display [B-82](#)
- enable globally [2-650](#)
- enable per interface [2-652](#)
- error recovery timer [2-99](#)
- message timer [2-650](#)
- normal mode [2-650, 2-652](#)
- reset a shutdown interface [2-654](#)
- status [2-520](#)

udld command [2-650](#)

udld port command [2-652](#)

udld reset command [2-654](#)

unicast storm control [2-606](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-613](#)

unknown unicast traffic, preventing [2-613](#)

unset (boot loader) command [A-24](#)

upgrading

- software images [2-8](#)
- monitoring status of [2-339](#)

upgrading information

See release notes

UplinkFast, for STP [2-593](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)

VLAN

enabling guest VLAN supplicant [2-62, 2-72](#)

vlan (global configuration) command [2-655](#)

vlan (VLAN configuration) command [2-661](#)

vlan access-map command [2-667](#)

VLAN access map configuration mode [2-667](#)

VLAN access maps

- actions [2-6](#)
- displaying [2-531](#)

VLAN-based QoS [2-267](#)

VLAN configuration

- rules [2-658, 2-663](#)
- saving [2-655, 2-665](#)

VLAN configuration mode

- commands
 - VLAN [2-661](#)
 - VTP [2-685](#)

description [1-5](#)

entering [2-669](#)

summary [1-2](#)

vlan database command [2-669](#)

vlan dot1q tag native command [2-672](#)

vlan filter command [2-674](#)

VLAN filters, displaying [2-532](#)

VLAN ID range [2-655, 2-661](#)

VLAN maps

- applying [2-674](#)
- creating [2-667](#)
- defining [2-223](#)
- displaying [2-531](#)

VLAN Query Protocol

See VQP

VLANs

- adding [2-655](#)
- configuring [2-655, 2-661](#)
- debug messages, display
 - ISL [B-79](#)
 - VLAN IOS file system error tests [B-78](#)
 - VLAN manager activity [B-76](#)
 - VTP [B-80](#)
- displaying configurations [2-525](#)
- enabling guest VLAN supplicant [2-104](#)
- extended-range [2-655](#)
- MAC addresses
 - displaying [2-472](#)

VLANs (continued)

- number of [2-460](#)
- media types [2-658, 2-663](#)
- normal-range [2-655, 2-661](#)
- private [2-618](#)
 - configuring [2-305](#)
 - displaying [2-525](#)
- See also private VLANs
- restarting [2-542](#)
- saving the configuration [2-655](#)
- shutting down [2-542](#)
- SNMP traps for VTP [2-546, 2-549](#)
- suspending [2-542](#)
- variables [2-661](#)

VLAN Trunking Protocol

See VTP

VMPS

- configuring servers [2-679](#)
- displaying [2-533](#)
- error recovery timer [2-100](#)
- reconfirming dynamic VLAN assignments [2-676](#)
- vmmps reconfirm (global configuration) command [2-677](#)
- vmmps reconfirm (privileged EXEC) command [2-676](#)
- vmmps retry command [2-678](#)
- vmmps server command [2-679](#)
- voice VLAN
 - configuring [2-638](#)
 - setting port priority [2-629](#)

VQP

- and dynamic-access ports [2-611](#)
- clearing client statistics [2-51](#)
- displaying information [2-533](#)
- per-server retry count [2-678](#)
- reconfirmation interval [2-677](#)
- reconfirming dynamic VLAN assignments [2-676](#)

VTP

- changing characteristics [2-681](#)
- clearing pruning counters [2-52](#)
- configuring

VTP (continued)

- domain name [2-681, 2-685](#)
- file name [2-681](#)
- mode [2-681, 2-685](#)
- password [2-681, 2-685](#)
- counters display fields [2-537](#)
- displaying information [2-536](#)
- enabling
 - pruning [2-681, 2-685](#)
 - tunneling for [2-183](#)
- Version 2 [2-681, 2-685](#)
- mode [2-681, 2-685](#)
- pruning [2-681, 2-685](#)
- saving the configuration [2-655, 2-665](#)
- statistics [2-536](#)
- status [2-536](#)
- status display fields [2-538](#)
- vtp (global configuration) command [2-681](#)
- vtp (VLAN configuration) command [2-685](#)

X

- XENPAK module serial EEPROM information [2-386](#)

