



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-766](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-144](#)
 MAC, displaying [2-529](#)
access list, IPv6 [2-209](#)
access map configuration mode [2-276](#)
access mode [2-708](#)
access ports [2-708](#)
ACEs [2-83](#), [2-344](#)
ACLs
 deny [2-81](#)
 displaying [2-392](#)
 for non-IP protocols [2-254](#)
 IP [2-144](#)
 matching [2-276](#)
 on Layer 2 interfaces [2-144](#)
 permit [2-342](#)
action command [2-6](#)
aggregate-port learner [2-331](#)
allowed VLANs [2-728](#)
apply command [2-766](#)
archive copy-sw command [2-8](#)
archive download-sw command [2-11](#)

archive tar command [2-15](#)
archive upload-sw command [2-18](#)
arp (boot loader) command [A-2](#)
arp access-list command [2-20](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-114](#)
autonegotiation of duplex mode [2-122](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-633](#)
backup interfaces
 configuring [2-703](#)
 displaying [2-454](#)
boot (boot loader) command [A-3](#)
boot auto-copy-sw command [2-26](#)
boot auto-download-sw command [2-27](#)
boot config-file command [2-29](#)
boot enable-break command [2-30](#)
boot helper command [2-31](#)
boot helper-config file command [2-32](#)
booting
 Cisco IOS image [2-35](#)
 displaying environment variables [2-401](#)
 interrupting [2-30](#)
 manually [2-33](#)

boot loader

accessing [A-1](#)

booting

Cisco IOS image [A-3](#)helper image [2-31](#)

directories

creating [A-19](#)displaying a list of [A-8](#)removing [A-23](#)

displaying

available commands [A-13](#)memory heap utilization [A-14](#)version [A-30](#)

environment variables

described [A-24](#)displaying settings [A-24](#)location of [A-25](#)setting [A-24](#)unsetting [A-28](#)

files

copying [A-6](#)deleting [A-7](#)displaying a list of [A-8](#)displaying the contents of [A-5, A-20, A-27](#)renaming [A-21](#)

file system

formatting [A-11](#)initializing flash [A-10](#)running a consistency check [A-12](#)prompt [A-1](#)resetting the system [A-22](#)boot manual command [2-33](#)boot private-config-file command [2-34](#)boot system command [2-35](#)BPDU filtering, for spanning tree [2-634, 2-668](#)BPDU guard, for spanning tree [2-636, 2-668](#)broadcast storm control [2-689](#)**C**cat (boot loader) command [A-5](#)CDP, enabling protocol tunneling for [2-235](#)channel-group command [2-37](#)channel-protocol command [2-41](#)

Cisco SoftPhone

auto-QoS configuration [2-22](#)trusting packets sent from [2-317](#)class command [2-42](#)class-map command [2-44](#)

class maps

creating [2-44](#)defining the match criteria [2-278](#)displaying [2-406](#)

class of service

See CoS

clear dot1x command [2-46](#)clear eap command [2-47](#)clear errdisable interface [2-48](#)clear ip arp inspection log command [2-49](#)clear ip arp inspection statistics command [2-50](#)clear ipc command [2-55](#)clear ip dhcp snooping database command [2-51, 2-53](#)clear ipv6 dhcp conflict command [2-56](#)clear l2protocol-tunnel counters command [2-57](#)clear lacp command [2-58](#)clear logging command [2-59](#)clear mac address-table command [2-60, 2-61](#)clear pagp command [2-62](#)clear port-security command [2-63](#)clear spanning-tree counters command [2-65](#)clear spanning-tree detected-protocols command [2-66](#)clear vmps statistics command [2-67](#)clear vtp counters command [2-68](#)command modes defined [1-2](#)

configuration files
 password recovery disable considerations [A-1](#)
 specifying the name [2-29, 2-34](#)

configuring multiple interfaces [2-140](#)

config-vlan mode
 commands [2-752](#)
 description [1-5](#)
 entering [2-751](#)
 summary [1-2](#)

copy (boot loader) command [A-6](#)

copy logging onboard command [2-69](#)

CoS
 assigning default value to incoming packets [2-287](#)
 assigning to Layer 2 protocol packets [2-238](#)
 overriding the incoming value [2-287](#)

CoS-to-DSCP map [2-291](#)

CPU ASIC statistics, displaying [2-407](#)

crashinfo files [2-131](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug fastethernet command [B-9](#)

debug interface command [B-12](#)

debug ip dhcp snooping command [B-10](#)

debug ip igmp filter command [B-13](#)

debug ip igmp max-groups command [B-14](#)

debug ip igmp snooping command [B-15](#)

debug ip verify source packet command [B-11](#)

debug lacp command [B-16](#)

debug mac-notification command [B-17](#)

debug matm command [B-18](#)

debug matm move update command [B-19](#)

debug monitor command [B-20](#)

debug mvrdbg command [B-21](#)

debug nvram command [B-22](#)

debug pagp command [B-23](#)

debug platform acl command [B-24](#)

debug platform backup interface command [B-26](#)

debug platform cli-redirection main command [B-27](#)

debug platform configuration command [B-28](#)

debug platform cpu-queues command [B-29](#)

debug platform device-manager command [B-31](#)

debug platform dot1x command [B-32](#)

debug platform etherchannel command [B-33](#)

debug platform fallback-bridging command [B-34](#)

debug platform forw-tcam command [B-35](#)

debug platform ip arp inspection command [B-36](#)

debug platform ipc command [B-45](#)

debug platform ip dhcp command [B-37](#)

debug platform ip igmp snooping command [B-38](#)

debug platform ip multicast command [B-40](#)

debug platform ip unicast command [B-42](#)

debug platform ip wccp command [B-44](#)

debug platform led command [B-46](#)

debug platform matm command [B-47](#)

debug platform messaging application command [B-48](#)

debug platform phy command [B-50](#)

debug platform pm command [B-52](#)

debug platform port-asic command [B-54](#)

debug platform port-security command [B-55](#)

debug platform qos-acl-tcam command [B-56](#)

debug platform remote-commands command [B-57](#)

debug platform resource-manager command [B-58](#)

debug platform snmp command [B-59](#)

debug platform span command [B-60](#)

debug platform stack-manager command [B-61](#)

debug platform supervisor-asic command [B-62](#)

debug platform sw-bridge command [B-63](#)

debug platform tcam command [B-64](#)

debug platform udd command [B-67](#)

debug platform vlan command [B-68](#)

debug pm command [B-69](#)

- debug port-security command [B-71](#)
- debug qos-manager command [B-72](#)
- debug spanning-tree backbonefast command [B-75](#)
- debug spanning-tree bpdu command [B-76](#)
- debug spanning-tree bpdu-opt command [B-77](#)
- debug spanning-tree command [B-73](#)
- debug spanning-tree mstp command [B-78](#)
- debug spanning-tree switch command [B-80](#)
- debug spanning-tree uplinkfast command [B-82](#)
- debug sw-vlan command [B-83](#)
- debug sw-vlan ifs command [B-85](#)
- debug sw-vlan notification command [B-86](#)
- debug sw-vlan vtp command [B-88](#)
- debug udd command [B-90](#)
- debug vqpc command [B-92](#)
- define interface-range command [2-71](#)
- delete (boot loader) command [A-7](#)
- delete command [2-73](#)
- deny (ARP access-list configuration) command [2-74](#)
- deny (IPv6) command [2-76](#)
- deny command [2-81](#)
- detect mechanism, causes [2-124](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-172](#)
 - enabling
 - on a VLAN [2-178](#)
 - option 82 [2-170, 2-172](#)
 - trust on an interface [2-176](#)
 - error recovery timer [2-128](#)
 - rate limiting [2-175](#)
- DHCP snooping binding database
 - binding file, configuring [2-168](#)
 - bindings
 - adding [2-166](#)
 - deleting [2-166](#)
 - displaying [2-475](#)
 - clearing database agent statistics [2-51, 2-53](#)
 - database agent, configuring [2-168](#)
- DHCP snooping binding database (continued)
 - displaying
 - binding entries [2-475](#)
 - database agent status [2-477, 2-479](#)
 - renewing [2-373](#)
- dir (boot loader) command [A-8](#)
- directories, deleting [2-73](#)
- domain name, VTP [2-777, 2-781](#)
- dot1x auth-fail max-attempts [2-93](#)
- dot1x auth-fail vlan [2-95](#)
- dot1x command [2-91](#)
- dot1x control-direction command [2-97](#)
- dot1x critical global configuration command [2-99](#)
- dot1x critical interface configuration command [2-101](#)
- dot1x default command [2-103](#)
- dot1x fallback command [2-104](#)
- dot1x guest-vlan command [2-105](#)
- dot1x host-mode command [2-107](#)
- dot1x initialize command [2-108](#)
- dot1x mac-auth-bypass command [2-109](#)
- dot1x max-reauth-req command [2-111](#)
- dot1x max-req command [2-112](#)
- dot1x pae command [2-113](#)
- dot1x port-control command [2-114](#)
- dot1x re-authenticate command [2-116](#)
- dot1x reauthentication command [2-117](#)
- dot1x timeout command [2-118](#)
- dot1x violation-mode command [2-120](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-235](#)
- DSCP-to-CoS map [2-291](#)
- DSCP-to-DSCP-mutation map [2-291](#)
- DTP [2-709](#)
- DTP flap
 - error detection for [2-124](#)
 - error recovery timer [2-128](#)
- DTP negotiation [2-713](#)
- dual IPv4 and IPv6 templates [2-337](#)
- duplex command [2-122](#)

- dynamic-access ports
 - configuring [2-699](#)
 - restrictions [2-700](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-152](#)
 - define [2-20](#)
 - deny packets [2-74](#)
 - display [2-396](#)
 - permit packets [2-335](#)
 - clear
 - log buffer [2-49](#)
 - statistics [2-50](#)
 - display
 - ARP ACLs [2-396](#)
 - configuration and operating state [2-470](#)
 - log buffer [2-470](#)
 - statistics [2-470](#)
 - trust state and rate limit [2-470](#)
 - enable per VLAN [2-162](#)
 - error detection for [2-124](#)
 - error recovery timer [2-128](#)
 - log buffer
 - clear [2-49](#)
 - configure [2-156](#)
 - display [2-470](#)
 - rate-limit incoming ARP packets [2-154](#)
 - statistics
 - clear [2-50](#)
 - display [2-470](#)
 - trusted interface state [2-158](#)
 - type of packet logged [2-163](#)
 - validation checks [2-160](#)
- dynamic auto VLAN membership mode [2-708](#)
- dynamic desirable VLAN membership mode [2-708](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-112](#)
 - response time before retransmitting [2-118](#)
- encapsulation methods [2-728](#)
- environment variables, displaying [2-401](#)
- errdisable detect cause command [2-124](#)
- errdisable detect cause small-frame comand [2-126](#)
- errdisable recovery cause small-frame [2-130](#)
- errdisable recovery command [2-128](#)
- error conditions, displaying [2-442](#)
- error disable detection [2-124](#)
- error-disabled interfaces, displaying [2-454](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-37](#)
 - creating port-channel logical interface [2-138](#)
 - debug EtherChannel/PAGP, display [B-8](#)
 - debug platform-specific events, display [B-33](#)
 - displaying [2-445](#)
 - enabling Layer 2 protocol tunneling for
 - LACP [2-236](#)
 - PAGP [2-236](#)
 - UDLD [2-236](#)
 - interface information, displaying [2-454](#)
- LACP
 - clearing channel-group information [2-58, 2-59](#)
 - debug messages, display [B-16](#)
 - displaying [2-515](#)
 - modes [2-37](#)
 - port priority for hot-standby ports [2-239](#)
 - restricting a protocol [2-41](#)
 - system priority [2-241](#)
- load-distribution methods [2-353](#)

EtherChannel (continued)

PAgP

- aggregate-port learner [2-331](#)
- clearing channel-group information [2-62](#)
- debug messages, display [B-23](#)
- displaying [2-575](#)
- error detection for [2-124](#)
- error recovery timer [2-128](#)
- learn method [2-331](#)
- modes [2-37](#)
- physical-port learner [2-331](#)
- priority of interface for transmitted traffic [2-333](#)

Ethernet controller, internal register display [2-409, 2-416](#)

Ethernet Management port, debugging [B-9](#)

Ethernet statistics, collecting [2-375](#)

exception crashinfo command [2-131, 2-136](#)

exit command [2-766](#)

extended-range VLANs

- and allowed VLAN list [2-728](#)
- and pruning-eligible list [2-728](#)
- configuring [2-751](#)

extended system ID for STP [2-642](#)

F

fallback profile command [2-132](#)

fallback profiles, displaying [2-448](#)

fan information, displaying [2-438](#)

file name, VTP [2-777](#)

files, deleting [2-73](#)

flash_init (boot loader) command [A-10](#)

Flex Links

- configuring [2-703](#)
- displaying [2-454](#)

flowcontrol command [2-134](#)

format (boot loader) command [A-11](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-9](#)

frame forwarding information, displaying [C-9](#)

front-end controller counter and status information [C-11](#)

fsck (boot loader) command [A-12](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-392](#)

health monitoring diagnostic tests [2-84](#)

help (boot loader) command [A-13](#)

hierarchical policy maps [2-351](#)

host connection, port configuration [2-707](#)

host ports, private VLANs [2-711](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-768](#)

IEEE 802.1Q tunnel ports

- configuring [2-708](#)
- displaying [2-428](#)
- limitations [2-709](#)

IEEE 802.1x

- and switchport modes [2-709](#)
- violation error recovery [2-128](#)
- See also port-based authentication

IGMP filters

- applying [2-181](#)
- debug messages, display [B-13](#)

IGMP groups, setting maximum [2-183](#)

IGMP maximum groups, debugging [B-14](#)

IGMP profiles

- creating [2-185](#)
- displaying [2-482](#)

- IGMP snooping
 - adding ports as a static member of a group [2-201](#)
 - displaying [2-483, 2-488, 2-490](#)
 - enabling [2-187](#)
 - enabling the configurable-leave timer [2-189](#)
 - enabling the Immediate-Leave feature [2-198](#)
 - flooding query count [2-195](#)
 - interface topology change notification behavior [2-197](#)
 - multicast table [2-486](#)
 - querier [2-191](#)
 - query solicitation [2-195](#)
 - report suppression [2-193](#)
 - switch topology change notification behavior [2-195](#)
- images
 - See software images
- Immediate-Leave processing
 - IGMP [2-198](#)
 - IPv6 [2-231](#)
 - MVR [2-327](#)
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-138](#)
- interface range command [2-140](#)
- interface-range macros [2-71](#)
- interfaces
 - assigning Ethernet interface to channel group [2-37](#)
 - configuring [2-122](#)
 - configuring multiple [2-140](#)
 - creating port-channel logical [2-138](#)
 - debug messages, display [B-12](#)
 - disabling [2-619](#)
 - displaying the MAC address table [2-541](#)
 - restarting [2-619](#)
- interface speed, configuring [2-679](#)
- interface vlan command [2-142](#)
- internal registers, displaying [2-409, 2-416, 2-419](#)
- Internet Group Management Protocol
 - See IGMP
- ip access-group command [2-144](#)
- ip address command [2-147](#)
- IP addresses, setting [2-147](#)
- IP address matching [2-276](#)
- ip admission command [2-149](#)
- ip admission name proxy http command [2-150](#)
- ip arp inspection filter vlan command [2-152](#)
- ip arp inspection limit command [2-154](#)
- ip arp inspection log-buffer command [2-156](#)
- ip arp inspection trust command [2-158](#)
- ip arp inspection validate command [2-160](#)
- ip arp inspection vlan command [2-162](#)
- ip arp inspection vlan logging command [2-163](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-166](#)
- ip dhcp snooping command [2-165](#)
- ip dhcp snooping database command [2-168](#)
- ip dhcp snooping information option allow-untrusted command [2-172](#)
- ip dhcp snooping information option command [2-170](#)
- ip dhcp snooping information option format remote-id command [2-174](#)
- ip dhcp snooping limit rate command [2-175](#)
- ip dhcp snooping trust command [2-176](#)
- ip dhcp snooping verify command [2-177](#)
- ip dhcp snooping vlan command [2-178](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-179](#)
- ip igmp filter command [2-181](#)
- ip igmp max-groups command [2-183](#)
- ip igmp profile command [2-185](#)
- ip igmp snooping command [2-187](#)
- ip igmp snooping last-member-query-interval command [2-189](#)
- ip igmp snooping querier command [2-191](#)
- ip igmp snooping report-suppression command [2-193](#)
- ip igmp snooping tcn command [2-195](#)
- ip igmp snooping tcn flood command [2-197](#)
- ip igmp snooping vlan immediate-leave command [2-198](#)
- ip igmp snooping vlan mrouter command [2-199](#)
- ip igmp snooping vlan static command [2-201](#)

IP multicast addresses [2-324](#)

IP phones

 auto-QoS configuration [2-22](#)

 trusting packets sent from [2-317](#)

IP-precedence-to-DSCP map [2-291](#)

ip snap forwarding command [2-203](#)

ip source binding command [2-204](#)

IP source guard

 disabling [2-208](#)

 displaying

 binding entries [2-492](#)

 configuration [2-493](#)

 dynamic binding entries only [2-475](#)

 enabling [2-208](#)

 static IP source bindings [2-204](#)

ip ssh command [2-206](#)

IPv6 access list, deny conditions [2-76](#)

ipv6 access-list command [2-209](#)

ipv6 address dhcp command [2-211](#)

ipv6 dhcp client request vendor command [2-212](#)

ipv6 dhcp ping packets command [2-213](#)

ipv6 dhcp pool command [2-215](#)

ipv6 dhcp server command [2-217](#)

ipv6 mld snooping command [2-219](#)

ipv6 mld snooping last-listener-query count command [2-221](#)

ipv6 mld snooping last-listener-query-interval command [2-223](#)

ipv6 mld snooping listener-message-suppression command [2-225](#)

ipv6 mld snooping robustness-variable command [2-227](#)

ipv6 mld snooping tcn command [2-229](#)

ipv6 mld snooping vlan command [2-231](#)

IPv6 SDM template [2-376](#)

ipv6 traffic-filter command [2-233](#)

ip verify source command [2-208](#)

J

jumbo frames

 See MTU

L

l2protocol-tunnel command [2-235](#)

l2protocol-tunnel cos command [2-238](#)

LACP

 See EtherChannel

lacp port-priority command [2-239](#)

lacp system-priority command [2-241](#)

Layer 2 mode, enabling [2-697](#)

Layer 2 protocol ports, displaying [2-512](#)

Layer 2 protocol-tunnel

 error detection for [2-124](#)

 error recovery timer [2-128](#)

Layer 2 protocol tunnel counters [2-57](#)

Layer 2 protocol tunneling error recovery [2-236](#)

Layer 2 traceroute

 IP addresses [2-742](#)

 MAC addresses [2-739](#)

Layer 3 mode, enabling [2-697](#)

line configuration mode [1-3, 1-6](#)

Link Aggregation Control Protocol

 See EtherChannel

link flap

 error detection for [2-124](#)

 error recovery timer [2-128](#)

link state group command [2-243](#)

link state track command [2-245](#)

load-distribution methods for EtherChannel [2-353](#)

location (global configuration) command [2-246](#)

location (interface configuration) command [2-248](#)

logging file command [2-250](#)

logical interface [2-138](#)

loopback error

detection for [2-124](#)

recovery timer [2-128](#)

loop guard, for spanning tree [2-644, 2-648](#)

M

mac access-group command [2-252](#)

MAC access-groups, displaying [2-529](#)

MAC access list configuration mode [2-254](#)

mac access-list extended command [2-254](#)

MAC access lists [2-81](#)

MAC addresses

disabling MAC address learning per VLAN [2-257](#)

displaying

aging time [2-535](#)

all [2-533](#)

dynamic [2-539](#)

MAC address-table move updates [2-544](#)

notification settings [2-543, 2-546](#)

number of addresses in a VLAN [2-537](#)

per interface [2-541](#)

per VLAN [2-550](#)

static [2-548](#)

static and dynamic entries [2-531](#)

dynamic

aging time [2-256](#)

deleting [2-60](#)

displaying [2-539](#)

enabling MAC address notification [2-261](#)

enabling MAC address-table move update [2-259](#)

matching [2-276](#)

persistent stack [2-687](#)

static

adding and removing [2-263](#)

displaying [2-548](#)

dropping on an interface [2-264](#)

tables [2-533](#)

MAC address notification, debugging [B-17](#)

mac address-table aging-time [2-252, 2-276](#)

mac address-table aging-time command [2-256](#)

mac address-table learning command [2-257](#)

mac address-table move update command [2-259](#)

mac address-table notification command [2-261](#)

mac address-table static command [2-263](#)

mac address-table static drop command [2-264](#)

MAC frames

See MTU

macro apply command [2-266](#)

macro description command [2-269](#)

macro global command [2-270](#)

macro global description command [2-273](#)

macro name command [2-274](#)

macros

adding a description [2-269](#)

adding a global description [2-273](#)

applying [2-270](#)

creating [2-274](#)

displaying [2-577](#)

interface range [2-71, 2-140](#)

specifying parameter values [2-270](#)

tracing [2-270](#)

maps

QoS

defining [2-291](#)

displaying [2-560](#)

VLAN

creating [2-763](#)

defining [2-276](#)

displaying [2-611](#)

match (access-map configuration) command [2-276](#)

match (class-map configuration) command [2-278](#)

maximum transmission unit

See MTU

mdix auto command [2-281](#)

memory (boot loader) command [A-14](#)

mgmt_clr (boot loader) command [A-16](#)

mgmt_init (boot loader) command [A-17, A-18](#)

mkdir (boot loader) command [A-19](#)

MLD snooping

- configuring [2-225, 2-227](#)
- configuring queries [2-221, 2-223](#)
- configuring topology change notification [2-229](#)
- displaying [2-502, 2-504, 2-506, 2-508](#)
- enabling [2-219](#)
- enabling on a VLAN [2-231](#)

mls qos aggregate-policer command [2-285](#)

mls qos command [2-283](#)

mls qos cos command [2-287](#)

mls qos dscp-mutation command [2-289](#)

mls qos map command [2-291](#)

mls qos queue-set output buffers command [2-295](#)

mls qos queue-set output threshold command [2-297](#)

mls qos rewrite ip dscp command [2-299](#)

mls qos srr-queue input bandwidth command [2-301](#)

mls qos srr-queue input buffers command [2-303](#)

mls qos-srr-queue input cos-map command [2-305](#)

mls qos srr-queue input dscp-map command [2-307](#)

mls qos srr-queue input priority-queue command [2-309](#)

mls qos srr-queue input threshold command [2-311](#)

mls qos-srr-queue output cos-map command [2-313](#)

mls qos srr-queue output dscp-map command [2-315](#)

mls qos trust command [2-317](#)

mls qos vlan-based command [2-319](#)

mode, MVR [2-324](#)

Mode button, and password recovery [2-379](#)

modes, commands [1-2](#)

monitor session command [2-320](#)

more (boot loader) command [A-20](#)

MSTP

- displaying [2-590](#)
- interoperability [2-66](#)
- link type [2-646](#)

MSTP (continued)

MST region

- aborting changes [2-652](#)
- applying changes [2-652](#)
- configuration name [2-652](#)
- configuration revision number [2-652](#)
- current or pending display [2-652](#)
- displaying [2-590](#)
- MST configuration mode [2-652](#)
- VLANs-to-instance mapping [2-652](#)

path cost [2-654](#)

protocol mode [2-650](#)

restart protocol migration process [2-66](#)

root port

- loop guard [2-644](#)
- preventing from becoming designated [2-644](#)
- restricting which can be root [2-644](#)
- root guard [2-644](#)

root switch

- affects of extended system ID [2-642](#)
- hello-time [2-657, 2-664](#)
- interval between BDPU messages [2-658](#)
- interval between hello BPDU messages [2-657, 2-664](#)
- max-age [2-658](#)
- maximum hop count before discarding BPDU [2-659](#)
- port priority for selection of [2-660](#)
- primary or secondary [2-664](#)
- switch priority [2-663](#)

state changes

- blocking to forwarding state [2-671](#)
- enabling BPDU filtering [2-634, 2-668](#)
- enabling BPDU guard [2-636, 2-668](#)
- enabling Port Fast [2-668, 2-671](#)
- forward-delay time [2-656](#)
- length of listening and learning states [2-656](#)

MSTP (continued)

state changes (continued)

rapid transition to forwarding [2-646](#)shutting down Port Fast-enabled ports [2-668](#)state information display [2-589](#)

MTU

configuring size [2-736](#)displaying global setting [2-600](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-327](#)multicast groups, MVR [2-325](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-199](#)multicast router ports, configuring [2-199](#)multicast router ports, IPv6 [2-231](#)multicast storm control [2-689](#)multicast VLAN, MVR [2-324](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-107](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

configuring [2-324](#)configuring interfaces [2-327](#)debug messages, display [B-21](#)displaying [2-569](#)displaying interface information [2-571](#)members, displaying [2-573](#)mvr (global configuration) command [2-324](#)mvr (interface configuration) command [2-327](#)mvr vlan group command [2-328](#)

nonegotiate

DTP messaging [2-713](#)

non-IP protocols

denying [2-81](#)forwarding [2-342](#)non-IP traffic access lists [2-254](#)

non-IP traffic forwarding

denying [2-81](#)permitting [2-342](#)non-stop forwarding [2-329](#)normal-range VLANs [2-751, 2-757](#)no vlan command [2-751, 2-761](#)nsf command [2-329](#)

O

online diagnostics

configuring health monitoring diagnostic tests [2-84](#)

displaying

configured boot-up coverage level [2-423](#)current scheduled tasks [2-423](#)event logs [2-423](#)supported test suites [2-423](#)test ID [2-423](#)test results [2-423](#)test statistics [2-423](#)

enabling

scheduling [2-86](#)syslog messages [2-84](#)

global configuration mode

clearing health monitoring diagnostic test schedule [2-84](#)clearing test-based testing schedule [2-86](#)setting health monitoring diagnostic testing [2-84](#)setting test-based testing [2-86](#)setting up health monitoring diagnostic test schedule [2-84](#)setting up test-based testing [2-86](#)removing scheduling [2-86](#)

Nnative VLANs [2-728](#)native VLAN tagging [2-768](#)

online diagnostics (continued)

scheduled switchover

disabling [2-86](#)enabling [2-86](#)setting test interval [2-86](#)specifying health monitoring diagnostic tests [2-84](#)starting testing [2-88](#)**P**

PAgP

See EtherChannel

pagp learn-method command [2-331](#)pagp port-priority command [2-333](#)password, VTP [2-777, 2-781](#)password-recovery mechanism, enabling and disabling [2-379](#)permit (ARP access-list configuration) command [2-335](#)permit (IPv6) command [2-337](#)permit (MAC access-list configuration) command [2-342](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-331](#)PID, displaying [2-469](#)PIM-DVMRP, as multicast router learning method [2-199](#)platform chassis-management command [2-345](#)police aggregate command [2-348](#)police command [2-346](#)policed-DSCP map [2-291](#)policy-map command [2-350](#)

policy maps

applying to an interface [2-381, 2-387](#)creating [2-350](#)displaying [2-580](#)hierarchical [2-351](#)

policy maps (continued)

policers

displaying [2-553](#)for a single class [2-346](#)for multiple classes [2-285, 2-348](#)policed-DSCP map [2-291](#)

traffic classification

defining the class [2-42](#)defining trust states [2-744](#)setting DSCP or IP precedence values [2-385](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)configuring violation modes [2-120](#)debug messages, display [B-5](#)enabling guest VLAN supplicant [2-94, 2-104](#)

enabling IEEE 802.1x

globally [2-91](#)per interface [2-114](#)guest VLAN [2-105](#)host modes [2-107](#)IEEE 802.1x AAA accounting methods [2-1](#)initialize an interface [2-108](#)MAC authentication bypass [2-109](#)manual control of authorization state [2-114](#)multiple hosts on authorized port [2-107](#)PAE as authenticator [2-113](#)

periodic re-authentication

enabling [2-117](#)time between attempts [2-118](#)quiet period between failed authentication exchanges [2-118](#)re-authenticating IEEE 802.1x-enabled ports [2-116](#)resetting configurable IEEE 802.1x parameters [2-103](#)switch-to-authentication server retransmission time [2-118](#)switch-to-client frame-retransmission number [2-111 to 2-112](#)switch-to-client retransmission time [2-118](#)

- port-channel load-balance command [2-353](#)
- Port Fast, for spanning tree [2-671](#)
- port ranges, defining [2-69, 2-71](#)
- ports, debugging [B-69](#)
- ports, protected [2-726](#)
- port security
 - aging [2-720](#)
 - debug messages, display [B-71](#)
 - enabling [2-715](#)
 - violation error recovery [2-128](#)
- port trust states for QoS [2-317](#)
- port types, MVR [2-327](#)
- power information, displaying [2-438](#)
- priority-queue command [2-355](#)
- priority value, stack member [2-597, 2-692](#)
- private-vlan command [2-357](#)
- private-vlan mapping command [2-360](#)
- private VLANs
 - association [2-724](#)
 - configuring [2-357](#)
 - configuring ports [2-711](#)
 - displaying [2-606](#)
 - host ports [2-711](#)
 - mapping
 - configuring [2-724](#)
 - displaying [2-454](#)
 - promiscuous ports [2-711](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-469](#)
- promiscuous ports, private VLANs [2-711](#)
- protected ports, displaying [2-460](#)
- pruning
 - VLANs [2-728](#)
 - VTP
 - displaying interface information [2-454](#)
 - enabling [2-777, 2-781](#)
- pruning-eligible VLAN list [2-730](#)
- PVST+
 - See STP

Q

QoS

- auto-QoS
 - configuring [2-22](#)
 - debug messages, display [B-2](#)
 - displaying [2-397](#)
- class maps
 - creating [2-44](#)
 - defining the match criteria [2-278](#)
 - displaying [2-406](#)
- defining the CoS value for an incoming packet [2-287](#)
- displaying configuration information [2-397, 2-552](#)
- DSCP transparency [2-299](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-289](#)
 - defining DSCP-to-DSCP-mutation map [2-291](#)
- egress queues
 - allocating buffers [2-295](#)
 - defining the CoS output queue threshold map [2-313](#)
 - defining the DSCP output queue threshold map [2-315](#)
 - displaying buffer allocations [2-556](#)
 - displaying CoS output queue threshold map [2-560](#)
 - displaying DSCP output queue threshold map [2-560](#)
 - displaying queueing strategy [2-556](#)
 - displaying queue-set settings [2-563](#)
 - enabling bandwidth shaping and scheduling [2-683](#)
 - enabling bandwidth sharing and scheduling [2-685](#)
 - limiting the maximum output on a port [2-681](#)
 - mapping a port to a queue-set [2-362](#)
 - mapping CoS values to a queue and threshold [2-313](#)
 - mapping DSCP values to a queue and threshold [2-315](#)

QoS (continued)

egress queues (continued)

setting maximum and reserved memory allocations [2-297](#)

setting WTD thresholds [2-297](#)

enabling [2-283](#)

ingress queues

allocating buffers [2-303](#)

assigning SRR scheduling weights [2-301](#)

defining the CoS input queue threshold map [2-305](#)

defining the DSCP input queue threshold map [2-307](#)

displaying buffer allocations [2-556](#)

displaying CoS input queue threshold map [2-560](#)

displaying DSCP input queue threshold map [2-560](#)

displaying queueing strategy [2-556](#)

displaying settings for [2-554](#)

enabling the priority queue [2-309](#)

mapping CoS values to a queue and threshold [2-305](#)

mapping DSCP values to a queue and threshold [2-307](#)

setting WTD thresholds [2-311](#)

maps

defining [2-291, 2-305, 2-307, 2-313, 2-315](#)

displaying [2-560](#)

policy maps

applying an aggregate policer [2-348](#)

applying to an interface [2-381, 2-387](#)

creating [2-350](#)

defining policers [2-285, 2-346](#)

displaying policers [2-553](#)

displaying policy maps [2-580](#)

hierarchical [2-351](#)

policed-DSCP map [2-291](#)

setting DSCP or IP precedence values [2-385](#)

traffic classifications [2-42](#)

trust states [2-744](#)

QoS (continued)

port trust states [2-317](#)

queues, enabling the expedite [2-355](#)

statistics

in-profile and out-of-profile packets [2-556](#)

packets enqueued or dropped [2-556](#)

sent and received CoS values [2-556](#)

sent and received DSCP values [2-556](#)

trusted boundary for IP phones [2-317](#)

VLAN-based [2-319](#)

quality of service

See QoS

querytime, MVR [2-324](#)

queue-set command [2-362](#)

R

radius-server dead-criteria command [2-363](#)

radius-server host command [2-365](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-116](#)

re-authentication

periodic [2-117](#)

time between attempts [2-118](#)

receiver ports, MVR [2-327](#)

receiving flow-control packets [2-134](#)

recovery mechanism

causes [2-128](#)

display [2-48, 2-404, 2-440, 2-443](#)

timer interval [2-128](#)

reload command [2-367](#)

remote command [2-369](#)

remote-span command [2-371](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-21](#)

renew ip dhcp snooping database command [2-373](#)

reset (boot loader) command [A-22](#)

reset command [2-766](#)

resource templates, displaying [2-585](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-23](#)

rmon collection stats command [2-375](#)

root guard, for spanning tree [2-644](#)

routed ports

IP addresses on [2-148](#)

number supported [2-148](#)

routing frames

See MTU

RSPAN

configuring [2-320](#)

displaying [2-566](#)

filter RSPAN traffic [2-320](#)

remote-span command [2-371](#)

sessions

add interfaces to [2-320](#)

displaying [2-566](#)

start new [2-320](#)

S

scheduled switchover

disabling [2-86](#)

enabling [2-86](#)

SDM mismatch mode [2-377](#), [2-598](#)

sdm prefer command [2-376](#)

SDM templates

allowed resources [2-377](#)

and stacking [2-377](#)

displaying [2-585](#)

dual IPv4 and IPv6 [2-376](#)

secure ports, limitations [2-717](#)

sending flow-control packets [2-134](#)

service password-recovery command [2-379](#)

service-policy command [2-381](#)

session command [2-384](#)

set (boot loader) command [A-24](#)

set command [2-385](#)

setup command [2-387](#)

setup express command [2-390](#)

show access-lists command [2-392](#)

show archive status command [2-395](#)

show arp access-list command [2-396](#)

show auto qos command [2-397](#)

show boot command [2-401](#)

show cable-diagnostics tdr command [2-404](#)

show changes command [2-766](#)

show class-map command [2-406](#)

show controllers cpu-interface command [2-407](#)

show controllers ethernet-controller command [2-409](#)

show controllers ethernet-controller fastethernet
command [2-416](#)

show controllers tcam command [2-419](#)

show controller utilization command [2-421](#)

show current command [2-766](#)

show dot1q-tunnel command [2-428](#)

show dot1x command [2-429](#)

show dtp [2-433](#)

show eap command [2-435](#)

show env command [2-438](#)

show errdisable detect command [2-440](#)

show errdisable flap-values command [2-442](#)

show errdisable recovery command [2-443](#)

show etherchannel command [2-445](#)

show fallback profile command [2-448](#)

show flowcontrol command [2-450](#)

show idprom command [2-452](#)

show interfaces command [2-454](#)

show interfaces counters command [2-466](#)

show inventory command [2-469](#)

show ip arp inspection command [2-470](#)

show ipc command [2-495](#)

show ip dhcp snooping binding command [2-475](#)

- show ip dhcp snooping command [2-474](#)
- show ip dhcp snooping database command [2-477, 2-479](#)
- show ip igmp profile command [2-482](#)
- show ip igmp snooping address command [2-504](#)
- show ip igmp snooping command [2-483, 2-502](#)
- show ip igmp snooping groups command [2-486](#)
- show ip igmp snooping mrouter command [2-488, 2-506](#)
- show ip igmp snooping querier command [2-490, 2-508](#)
- show ip source binding command [2-492](#)
- show ipv6 access-list command [2-499](#)
- show ipv6 dhcp conflict command [2-501](#)
- show ipv6 route updated [2-510](#)
- show ip verify source command [2-493](#)
- show l2protocol-tunnel command [2-512](#)
- show lacp command [2-515](#)
- show link state group command [2-519](#)
- show location [2-521](#)
- show location command [2-521](#)
- show logging command [2-524](#)
- show mac access-group command [2-529](#)
- show mac address-table address command [2-533](#)
- show mac address-table aging time command [2-535](#)
- show mac address-table command [2-531](#)
- show mac address-table count command [2-537](#)
- show mac address-table dynamic command [2-539](#)
- show mac address-table interface command [2-541](#)
- show mac address-table learning command [2-543](#)
- show mac address-table move update command [2-544](#)
- show mac address-table notification command [2-61, 2-546, B-19](#)
- show mac address-table static command [2-548](#)
- show mac address-table vlan command [2-550](#)
- show mls qos aggregate-policer command [2-553](#)
- show mls qos command [2-552](#)
- show mls qos input-queue command [2-554](#)
- show mls qos interface command [2-556](#)
- show mls qos maps command [2-560](#)
- show mls qos queue-set command [2-563](#)
- show mls qos vlan command [2-565](#)
- show monitor command [2-566](#)
- show mvr command [2-569](#)
- show mvr interface command [2-571](#)
- show mvr members command [2-573](#)
- show pagp command [2-575](#)
- show parser macro command [2-577](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform chassis command [C-4](#)
- show platform configuration command [C-6](#)
- show platform dl command [C-7](#)
- show platform etherchannel command [C-8](#)
- show platform forward command [C-9](#)
- show platform frontend-controller command [C-11](#)
- show platform igmp snooping command [C-12](#)
- show platform ipc trace command [C-20](#)
- show platform ip multicast command [C-14](#)
- show platform ip unicast command [C-15](#)
- show platform ipv6 unicast command [C-21](#)
- show platform ip wccp command [C-19](#)
- show platform layer4op command [C-23](#)
- show platform mac-address-table command [C-24](#)
- show platform messaging command [C-25](#)
- show platform monitor command [C-26](#)
- show platform mvr table command [C-27](#)
- show platform pm command [C-28](#)
- show platform port-asic command [C-30](#)
- show platform port-security command [C-35](#)
- show platform qos command [C-36](#)
- show platform resource-manager command [C-37](#)
- show platform snmp counters command [C-39](#)
- show platform spanning-tree command [C-40](#)
- show platform stack-manager command [C-42](#)
- show platform stp-instance command [C-41](#)
- show platform summary command [C-44](#)
- show platform tb command [C-45](#)
- show platform tcam command [C-47](#)
- show platform vlan command [C-50](#)
- show policy-map command [2-580](#)

- show port security command [2-582](#)
- show proposed command [2-766](#)
- show sdm prefer command [2-585](#)
- show setup express command [2-588](#)
- show spanning-tree command [2-589](#)
- show storm-control command [2-595](#)
- show switch command [2-597](#)
- show system mtu command [2-600](#)
- show trust command [2-744](#)
- show udd command [2-601](#)
- show version command [2-604](#)
- show vlan access-map command [2-611](#)
- show vlan command [2-606](#)
- show vlan command, fields [2-608](#)
- show vlan filter command [2-612](#)
- show vmps command [2-613](#)
- show vtp command [2-615](#)
- shutdown command [2-619](#)
- shutdown threshold, Layer 2 protocol tunneling [2-235](#)
- shutdown vlan command [2-620](#)
- small violation-rate command [2-621](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-627](#)
- SNMP informs, enabling the sending of [2-623](#)
- snmp-server enable traps command [2-623](#)
- snmp-server host command [2-627](#)
- snmp trap mac-notification command [2-631](#)
- SNMP traps
 - enabling MAC address notification trap [2-631](#)
 - enabling the MAC address notification feature [2-261](#)
 - enabling the sending of [2-623](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-73](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-604](#)
- source ports, MVR [2-327](#)
- SPAN
 - configuring [2-320](#)
 - debug messages, display [B-20](#)
 - displaying [2-566](#)
 - filter SPAN traffic [2-320](#)
 - sessions
 - add interfaces to [2-320](#)
 - displaying [2-566](#)
 - start new [2-320](#)
- spanning-tree backbonefast command [2-633](#)
- spanning-tree bpduguard command [2-636](#)
- spanning-tree bpduguard command [2-636](#)
- spanning-tree cost command [2-638](#)
- spanning-tree etherchannel command [2-640](#)
- spanning-tree extend system-id command [2-642](#)
- spanning-tree guard command [2-644](#)
- spanning-tree link-type command [2-646](#)
- spanning-tree loopguard default command [2-648](#)
- spanning-tree mode command [2-650](#)
- spanning-tree mst configuration command [2-652](#)
- spanning-tree mst cost command [2-654](#)
- spanning-tree mst forward-time command [2-656](#)
- spanning-tree mst hello-time command [2-657](#)
- spanning-tree mst max-age command [2-658](#)
- spanning-tree mst max-hops command [2-659](#)
- spanning-tree mst port-priority command [2-660](#)

spanning-tree mst pre-standard command [2-662](#)

spanning-tree mst priority command [2-663](#)

spanning-tree mst root command [2-664](#)

spanning-tree portfast (global configuration)
command [2-668](#)

spanning-tree portfast (interface configuration)
command [2-671](#)

spanning-tree port-priority command [2-666](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [2-673](#)

spanning-tree uplinkfast command [2-674](#)

spanning-tree vlan command [2-676](#)

speed command [2-679](#)

srr-queue bandwidth limit command [2-681](#)

srr-queue bandwidth shape command [2-683](#)

srr-queue bandwidth share command [2-685](#)

SSH, configuring version [2-206](#)

stack-mac persistent timer command [2-687](#)

stack member

access [2-384](#)

number [2-597, 2-695](#)

priority value [2-692](#)

provisioning [2-693](#)

reloading [2-367](#)

stacks, switch

MAC address [2-687](#)

provisioning a new member [2-693](#)

reloading [2-367](#)

stack member access [2-384](#)

stack member number [2-597, 2-695](#)

stack member priority value [2-597, 2-692](#)

static-access ports, configuring [2-699](#)

statistics, Ethernet group [2-375](#)

sticky learning, enabling [2-715](#)

storm-control command [2-689](#)

STP

BackboneFast [2-633](#)

counters, clearing [2-65](#)

debug messages, display

BackboneFast events [B-75](#)

MSTP [B-78](#)

optimized BPDUs handling [B-77](#)

spanning-tree activity [B-73](#)

switch shim [B-80](#)

transmitted and received BPDUs [B-76](#)

UplinkFast [B-82](#)

detection of indirect link failures [2-633](#)

enabling protocol tunneling for [2-235](#)

EtherChannel misconfiguration [2-640](#)

extended system ID [2-642](#)

path cost [2-638](#)

protocol modes [2-650](#)

root port

accelerating choice of new [2-674](#)

loop guard [2-644](#)

preventing from becoming designated [2-644](#)

restricting which can be root [2-644](#)

root guard [2-644](#)

UplinkFast [2-674](#)

root switch

affects of extended system ID [2-642, 2-677](#)

hello-time [2-676](#)

interval between BDPU messages [2-676](#)

interval between hello BPDU messages [2-676](#)

max-age [2-676](#)

port priority for selection of [2-666](#)

primary or secondary [2-676](#)

switch priority [2-676](#)

STP (continued)

state changes

- blocking to forwarding state [2-671](#)
- enabling BPDU filtering [2-634, 2-668](#)
- enabling BPDU guard [2-636, 2-668](#)
- enabling Port Fast [2-668, 2-671](#)
- enabling timer to recover from error state [2-128](#)
- forward-delay time [2-676](#)
- length of listening and learning states [2-676](#)
- shutting down Port Fast-enabled ports [2-668](#)

state information display [2-589](#)VLAN options [2-663, 2-676](#)SVIs, creating [2-142](#)SVI status calculation [2-701](#)

Switched Port Analyzer

See SPAN

switching characteristics

modifying [2-697](#)returning to interfaces [2-697](#)switchport access command [2-699](#)switchport autostate exclude command [2-701](#)switchport backup interface command [2-703](#)switchport block command [2-706](#)switchport command [2-697](#)switchport host command [2-707](#)switchport mode command [2-708](#)switchport mode private-vlan command [2-711](#)switchport nonegotiate command [2-713](#)switchport port-security aging command [2-720](#)switchport port-security command [2-715](#)switchport priority extend command [2-722](#)switchport private-vlan command [2-724](#)switchport protected command [2-726](#)switchports, displaying [2-454](#)switchport trunk command [2-728](#)switchport voice detect [2-731](#)switchport voice vlan command [2-732](#)switch priority command [2-692](#)switch provision command [2-693](#)switch renumber command [2-695](#)system env temperature threshold yellow command [2-734](#)system message logging, save message to flash [2-250](#)system mtu command [2-736](#)system resource templates [2-376](#)

Ttar files, creating, listing, and extracting [2-15](#)TDR, running [2-738](#)temperature information, displaying [2-438](#)templates, system resources [2-376](#)test cable-diagnostics tdr command [2-738](#)traceroute mac command [2-739](#)traceroute mac ip command [2-742](#)trunking, VLAN mode [2-708](#)trunk mode [2-708](#)trunk ports [2-708](#)trunks, to non-DTP device [2-709](#)trusted boundary for QoS [2-317](#)trusted port states for QoS [2-317](#)tunnel ports, Layer 2 protocol, displaying [2-512](#)type (boot loader) command [A-27](#)

U

UDLD

aggressive mode [2-746, 2-748](#)debug messages, display [B-90](#)enable globally [2-746](#)enable per interface [2-748](#)error recovery timer [2-128](#)message timer [2-746](#)normal mode [2-746, 2-748](#)reset a shutdown interface [2-750](#)status [2-601](#)udld command [2-746](#)udld port command [2-748](#)

uddl reset command [2-750](#)
 unicast storm control [2-689](#)
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing [2-706](#)
 unknown unicast traffic, preventing [2-706](#)
 unset (boot loader) command [A-28](#)
 upgrading
 copying software images [2-8](#)
 downloading software images [2-11](#)
 software images, monitoring status of [2-395](#)
 UplinkFast, for STP [2-674](#)
 user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-30](#)
 version mismatch mode [2-598](#)
 vlan (global configuration) command [2-751](#)
 vlan (VLAN configuration) command [2-757](#)
 vlan access-map command [2-763](#)
 VLAN access map configuration mode [2-763](#)
 VLAN access maps
 actions [2-6](#)
 displaying [2-611](#)
 VLAN-based QoS [2-319](#)
 VLAN configuration
 rules [2-754, 2-759](#)
 saving [2-751, 2-761](#)
 VLAN configuration mode
 commands
 VLAN [2-757](#)
 VTP [2-781](#)
 description [1-5](#)
 entering [2-765](#)
 summary [1-3](#)
 vlan database command [2-765](#)
 vlan dot1q tag native command [2-768](#)
 vlan filter command [2-770](#)
 VLAN filters, displaying [2-612](#)
 VLAN ID range [2-751, 2-757](#)
 VLAN maps
 applying [2-770](#)
 creating [2-763](#)
 defining [2-276](#)
 displaying [2-611](#)
 VLAN Query Protocol
 See VQP
 VLANs
 adding [2-751](#)
 configuring [2-751, 2-757](#)
 debug messages, display
 ISL [B-86](#)
 VLAN IOS file system error tests [B-85](#)
 VLAN manager activity [B-83](#)
 VTP [B-88](#)
 displaying configurations [2-606](#)
 extended-range [2-751](#)
 MAC addresses
 displaying [2-550](#)
 number of [2-537](#)
 media types [2-754, 2-759](#)
 normal-range [2-751, 2-757](#)
 private [2-711](#)
 configuring [2-357](#)
 displaying [2-606](#)
 See also private VLANs
 restarting [2-620](#)
 saving the configuration [2-751](#)
 shutting down [2-620](#)
 SNMP traps for VTP [2-625, 2-628](#)
 suspending [2-620](#)
 variables [2-757](#)
 VLAN Trunking Protocol
 See VTP
 VM mode [2-598](#)

VMPS

configuring servers [2-775](#)

displaying [2-613](#)

error recovery timer [2-128](#)

reconfirming dynamic VLAN assignments [2-772](#)

vmmps reconfirm (global configuration) command [2-773](#)

vmmps reconfirm (privileged EXEC) command [2-772](#)

vmmps retry command [2-774](#)

vmmps server command [2-775](#)

voice VLAN

configuring [2-731, 2-732](#)

setting port priority [2-722](#)

VQP

and dynamic-access ports [2-700](#)

clearing client statistics [2-67](#)

displaying information [2-613](#)

per-server retry count [2-774](#)

reconfirmation interval [2-773](#)

reconfirming dynamic VLAN assignments [2-772](#)

VTP

changing characteristics [2-777](#)

clearing pruning counters [2-68](#)

configuring

domain name [2-777, 2-781](#)

file name [2-777](#)

mode [2-777, 2-781](#)

password [2-777, 2-781](#)

counters display fields [2-616](#)

displaying information [2-615](#)

enabling

pruning [2-777, 2-781](#)

tunneling for [2-235](#)

Version 2 [2-777, 2-781](#)

mode [2-777, 2-781](#)

pruning [2-777, 2-781](#)

saving the configuration [2-751, 2-761](#)

statistics [2-615](#)

status [2-615](#)

status display fields [2-617](#)

vtp (global configuration) command [2-777](#)

vtp (VLAN configuration) command [2-781](#)

