



INDEX

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- aaa authorization network command [2-5, 2-24, 2-30, 2-32, 2-34, 2-36, 2-38, 2-130, 2-291, 2-458, B-7, B-32](#)
- AAA methods [2-3](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-177](#)
 - MAC, displaying [2-582](#)
- access list, IPv6 [2-248](#)
- access map configuration mode [2-317](#)
- access mode [2-773](#)
- access ports [2-773](#)
- ACEs [2-114, 2-391](#)
- ACLs
 - deny [2-112](#)
 - displaying [2-440](#)
 - for non-IP protocols [2-295](#)
 - IP [2-177](#)
 - matching [2-317](#)
 - on Layer 2 interfaces [2-177](#)
 - permit [2-389](#)
- action command [2-6](#)
- aggregate-port learner [2-378](#)
- allowed VLANs [2-793](#)
- archive copy-sw command [2-8](#)
- archive download-sw command [2-11](#)
- archive tar command [2-15](#)
- archive upload-sw command [2-18](#)
- arp (boot loader) command [A-2](#)
- arp access-list command [2-20](#)
- authentication command disable-port ignore [2-23](#)
- authentication control-direction command [2-24](#)
- authentication event command [2-26](#)
- authentication failed VLAN
 - See dot1x auth-fail vlan
- authentication fallback command [2-30](#)
- authentication host-mode command [2-32](#)
- authentication mac-move permit command [2-34](#)
- authentication open command [2-36](#)
- authentication order command [2-38](#)
- authentication periodic command [2-40](#)
- authentication port-control command [2-42](#)
- authentication priority command [2-44](#)
- authentication timer command [2-46](#)
- authentication violation command [2-48](#)
- auth-fail max-attempts
 - See dot1x auth-fail max-attempts
- auth-fail vlan
 - See dot1x auth-fail vlan
- auth open command [2-36](#)
- auth order command [2-38](#)
- authorization state of controlled port [2-146](#)
- auth timer command [2-46](#)
- autonegotiation of duplex mode [2-155](#)
- auto qos voip command [2-50](#)

B

BackboneFast, for STP [2-695](#)

backup interfaces

configuring [2-767](#)

displaying [2-507](#)

boot (boot loader) command [A-3](#)

boot auto-copy-sw command [2-54](#)

boot auto-download-sw command [2-56](#)

boot config-file command [2-58](#)

boot enable-break command [2-59](#)

boot helper command [2-60](#)

boot helper-config file command [2-61](#)

booting

Cisco IOS image [2-64](#)

displaying environment variables [2-453](#)

interrupting [2-59](#)

manually [2-62](#)

boot loader

accessing [A-1](#)

booting

Cisco IOS image [A-3](#)

helper image [2-60](#)

directories

creating [A-19](#)

displaying a list of [A-8](#)

removing [A-23](#)

displaying

available commands [A-13](#)

memory heap utilization [A-14](#)

version [A-30](#)

environment variables

described [A-24](#)

displaying settings [A-24](#)

location of [A-25](#)

setting [A-24](#)

unsetting [A-28](#)

files

copying [A-6](#)

deleting [A-7](#)

displaying a list of [A-8](#)

displaying the contents of [A-5, A-20, A-27](#)

renaming [A-21](#)

file system

formatting [A-11](#)

initializing flash [A-10](#)

running a consistency check [A-12](#)

prompt [A-1](#)

resetting the system [A-22](#)

boot manual command [2-62](#)

boot private-config-file command [2-63](#)

boot system command [2-64](#)

BPDU filtering, for spanning tree [2-696, 2-730](#)

BPDU guard, for spanning tree [2-698, 2-730](#)

broadcast storm control [2-751](#)

C

cat (boot loader) command [A-5](#)

CDP, enabling protocol tunneling for [2-274](#)

channel-group command [2-66](#)

channel-protocol command [2-70](#)

Cisco SoftPhone

auto-QoS configuration [2-50](#)

trusting packets sent from [2-358](#)

CISP

See Client Information Signalling Protocol

cisp

debug platform cisp command [B-32](#)

cisp enable command [2-71](#)

class command [2-72](#)

class-map command [2-74](#)

class maps

creating [2-74](#)

defining the match criteria [2-319](#)

displaying [2-459](#)

class of service
 See CoS
 clear dot1x command [2-76](#)
 clear eap command [2-77](#)
 clear errdisable interface [2-78](#)
 clear ip arp inspection log command [2-79](#)
 clear ip arp inspection statistics command [2-80](#)
 clear ipc command [2-85](#)
 clear ip dhcp snooping database command [2-81, 2-83](#)
 clear ipv6 dhcp conflict command [2-86](#)
 clear l2protocol-tunnel counters command [2-87](#)
 clear lacp command [2-88](#)
 clear logging command [2-89](#)
 clear mac address-table command [2-90, 2-91](#)
 clear nmsp statistics command [2-92](#)
 clear pagp command [2-93](#)
 clear port-security command [2-94](#)
 clear spanning-tree counters command [2-96](#)
 clear spanning-tree detected-protocols command [2-97](#)
 clear vmps statistics command [2-98](#)
 clear vtp counters command [2-99](#)
 Client Information Signalling Protocol [2-71, 2-130, 2-458, B-7, B-32](#)
 command modes defined [1-2](#)
 configuration files
 password recovery disable considerations [A-1](#)
 specifying the name [2-58, 2-63](#)
 configuring multiple interfaces [2-173](#)
 config-vlan mode
 commands [2-817](#)
 entering [2-816](#)
 copy (boot loader) command [A-6](#)
 copy logging onboard command [2-100](#)
 CoS
 assigning default value to incoming packets [2-328](#)
 assigning to Layer 2 protocol packets [2-277](#)
 overriding the incoming value [2-328](#)
 CoS-to-DSCP map [2-332](#)
 CPU ASIC statistics, displaying [2-460](#)

crashinfo files [2-164](#)
 critical VLAN [2-27](#)

D

debug authentication [B-2](#)
 debug auto qos command [B-4](#)
 debug backup command [B-6](#)
 debug cisp command [B-7](#)
 debug dot1x command [B-8](#)
 debug dtp command [B-9](#)
 debug eap command [B-10](#)
 debug etherchannel command [B-11](#)
 debug fastethernet command [B-12](#)
 debug interface command [B-15](#)
 debug ip dhcp snooping command [B-13](#)
 debug ip igmp filter command [B-16](#)
 debug ip igmp max-groups command [B-17](#)
 debug ip igmp snooping command [B-18](#)
 debug ip verify source packet command [B-14](#)
 debug lacp command [B-19](#)
 debug lldp packets command [B-20](#)
 debug mac-notification command [B-21](#)
 debug matm command [B-22](#)
 debug matm move update command [B-23](#)
 debug monitor command [B-24](#)
 debug mvrdbg command [B-25](#)
 debug nmsp command [B-26](#)
 debug nvram command [B-27](#)
 debug pagp command [B-28](#)
 debug platform acl command [B-29](#)
 debug platform backup interface command [B-31](#)
 debug platform cisp command [B-32](#)
 debug platform cli-redirection main command [B-33](#)
 debug platform configuration command [B-34](#)
 debug platform cpu-queues command [B-35](#)
 debug platform device-manager command [B-37](#)
 debug platform dot1x command [B-38](#)
 debug platform etherchannel command [B-39](#)

- debug platform fallback-bridging command [B-40](#)
- debug platform forw-tcam command [B-41](#)
- debug platform ip arp inspection command [B-42](#)
- debug platform ipc command [B-51](#)
- debug platform ip dhcp command [B-43](#)
- debug platform ip igmp snooping command [B-44](#)
- debug platform ip multicast command [B-46](#)
- debug platform ip unicast command [B-48](#)
- debug platform ip wccp command [B-50](#)
- debug platform led command [B-52](#)
- debug platform matm command [B-53](#)
- debug platform messaging application command [B-54](#)
- debug platform phy command [B-56](#)
- debug platform pm command [B-58](#)
- debug platform port-asic command [B-60](#)
- debug platform port-security command [B-61](#)
- debug platform qos-acl-tcam command [B-62](#)
- debug platform remote-commands command [B-63](#)
- debug platform resource-manager command [B-64](#)
- debug platform snmp command [B-65](#)
- debug platform span command [B-66](#)
- debug platform stack-manager command [B-67](#)
- debug platform supervisor-asic command [B-68](#)
- debug platform sw-bridge command [B-69](#)
- debug platform tcam command [B-70](#)
- debug platform udd command [B-73](#)
- debug platform vlan command [B-74](#)
- debug pm command [B-75](#)
- debug port-security command [B-77](#)
- debug qos-manager command [B-78](#)
- debug spanning-tree backbonefast command [B-81](#)
- debug spanning-tree bpdu command [B-82](#)
- debug spanning-tree bpdu-opt command [B-83](#)
- debug spanning-tree command [B-79](#)
- debug spanning-tree mstp command [B-84](#)
- debug spanning-tree switch command [B-86](#)
- debug spanning-tree uplinkfast command [B-88](#)
- debug sw-vlan command [B-89](#)
- debug sw-vlan ifs command [B-91](#)
- debug sw-vlan notification command [B-92](#)
- debug sw-vlan vtp command [B-94](#)
- debug udd command [B-96](#)
- debug vqpc command [B-98](#)
- define interface-range command [2-102](#)
- delete (boot loader) command [A-7](#)
- delete command [2-104](#)
- deny (ARP access-list configuration) command [2-105](#)
- deny (IPv6) command [2-107](#)
- deny command [2-112](#)
- detect mechanism, causes [2-157](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-206](#)
 - enabling
 - on a VLAN [2-212](#)
 - option 82 [2-204, 2-206](#)
 - trust on an interface [2-210](#)
 - error recovery timer [2-161](#)
 - rate limiting [2-209](#)
- DHCP snooping binding database
 - binding file, configuring [2-202](#)
 - bindings
 - adding [2-200](#)
 - deleting [2-200](#)
 - displaying [2-528](#)
 - clearing database agent statistics [2-81, 2-83](#)
 - database agent, configuring [2-202](#)
 - displaying
 - binding entries [2-528](#)
 - database agent status [2-530, 2-532](#)
 - renewing [2-420](#)
- dir (boot loader) command [A-8](#)
- directories, deleting [2-104](#)
- domain name, VTP [2-835](#)
- dot1x auth-fail max-attempts [2-124](#)
- dot1x auth-fail vlan [2-126](#)
- dot1x command [2-122](#)
- dot1x control-direction command [2-128](#)
- dot1x credentials (global configuration) command [2-130](#)

- dot1x critical global configuration command [2-131](#)
- dot1x critical interface configuration command [2-133](#)
- dot1x default command [2-135](#)
- dot1x fallback command [2-136](#)
- dot1x guest-vlan command [2-137](#)
- dot1x host-mode command [2-139](#)
- dot1x initialize command [2-140](#)
- dot1x mac-auth-bypass command [2-141](#)
- dot1x max-reauth-req command [2-143](#)
- dot1x max-req command [2-144](#)
- dot1x pae command [2-145](#)
- dot1x port-control command [2-146](#)
- dot1x re-authenticate command [2-148](#)
- dot1x reauthentication command [2-149](#)
- dot1x supplicant force-multicast command [2-150](#)
- dot1x timeout command [2-151](#)
- dot1x violation-mode command [2-153](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-274](#)
- DSCP-to-CoS map [2-332](#)
- DSCP-to-DSCP-mutation map [2-332](#)
- DTP [2-774](#)
- DTP flap
 - error detection for [2-157](#)
 - error recovery timer [2-161](#)
- DTP negotiation [2-778](#)
- dual IPv4 and IPv6 templates [2-384](#)
- duplex command [2-155](#)
- dynamic-access ports
 - configuring [2-763](#)
 - restrictions [2-764](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-185](#)
 - define [2-20](#)
 - deny packets [2-105](#)
 - display [2-444](#)
 - permit packets [2-382](#)

- clear
 - log buffer [2-79](#)
 - statistics [2-80](#)
- display
 - ARP ACLs [2-444](#)
 - configuration and operating state [2-523](#)
 - log buffer [2-523](#)
 - statistics [2-523](#)
 - trust state and rate limit [2-523](#)
- enable per VLAN [2-195](#)
- error detection for [2-157](#)
- error recovery timer [2-161](#)
- log buffer
 - clear [2-79](#)
 - configure [2-189](#)
 - display [2-523](#)
- rate-limit incoming ARP packets [2-187](#)
- statistics
 - clear [2-80](#)
 - display [2-523](#)
- trusted interface state [2-191](#)
- type of packet logged [2-196](#)
- validation checks [2-193](#)
- dynamic auto VLAN membership mode [2-773](#)
- dynamic desirable VLAN membership mode [2-773](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-144](#)
 - response time before retransmitting [2-151](#)
- encapsulation methods [2-793](#)
- environment variables, displaying [2-453](#)
- errdisable detect cause command [2-157](#)

errdisable detect cause small-frame comand [2-159](#)
 errdisable recovery cause small-frame [2-163](#)
 errdisable recovery command [2-161](#)
 error conditions, displaying [2-495](#)
 error disable detection [2-157](#)
 error-disabled interfaces, displaying [2-507](#)
 EtherChannel
 assigning Ethernet interface to channel group [2-66](#)
 creating port-channel logical interface [2-171](#)
 debug EtherChannel/PAgP, display [B-11](#)
 debug platform-specific events, display [B-39](#)
 displaying [2-498](#)
 enabling Layer 2 protocol tunneling for
 LACP [2-275](#)
 PAgP [2-275](#)
 UDLD [2-275](#)
 interface information, displaying [2-507](#)
 LACP
 clearing channel-group information [2-88, 2-89](#)
 debug messages, display [B-19](#)
 displaying [2-568](#)
 modes [2-66](#)
 port priority for hot-standby ports [2-278](#)
 restricting a protocol [2-70](#)
 system priority [2-280](#)
 load-distribution methods [2-400](#)
 PAgP
 aggregate-port learner [2-378](#)
 clearing channel-group information [2-93](#)
 debug messages, display [B-28](#)
 displaying [2-633](#)
 error detection for [2-157](#)
 error recovery timer [2-161](#)
 learn method [2-378](#)
 modes [2-66](#)
 physical-port learner [2-378](#)
 priority of interface for transmitted traffic [2-380](#)

Ethernet controller, internal register display [2-462, 2-469](#)
 Ethernet Management port, debugging [B-12](#)
 Ethernet statistics, collecting [2-423](#)
 exception crashinfo command [2-164, 2-169](#)
 extended-range VLANs
 and allowed VLAN list [2-793](#)
 and pruning-eligible list [2-793](#)
 configuring [2-816](#)
 extended system ID for STP [2-704](#)

F

fallback profile command [2-165](#)
 fallback profiles, displaying [2-501](#)
 fan information, displaying [2-491](#)
 file name, VTP [2-835](#)
 files, deleting [2-104](#)
 flash_init (boot loader) command [A-10](#)
 flexible authentication ordering [2-38](#)
 Flex Links
 configuring [2-767](#)
 displaying [2-507](#)
 flowcontrol command [2-167](#)
 format (boot loader) command [A-11](#)
 forwarding packets, with ACL matches [2-6](#)
 forwarding results, display [C-9](#)
 frame forwarding information, displaying [C-9](#)
 front-end controller counter and status information [C-11](#)
 fsck (boot loader) command [A-12](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-440](#)
 health monitoring diagnostic tests [2-115](#)
 help (boot loader) command [A-13](#)
 hierarchical policy maps [2-398](#)
 host connection, port configuration [2-772](#)
 host ports, private VLANs [2-776](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-826](#)
 IEEE 802.1Q tunnel ports
 configuring [2-773](#)
 displaying [2-481](#)
 limitations [2-774](#)
 IEEE 802.1x
 and switchport modes [2-774](#)
 violation error recovery [2-161](#)
 See also port-based authentication
 IGMP filters
 applying [2-215](#)
 debug messages, display [B-16](#)
 IGMP groups, setting maximum [2-217](#)
 IGMP maximum groups, debugging [B-17](#)
 IGMP profiles
 creating [2-219](#)
 displaying [2-535](#)
 IGMP snooping
 adding ports as a static member of a group [2-235](#)
 displaying [2-536, 2-541, 2-543](#)
 enabling [2-221](#)
 enabling the configurable-leave timer [2-223](#)
 enabling the Immediate-Leave feature [2-232](#)
 flooding query count [2-229](#)
 interface topology change notification behavior [2-231](#)
 multicast table [2-539](#)
 querier [2-225](#)
 query solicitation [2-229](#)

report suppression [2-227](#)
 switch topology change notification behavior [2-229](#)
 images
 See software images
 Immediate-Leave processing
 IGMP [2-232](#)
 IPv6 [2-270](#)
 MVR [2-368](#)
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-171](#)
 interface range command [2-173](#)
 interface-range macros [2-102](#)
 interfaces
 assigning Ethernet interface to channel group [2-66](#)
 configuring [2-155](#)
 configuring multiple [2-173](#)
 creating port-channel logical [2-171](#)
 debug messages, display [B-15](#)
 disabling [2-681](#)
 displaying the MAC address table [2-594](#)
 restarting [2-681](#)
 interface speed, configuring [2-741](#)
 interface vlan command [2-175](#)
 internal registers, displaying [2-462, 2-469, 2-472](#)
 Internet Group Management Protocol
 See IGMP
 ip access-group command [2-177](#)
 ip address command [2-180](#)
 IP addresses, setting [2-180](#)
 IP address matching [2-317](#)
 ip admission command [2-182](#)
 ip admission name proxy http command [2-183](#)
 ip arp inspection filter vlan command [2-185](#)
 ip arp inspection limit command [2-187](#)
 ip arp inspection log-buffer command [2-189](#)
 ip arp inspection trust command [2-191](#)
 ip arp inspection validate command [2-193](#)
 ip arp inspection vlan command [2-195](#)
 ip arp inspection vlan logging command [2-196](#)

IP DHCP snooping

See DHCP snooping

ip dhcp snooping binding command [2-200](#)

ip dhcp snooping command [2-199](#)

ip dhcp snooping database command [2-202](#)

ip dhcp snooping information option allow-untrusted command [2-206](#)

ip dhcp snooping information option command [2-204](#)

ip dhcp snooping information option format remote-id command [2-208](#)

ip dhcp snooping limit rate command [2-209](#)

ip dhcp snooping trust command [2-210](#)

ip dhcp snooping verify command [2-211](#)

ip dhcp snooping vlan command [2-212](#)

ip dhcp snooping vlan information option format-type circuit-id string command [2-213](#)

ip igmp filter command [2-215](#)

ip igmp max-groups command [2-217](#), [2-242](#), [2-244](#)

ip igmp profile command [2-219](#)

ip igmp snooping command [2-221](#)

ip igmp snooping last-member-query-interval command [2-223](#)

ip igmp snooping querier command [2-225](#)

ip igmp snooping report-suppression command [2-227](#)

ip igmp snooping tcn command [2-229](#)

ip igmp snooping tcn flood command [2-231](#)

ip igmp snooping vlan immediate-leave command [2-232](#)

ip igmp snooping vlan mrouter command [2-233](#)

ip igmp snooping vlan static command [2-235](#)

IP multicast addresses [2-365](#)

IP phones

auto-QoS configuration [2-50](#)

trusting packets sent from [2-358](#)

IP-precedence-to-DSCP map [2-332](#)

ip snap forwarding command [2-237](#)

ip source binding command [2-238](#)

IP source guard

disabling [2-246](#)

displaying

binding entries [2-545](#)

configuration [2-546](#)

dynamic binding entries only [2-528](#)

enabling [2-246](#)

static IP source bindings [2-238](#)

ip ssh command [2-240](#)

IPv6 access list, deny conditions [2-107](#)

ipv6 access-list command [2-248](#)

ipv6 address dhcp command [2-250](#)

ipv6 dhcp client request vendor command [2-251](#)

ipv6 dhcp ping packets command [2-252](#)

ipv6 dhcp pool command [2-254](#)

ipv6 dhcp server command [2-256](#)

ipv6 mld snooping command [2-258](#)

ipv6 mld snooping last-listener-query count command [2-260](#)

ipv6 mld snooping last-listener-query-interval command [2-262](#)

ipv6 mld snooping listener-message-suppression command [2-264](#)

ipv6 mld snooping robustness-variable command [2-266](#)

ipv6 mld snooping tcn command [2-268](#)

ipv6 mld snooping vlan command [2-270](#)

IPv6 SDM template [2-424](#)

ipv6 traffic-filter command [2-272](#)

ip verify source command [2-246](#)

J

jumbo frames

See MTU

L

l2protocol-tunnel command [2-274](#)

l2protocol-tunnel cos command [2-277](#)

LACP

See EtherChannel

lacp port-priority command [2-278](#)

lacp system-priority command [2-280](#)

- Layer 2 mode, enabling [2-761](#)
- Layer 2 protocol ports, displaying [2-565](#)
- Layer 2 protocol-tunnel
 - error detection for [2-157](#)
 - error recovery timer [2-161](#)
- Layer 2 protocol tunnel counters [2-87](#)
- Layer 2 protocol tunneling error recovery [2-275](#)
- Layer 2 traceroute
 - IP addresses [2-807](#)
 - MAC addresses [2-804](#)
- Layer 3 mode, enabling [2-761](#)
- line configuration mode [1-3, 1-5](#)
- Link Aggregation Control Protocol
 - See EtherChannel
- link flap
 - error detection for [2-157](#)
 - error recovery timer [2-161](#)
- link state group command [2-282](#)
- link state track command [2-284](#)
- load-distribution methods for EtherChannel [2-400](#)
- location (global configuration) command [2-285](#)
- location (interface configuration) command [2-287](#)
- logging file command [2-289](#)
- logical interface [2-171](#)
- loopback error
 - detection for [2-157](#)
 - recovery timer [2-161](#)
- loop guard, for spanning tree [2-706, 2-710](#)

M

- mab request format attribute 32 command [2-291](#)
- mac access-group command [2-293](#)
- MAC access-groups, displaying [2-582](#)
- MAC access list configuration mode [2-295](#)
- mac access-list extended command [2-295](#)
- MAC access lists [2-112](#)

- MAC addresses
 - disabling MAC address learning per VLAN [2-298](#)
 - displaying
 - aging time [2-588](#)
 - all [2-586](#)
 - dynamic [2-592](#)
 - MAC address-table move updates [2-597](#)
 - notification settings [2-596, 2-599](#)
 - number of addresses in a VLAN [2-590](#)
 - per interface [2-594](#)
 - per VLAN [2-603](#)
 - static [2-601](#)
 - static and dynamic entries [2-584](#)
 - dynamic
 - aging time [2-297](#)
 - deleting [2-90](#)
 - displaying [2-592](#)
 - enabling MAC address notification [2-302](#)
 - enabling MAC address-table move update [2-300](#)
 - matching [2-317](#)
 - persistent stack [2-749](#)
 - static
 - adding and removing [2-304](#)
 - displaying [2-601](#)
 - dropping on an interface [2-305](#)
 - tables [2-586](#)
- MAC address notification, debugging [B-21](#)
- mac address-table aging-time [2-293, 2-317](#)
- mac address-table aging-time command [2-297](#)
- mac address-table learning command [2-298](#)
- mac address-table move update command [2-300](#)
- mac address-table notification command [2-302](#)
- mac address-table static command [2-304](#)
- mac address-table static drop command [2-305](#)
- MAC frames
 - See MTU
- macro apply command [2-307](#)

- macro description command [2-310](#)
- macro global command [2-311](#)
- macro global description command [2-314](#)
- macro name command [2-315](#)
- macros
 - adding a description [2-310](#)
 - adding a global description [2-314](#)
 - applying [2-311](#)
 - creating [2-315](#)
 - displaying [2-635](#)
 - interface range [2-102, 2-173](#)
 - specifying parameter values [2-311](#)
 - tracing [2-311](#)
- maps
 - QoS
 - defining [2-332](#)
 - displaying [2-613](#)
 - VLAN
 - creating [2-823](#)
 - defining [2-317](#)
 - displaying [2-672](#)
- match (access-map configuration) command [2-317](#)
- match (class-map configuration) command [2-319](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-322](#)
- memory (boot loader) command [A-14](#)
- mgmt_clr (boot loader) command [A-16](#)
- mgmt_init (boot loader) command [A-17, A-18](#)
- mkdir (boot loader) command [A-19](#)
- MLD snooping
 - configuring [2-264, 2-266](#)
 - configuring queries [2-260, 2-262](#)
 - configuring topology change notification [2-268](#)
 - displaying [2-555, 2-557, 2-559, 2-561](#)
 - enabling [2-258](#)
 - enabling on a VLAN [2-270](#)
- mls qos aggregate-policer command [2-326](#)
- mls qos command [2-324](#)
- mls qos cos command [2-328](#)
- mls qos dscp-mutation command [2-330](#)
- mls qos map command [2-332](#)
- mls qos queue-set output buffers command [2-336](#)
- mls qos queue-set output threshold command [2-338](#)
- mls qos rewrite ip dscp command [2-340](#)
- mls qos srr-queue input bandwidth command [2-342](#)
- mls qos srr-queue input buffers command [2-344](#)
- mls qos srr-queue input cos-map command [2-346](#)
- mls qos srr-queue input dscp-map command [2-348](#)
- mls qos srr-queue input priority-queue command [2-350](#)
- mls qos srr-queue input threshold command [2-352](#)
- mls qos srr-queue output cos-map command [2-354](#)
- mls qos srr-queue output dscp-map command [2-356](#)
- mls qos trust command [2-358](#)
- mls qos vlan-based command [2-360](#)
- mode, MVR [2-365](#)
- Mode button, and password recovery [2-427](#)
- modes, commands [1-2](#)
- monitor session command [2-361](#)
- more (boot loader) command [A-20](#)
- MSTP
 - displaying [2-649](#)
 - interoperability [2-97](#)
 - link type [2-708](#)
 - MST region
 - aborting changes [2-714](#)
 - applying changes [2-714](#)
 - configuration name [2-714](#)
 - configuration revision number [2-714](#)
 - current or pending display [2-714](#)
 - displaying [2-649](#)
 - MST configuration mode [2-714](#)
 - VLANs-to-instance mapping [2-714](#)
 - path cost [2-716](#)
 - protocol mode [2-712](#)
 - restart protocol migration process [2-97](#)

MSTP (continued)

root port

- loop guard [2-706](#)
- preventing from becoming designated [2-706](#)
- restricting which can be root [2-706](#)
- root guard [2-706](#)

root switch

- affects of extended system ID [2-704](#)
- hello-time [2-719, 2-726](#)
- interval between BPDU messages [2-720](#)
- interval between hello BPDU messages [2-719, 2-726](#)
- max-age [2-720](#)
- maximum hop count before discarding BPDU [2-721](#)
- port priority for selection of [2-722](#)
- primary or secondary [2-726](#)
- switch priority [2-725](#)

state changes

- blocking to forwarding state [2-733](#)
- enabling BPDU filtering [2-696, 2-730](#)
- enabling BPDU guard [2-698, 2-730](#)
- enabling Port Fast [2-730, 2-733](#)
- forward-delay time [2-718](#)
- length of listening and learning states [2-718](#)
- rapid transition to forwarding [2-708](#)
- shutting down Port Fast-enabled ports [2-730](#)

state information display [2-648](#)

MTU

- configuring size [2-801](#)
- displaying global setting [2-661](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-368](#)multicast groups, MVR [2-366](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-233](#)multicast router ports, configuring [2-233](#)multicast router ports, IPv6 [2-270](#)multicast storm control [2-751](#)multicast VLAN, MVR [2-365](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-139](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

- configuring [2-365](#)
- configuring interfaces [2-368](#)
- debug messages, display [B-25](#)
- displaying [2-622](#)
- displaying interface information [2-624](#)
- members, displaying [2-626](#)
- mvr (global configuration) command [2-365](#)
- mvr (interface configuration) command [2-368](#)
- mvr vlan group command [2-369](#)

Nnative VLANs [2-793](#)native VLAN tagging [2-826](#)network-policy (global configuration) command [2-371](#)network-policy command [2-370](#)network-policy profile (network-policy configuration) command [2-372](#)nmsp attachment suppress command [2-375](#)nmsp command [2-374](#)

nonegotiate

DTP messaging [2-778](#)

non-IP protocols

denying [2-112](#)forwarding [2-389](#)non-IP traffic access lists [2-295](#)

non-IP traffic forwarding

denying [2-112](#)permitting [2-389](#)non-stop forwarding [2-376](#)

normal-range VLANs [2-816](#), [2-822](#)

no vlan command [2-816](#)

nsf command [2-376](#)

O

online diagnostics

configuring health monitoring diagnostic tests [2-115](#)

displaying

configured boot-up coverage level [2-476](#)

current scheduled tasks [2-476](#)

event logs [2-476](#)

supported test suites [2-476](#)

test ID [2-476](#)

test results [2-476](#)

test statistics [2-476](#)

enabling

scheduling [2-117](#)

syslog messages [2-115](#)

global configuration mode

clearing health monitoring diagnostic test schedule [2-115](#)

clearing test-based testing schedule [2-117](#)

setting health monitoring diagnostic testing [2-115](#)

setting test-based testing [2-117](#)

setting up health monitoring diagnostic test schedule [2-115](#)

setting up test-based testing [2-117](#)

removing scheduling [2-117](#)

scheduled switchover

disabling [2-117](#)

enabling [2-117](#)

setting test interval [2-117](#)

specifying health monitoring diagnostic tests [2-115](#)

starting testing [2-119](#)

P

PAGP

See EtherChannel

pagp learn-method command [2-378](#)

pagp port-priority command [2-380](#)

password, VTP [2-836](#)

password-recovery mechanism, enabling and disabling [2-427](#)

permit (ARP access-list configuration) command [2-382](#)

permit (IPv6) command [2-384](#)

permit (MAC access-list configuration) command [2-389](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-378](#)

PID, displaying [2-522](#)

PIM-DVMRP, as multicast router learning method [2-233](#)

platform chassis-management command [2-392](#)

police aggregate command [2-395](#)

police command [2-393](#)

policed-DSCP map [2-332](#)

policy-map command [2-397](#)

policy maps

applying to an interface [2-429](#), [2-435](#)

creating [2-397](#)

displaying [2-638](#)

hierarchical [2-398](#)

policers

displaying [2-606](#)

for a single class [2-393](#)

for multiple classes [2-326](#), [2-395](#)

policed-DSCP map [2-332](#)

traffic classification

defining the class [2-72](#)

defining trust states [2-809](#)

setting DSCP or IP precedence values [2-433](#)

Port Aggregation Protocol

See EtherChannel

- port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-153](#)
 - debug messages, display [B-8](#)
 - enabling guest VLAN supplicant [2-125, 2-136](#)
 - enabling IEEE 802.1x
 - globally [2-122](#)
 - per interface [2-146](#)
 - guest VLAN [2-137](#)
 - host modes [2-139](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-140](#)
 - MAC authentication bypass [2-141](#)
 - manual control of authorization state [2-146](#)
 - multiple hosts on authorized port [2-139](#)
 - PAE as authenticator [2-145](#)
 - periodic re-authentication
 - enabling [2-149](#)
 - time between attempts [2-151](#)
 - quiet period between failed authentication exchanges [2-151](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-148](#)
 - resetting configurable IEEE 802.1x parameters [2-135](#)
 - switch-to-authentication server retransmission time [2-151](#)
 - switch-to-client frame-retransmission number [2-143 to 2-144](#)
 - switch-to-client retransmission time [2-151](#)
 - port-channel load-balance command [2-400](#)
 - Port Fast, for spanning tree [2-733](#)
 - port ranges, defining [2-100, 2-102](#)
 - ports, debugging [B-75](#)
 - ports, protected [2-791](#)
 - port security
 - aging [2-785](#)
 - debug messages, display [B-77](#)
 - enabling [2-780](#)
 - violation error recovery [2-161](#)
 - port trust states for QoS [2-358](#)
 - port types, MVR [2-368](#)
 - power information, displaying [2-491](#)
 - priority-queue command [2-402](#)
 - priority value, stack member [2-656, 2-756](#)
 - private-vlan command [2-404](#)
 - private-vlan mapping command [2-407](#)
 - private VLANs
 - association [2-789](#)
 - configuring [2-404](#)
 - configuring ports [2-776](#)
 - displaying [2-667](#)
 - host ports [2-776](#)
 - mapping
 - configuring [2-789](#)
 - displaying [2-507](#)
 - promiscuous ports [2-776](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-522](#)
 - promiscuous ports, private VLANs [2-776](#)
 - protected ports, displaying [2-513](#)
 - pruning
 - VLANs [2-793](#)
 - VTP
 - displaying interface information [2-507](#)
 - enabling [2-836](#)
 - pruning-eligible VLAN list [2-795](#)
 - PVST+
 - See STP
-
- ## Q
- QoS
 - auto-QoS
 - configuring [2-50](#)
 - debug messages, display [B-4](#)
 - displaying [2-449](#)
 - class maps
 - creating [2-74](#)
 - defining the match criteria [2-319](#)
 - displaying [2-459](#)

QoS (continued)

defining the CoS value for an incoming packet [2-328](#)

displaying configuration information [2-449, 2-605](#)

DSCP transparency [2-340](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-330](#)

defining DSCP-to-DSCP-mutation map [2-332](#)

egress queues

allocating buffers [2-336](#)

defining the CoS output queue threshold map [2-354](#)

defining the DSCP output queue threshold map [2-356](#)

displaying buffer allocations [2-609](#)

displaying CoS output queue threshold map [2-613](#)

displaying DSCP output queue threshold map [2-613](#)

displaying queueing strategy [2-609](#)

displaying queue-set settings [2-616](#)

enabling bandwidth shaping and scheduling [2-745](#)

enabling bandwidth sharing and scheduling [2-747](#)

limiting the maximum output on a port [2-743](#)

mapping a port to a queue-set [2-409](#)

mapping CoS values to a queue and threshold [2-354](#)

mapping DSCP values to a queue and threshold [2-356](#)

setting maximum and reserved memory allocations [2-338](#)

setting WTD thresholds [2-338](#)

enabling [2-324](#)

ingress queues

allocating buffers [2-344](#)

assigning SRR scheduling weights [2-342](#)

defining the CoS input queue threshold map [2-346](#)

defining the DSCP input queue threshold map [2-348](#)

displaying buffer allocations [2-609](#)

displaying CoS input queue threshold map [2-613](#)

displaying DSCP input queue threshold map [2-613](#)

displaying queueing strategy [2-609](#)

displaying settings for [2-607](#)

enabling the priority queue [2-350](#)

mapping CoS values to a queue and threshold [2-346](#)

mapping DSCP values to a queue and threshold [2-348](#)

setting WTD thresholds [2-352](#)

maps

defining [2-332, 2-346, 2-348, 2-354, 2-356](#)

displaying [2-613](#)

policy maps

applying an aggregate policer [2-395](#)

applying to an interface [2-429, 2-435](#)

creating [2-397](#)

defining policers [2-326, 2-393](#)

displaying policers [2-606](#)

displaying policy maps [2-638](#)

hierarchical [2-398](#)

policed-DSCP map [2-332](#)

setting DSCP or IP precedence values [2-433](#)

traffic classifications [2-72](#)

trust states [2-809](#)

port trust states [2-358](#)

queues, enabling the expedite [2-402](#)

statistics

in-profile and out-of-profile packets [2-609](#)

packets enqueued or dropped [2-609](#)

sent and received CoS values [2-609](#)

sent and received DSCP values [2-609](#)

trusted boundary for IP phones [2-358](#)

VLAN-based [2-360](#)

quality of service

See QoS

querytime, MVR [2-365](#)

queue-set command [2-409](#)

R

radius-server dead-criteria command [2-410](#)
radius-server host command [2-412](#)
rapid per-VLAN spanning-tree plus
 See STP
rapid PVST+
 See STP
re-authenticating IEEE 802.1x-enabled ports [2-148](#)
re-authentication
 periodic [2-149](#)
 time between attempts [2-151](#)
receiver ports, MVR [2-368](#)
receiving flow-control packets [2-167](#)
recovery mechanism
 causes [2-161](#)
 display [2-78](#), [2-456](#), [2-493](#), [2-496](#)
 timer interval [2-161](#)
reload command [2-414](#)
remote command [2-416](#)
remote-span command [2-418](#)
Remote Switched Port Analyzer
 See RSPAN
rename (boot loader) command [A-21](#)
renew ip dhcp snooping database command [2-420](#)
reset (boot loader) command [A-22](#)
resource templates, displaying [2-643](#)
restricted VLAN
 See dot1x auth-fail vlan
rmdir (boot loader) command [A-23](#)
rmon collection stats command [2-423](#)
root guard, for spanning tree [2-706](#)
routed ports
 IP addresses on [2-181](#)
 number supported [2-181](#)
routing frames
 See MTU

RSPAN

configuring [2-361](#)
displaying [2-619](#)
filter RSPAN traffic [2-361](#)
remote-span command [2-418](#)
sessions
 add interfaces to [2-361](#)
 displaying [2-619](#)
 start new [2-361](#)

S

scheduled switchover
 disabling [2-117](#)
 enabling [2-117](#)
SDM mismatch mode [2-425](#), [2-657](#)
sdm prefer command [2-424](#)
SDM templates
 allowed resources [2-425](#)
 and stacking [2-425](#)
 displaying [2-643](#)
 dual IPv4 and IPv6 [2-424](#)
secure ports, limitations [2-782](#)
sending flow-control packets [2-167](#)
service password-recovery command [2-427](#)
service-policy command [2-429](#)
session command [2-432](#)
set (boot loader) command [A-24](#)
set command [2-433](#)
setup command [2-435](#)
setup express command [2-438](#)
show access-lists command [2-440](#)
show archive status command [2-443](#)
show arp access-list command [2-444](#)
show authentication command [2-445](#)
show auto qos command [2-449](#)
show boot command [2-453](#)

- show cable-diagnostics tdr command [2-456](#)
- show cisp command [2-458](#)
- show class-map command [2-459](#)
- show controllers cpu-interface command [2-460](#)
- show controllers ethernet-controller command [2-462](#)
- show controllers ethernet-controller fastethernet command [2-469](#)
- show controllers team command [2-472](#)
- show controller utilization command [2-474](#)
- show dot1q-tunnel command [2-481](#)
- show dot1x command [2-482](#)
- show dtp [2-486](#)
- show eap command [2-488](#)
- show env command [2-491](#)
- show errdisable detect command [2-493](#)
- show errdisable flap-values command [2-495](#)
- show errdisable recovery command [2-496](#)
- show etherchannel command [2-498](#)
- show fallback profile command [2-501](#)
- show flowcontrol command [2-503](#)
- show idprom command [2-505](#)
- show interfaces command [2-507](#)
- show interfaces counters command [2-519](#)
- show inventory command [2-522](#)
- show ip arp inspection command [2-523](#)
- show ipc command [2-548](#)
- show ip dhcp snooping binding command [2-528](#)
- show ip dhcp snooping command [2-527](#)
- show ip dhcp snooping database command [2-530, 2-532](#)
- show ip igmp profile command [2-535](#)
- show ip igmp snooping address command [2-557](#)
- show ip igmp snooping command [2-536, 2-555](#)
- show ip igmp snooping groups command [2-539](#)
- show ip igmp snooping mrouter command [2-541, 2-559](#)
- show ip igmp snooping querier command [2-543, 2-561](#)
- show ip source binding command [2-545](#)
- show ipv6 access-list command [2-552](#)
- show ipv6 dhcp conflict command [2-554](#)
- show ipv6 route updated [2-563](#)
- show ip verify source command [2-546](#)
- show l2protocol-tunnel command [2-565](#)
- show lacp command [2-568](#)
- show link state group command [2-572](#)
- show location [2-574](#)
- show location command [2-574](#)
- show logging command [2-577](#)
- show mac access-group command [2-582](#)
- show mac address-table address command [2-586](#)
- show mac address-table aging time command [2-588](#)
- show mac address-table command [2-584](#)
- show mac address-table count command [2-590](#)
- show mac address-table dynamic command [2-592](#)
- show mac address-table interface command [2-594](#)
- show mac address-table learning command [2-596](#)
- show mac address-table move update command [2-597](#)
- show mac address-table notification command [2-91, 2-599, B-23](#)
- show mac address-table static command [2-601](#)
- show mac address-table vlan command [2-603](#)
- show mls qos aggregate-policer command [2-606](#)
- show mls qos command [2-605](#)
- show mls qos input-queue command [2-607](#)
- show mls qos interface command [2-609](#)
- show mls qos maps command [2-613](#)
- show mls qos queue-set command [2-616](#)
- show mls qos vlan command [2-618](#)
- show monitor command [2-619](#)
- show mvr command [2-622](#)
- show mvr interface command [2-624](#)
- show mvr members command [2-626](#)
- show network-policy profile command [2-628](#)
- show nmsp command [2-630](#)
- show pagp command [2-633](#)
- show parser macro command [2-635](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform chassis command [C-4](#)
- show platform configuration command [C-6](#)

- show platform dl command [C-7](#)
- show platform etherchannel command [C-8](#)
- show platform forward command [C-9](#)
- show platform frontend-controller command [C-11](#)
- show platform igmp snooping command [C-12](#)
- show platform ipc trace command [C-20](#)
- show platform ip multicast command [C-14](#)
- show platform ip unicast command [C-15](#)
- show platform ipv6 unicast command [C-21](#)
- show platform ip wccp command [C-19](#)
- show platform layer4op command [C-23](#)
- show platform mac-address-table command [C-24](#)
- show platform messaging command [C-25](#)
- show platform monitor command [C-26](#)
- show platform mvr table command [C-27](#)
- show platform pm command [C-28](#)
- show platform port-asic command [C-30](#)
- show platform port-security command [C-35](#)
- show platform qos command [C-36](#)
- show platform resource-manager command [C-37](#)
- show platform snmp counters command [C-39](#)
- show platform spanning-tree command [C-40](#)
- show platform stack-manager command [C-42](#)
- show platform stp-instance command [C-41](#)
- show platform summary command [C-46](#)
- show platform tb command [C-47](#)
- show platform team command [C-49](#)
- show platform vlan command [C-52](#)
- show policy-map command [2-638](#)
- show port security command [2-640](#)
- show sdm prefer command [2-643](#)
- show setup express command [2-647](#)
- show spanning-tree command [2-648](#)
- show storm-control command [2-654](#)
- show switch command [2-656](#)
- show system mtu command [2-661](#)
- show trust command [2-809](#)
- show uddl command [2-662](#)
- show version command [2-665](#)
- show vlan access-map command [2-672](#)
- show vlan command [2-667](#)
- show vlan command, fields [2-669](#)
- show vlan filter command [2-673](#)
- show vmps command [2-674](#)
- show vtp command [2-676](#)
- shutdown command [2-681](#)
- shutdown threshold, Layer 2 protocol tunneling [2-274](#)
- shutdown vlan command [2-682](#)
- small violation-rate command [2-683](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-689](#)
- SNMP informs, enabling the sending of [2-685](#)
- snmp-server enable traps command [2-685](#)
- snmp-server host command [2-689](#)
- snmp trap mac-notification command [2-693](#)
- SNMP traps
 - enabling MAC address notification trap [2-693](#)
 - enabling the MAC address notification feature [2-302](#)
 - enabling the sending of [2-685](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-104](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-665](#)
- source ports, MVR [2-368](#)
- SPAN
 - configuring [2-361](#)
 - debug messages, display [B-24](#)
 - displaying [2-619](#)
 - filter SPAN traffic [2-361](#)

SPAN (continued)

sessions

add interfaces to [2-361](#)displaying [2-619](#)start new [2-361](#)spanning-tree backbonefast command [2-695](#)spanning-tree bpdudfilter command [2-696](#)spanning-tree bpduguard command [2-698](#)spanning-tree cost command [2-700](#)spanning-tree etherchannel command [2-702](#)spanning-tree extend system-id command [2-704](#)spanning-tree guard command [2-706](#)spanning-tree link-type command [2-708](#)spanning-tree loopguard default command [2-710](#)spanning-tree mode command [2-712](#)spanning-tree mst configuration command [2-714](#)spanning-tree mst cost command [2-716](#)spanning-tree mst forward-time command [2-718](#)spanning-tree mst hello-time command [2-719](#)spanning-tree mst max-age command [2-720](#)spanning-tree mst max-hops command [2-721](#)spanning-tree mst port-priority command [2-722](#)spanning-tree mst pre-standard command [2-724](#)spanning-tree mst priority command [2-725](#)spanning-tree mst root command [2-726](#)spanning-tree portfast (global configuration)
command [2-730](#)spanning-tree portfast (interface configuration)
command [2-733](#)spanning-tree port-priority command [2-728](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [2-735](#)spanning-tree uplinkfast command [2-736](#)spanning-tree vlan command [2-738](#)speed command [2-741](#)srr-queue bandwidth limit command [2-743](#)srr-queue bandwidth shape command [2-745](#)srr-queue bandwidth share command [2-747](#)SSH, configuring version [2-240](#)stack-mac persistent timer command [2-749](#)

stack member

access [2-432](#)number [2-656, 2-759](#)priority value [2-756](#)provisioning [2-757](#)reloading [2-414](#)

stacks, switch

disabling a member [2-754](#)enabling a member [2-754](#)MAC address [2-749](#)provisioning a new member [2-757](#)reloading [2-414](#)stack member access [2-432](#)stack member number [2-656, 2-759](#)stack member priority value [2-656, 2-756](#)static-access ports, configuring [2-763](#)statistics, Ethernet group [2-423](#)sticky learning, enabling [2-780](#)storm-control command [2-751](#)

STP

BackboneFast [2-695](#)counters, clearing [2-96](#)

debug messages, display

BackboneFast events [B-81](#)MSTP [B-84](#)optimized BPDUs handling [B-83](#)spanning-tree activity [B-79](#)switch shim [B-86](#)transmitted and received BPDUs [B-82](#)UplinkFast [B-88](#)detection of indirect link failures [2-695](#)enabling protocol tunneling for [2-274](#)EtherChannel misconfiguration [2-702](#)extended system ID [2-704](#)path cost [2-700](#)protocol modes [2-712](#)

STP (continued)

root port

- accelerating choice of new [2-736](#)
- loop guard [2-706](#)
- preventing from becoming designated [2-706](#)
- restricting which can be root [2-706](#)
- root guard [2-706](#)
- UplinkFast [2-736](#)

root switch

- affects of extended system ID [2-704, 2-739](#)
- hello-time [2-738](#)
- interval between BPDU messages [2-738](#)
- interval between hello BPDU messages [2-738](#)
- max-age [2-738](#)
- port priority for selection of [2-728](#)
- primary or secondary [2-738](#)
- switch priority [2-738](#)

state changes

- blocking to forwarding state [2-733](#)
- enabling BPDU filtering [2-696, 2-730](#)
- enabling BPDU guard [2-698, 2-730](#)
- enabling Port Fast [2-730, 2-733](#)
- enabling timer to recover from error state [2-161](#)
- forward-delay time [2-738](#)
- length of listening and learning states [2-738](#)
- shutting down Port Fast-enabled ports [2-730](#)

state information display [2-648](#)VLAN options [2-725, 2-738](#)SVIs, creating [2-175](#)SVI status calculation [2-765](#)

Switched Port Analyzer

See SPAN

switching characteristics

- modifying [2-761](#)
- returning to interfaces [2-761](#)

switchport access command [2-763](#)switchport autostate exclude command [2-765](#)switchport backup interface command [2-767](#)switchport block command [2-770](#)switchport command [2-761](#)switchport host command [2-772](#)switchport mode command [2-773](#)switchport mode private-vlan command [2-776](#)switchport nonegotiate command [2-778](#)switchport port-security aging command [2-785](#)switchport port-security command [2-780](#)switchport priority extend command [2-787](#)switchport private-vlan command [2-789](#)switchport protected command [2-791](#)switchports, displaying [2-507](#)switchport trunk command [2-793](#)switchport voice detect [2-796](#)switchport voice vlan command [2-797](#)switch priority command [2-754, 2-756](#)switch provision command [2-757](#)switch renumber command [2-759](#)system env temperature threshold yellow command [2-799](#)system message logging, save message to flash [2-289](#)system mtu command [2-801](#)system resource templates [2-424](#)

T
tar files, creating, listing, and extracting [2-15](#)TDR, running [2-803](#)temperature information, displaying [2-491](#)templates, system resources [2-424](#)test cable-diagnostics tdr command [2-803](#)traceroute mac command [2-804](#)traceroute mac ip command [2-807](#)trunking, VLAN mode [2-773](#)trunk mode [2-773](#)trunk ports [2-773](#)trunks, to non-DTP device [2-774](#)trusted boundary for QoS [2-358](#)trusted port states for QoS [2-358](#)tunnel ports, Layer 2 protocol, displaying [2-565](#)type (boot loader) command [A-27](#)

U

UDLD

- aggressive mode [2-811, 2-813](#)
- debug messages, display [B-96](#)
- enable globally [2-811](#)
- enable per interface [2-813](#)
- error recovery timer [2-161](#)
- message timer [2-811](#)
- normal mode [2-811, 2-813](#)
- reset a shutdown interface [2-815](#)
- status [2-662](#)

udld command [2-811](#)

udld port command [2-813](#)

udld reset command [2-815](#)

unicast storm control [2-751](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-770](#)

unknown unicast traffic, preventing [2-770](#)

unset (boot loader) command [A-28](#)

upgrading

- copying software images [2-8](#)
- downloading software images [2-11](#)
- software images, monitoring status of [2-443](#)

UplinkFast, for STP [2-736](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-30](#)

version mismatch mode [2-657, C-43](#)

vlan (global configuration) command [2-816](#)

vlan (VLAN configuration) command [2-822](#)

vlan access-map command [2-823](#)

VLAN access map configuration mode [2-823](#)

VLAN access maps

- actions [2-6](#)
- displaying [2-672](#)

VLAN-based QoS [2-360](#)

VLAN configuration

- rules [2-819](#)
- saving [2-816](#)

VLAN configuration mode

- commands
 - VLAN [2-822](#)
 - VTP [2-841](#)

description [1-4](#)

entering [2-825](#)

summary [1-3](#)

vlan database command [2-825](#)

vlan dot1q tag native command [2-826](#)

vlan filter command [2-828](#)

VLAN filters, displaying [2-673](#)

VLAN ID range [2-816](#)

VLAN maps

- applying [2-828](#)
- creating [2-823](#)
- defining [2-317](#)
- displaying [2-672](#)

VLAN Query Protocol

See VQP

VLANs

- adding [2-816](#)
- configuring [2-816, 2-822](#)
- debug messages, display
 - ISL [B-92](#)
 - VLAN IOS file system error tests [B-91](#)
 - VLAN manager activity [B-89](#)
 - VTP [B-94](#)
- displaying configurations [2-667](#)
- extended-range [2-816](#)
- MAC addresses
 - displaying [2-603](#)
 - number of [2-590](#)
- media types [2-819](#)
- normal-range [2-816, 2-822](#)

VLANs (continued)

private [2-776](#) configuring [2-404](#) displaying [2-667](#)

See also private VLANs

restarting [2-682](#)saving the configuration [2-816](#)shutting down [2-682](#)SNMP traps for VTP [2-687, 2-690](#)suspending [2-682](#)

VLAN Trunking Protocol

See VTP

VM mode [2-657, C-43](#)

VMPS

 configuring servers [2-833](#) displaying [2-674](#) error recovery timer [2-161](#) reconfirming dynamic VLAN assignments [2-830](#)vmps reconfirm (global configuration) command [2-831](#)vmps reconfirm (privileged EXEC) command [2-830](#)vmps retry command [2-832](#)vmps server command [2-833](#)

voice VLAN

 configuring [2-796, 2-797](#) setting port priority [2-787](#)

VQP

 and dynamic-access ports [2-764](#) clearing client statistics [2-98](#) displaying information [2-674](#) per-server retry count [2-832](#) reconfirmation interval [2-831](#) reconfirming dynamic VLAN assignments [2-830](#)

VTP

 changing characteristics [2-835](#) clearing pruning counters [2-99](#)

configuring

 domain name [2-835](#) file name [2-835](#) mode [2-835](#) password [2-836](#) counters display fields [2-677](#) displaying information [2-676](#)

enabling

 pruning [2-836](#) tunneling for [2-274](#) Version 2 [2-836](#) enabling per port [2-840](#) mode [2-835](#) pruning [2-836](#) saving the configuration [2-816](#) statistics [2-676](#) status [2-676](#) status display fields [2-679](#)vtp (global configuration) command [2-835](#)vtp (VLAN configuration) command [2-841](#)vtp interface configuration) command [2-840](#)vtp primary command [2-842](#)

