



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-752](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-141](#)
 MAC, displaying [2-519](#)
access list, IPv6 [2-206](#)
access map configuration mode [2-264](#)
access mode [2-695](#)
access ports [2-695](#)
ACEs [2-82](#), [2-335](#)
ACLs
 deny [2-80](#)
 displaying [2-382](#)
 for non-IP protocols [2-243](#)
 IP [2-141](#)
 matching [2-264](#)
 on Layer 2 interfaces [2-141](#)
 permit [2-333](#)
action command [2-6](#)
aggregate-port learner [2-321](#)
allowed VLANs [2-715](#)
apply command [2-752](#)
archive copy-sw command [2-8](#)
archive download-sw command [2-11](#)

archive tar command [2-15](#)
archive upload-sw command [2-18](#)
arp access-list command [2-20](#)
audience [xix](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-113](#)
autonegotiation of duplex mode [2-121](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-621](#)
backup interfaces
 configuring [2-690](#)
 displaying [2-446](#)
boot (boot loader) command [A-2](#)
boot auto-copy-sw command [2-26](#)
boot auto-download-sw command [2-27](#)
boot boothlpr command [2-29](#)
boot config-file command [2-30](#)
boot enable-break command [2-31](#)
boot helper command [2-32](#)
boot helper-config file command [2-33](#)
booting
 Cisco IOS image [2-36](#)
 displaying environment variables [2-392](#)
 interrupting [2-31](#)
 manually [2-34](#)

boot loader

accessing [A-1](#)

booting

Cisco IOS image [A-2](#)helper image [2-32](#)

directories

creating [A-15](#)displaying a list of [A-7](#)removing [A-19](#)

displaying

available commands [A-12](#)memory heap utilization [A-13](#)version [A-26](#)

environment variables

described [A-20](#)displaying settings [A-20](#)location of [A-21](#)setting [A-20](#)unsetting [A-24](#)

files

copying [A-5](#)deleting [A-6](#)displaying a list of [A-7](#)displaying the contents of [A-4, A-16, A-23](#)renaming [A-17](#)

file system

formatting [A-10](#)initializing flash [A-9](#)running a consistency check [A-11](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-34](#)boot private-config-file command [2-35](#)boot system command [2-36](#)BPDU filtering, for spanning tree [2-622, 2-657](#)BPDU guard, for spanning tree [2-624, 2-657](#)broadcast storm control [2-678](#)

Ccat (boot loader) command [A-4](#)caution, description **xx**CDP, enabling protocol tunneling for [2-224](#)channel-group command [2-38](#)channel-protocol command [2-42](#)

Cisco Network Assistant

See Network Assistant

Cisco SoftPhone

auto-QoS configuration [2-22](#)trusting packets sent from [2-305](#)class command [2-44](#)class-map command [2-46](#)

class maps

creating [2-46](#)defining the match criteria [2-266](#)displaying [2-397](#)

class of service

See CoS

clear dot1x command [2-48](#)clear eap command [2-49](#)clear errdisable interface [2-50](#)clear ip arp inspection log command [2-51](#)clear ip arp inspection statistics command [2-52](#)clear ipc command [2-55](#)clear ip dhcp snooping database command [2-53](#)clear l2protocol-tunnel counters command [2-56](#)clear lacp command [2-57](#)clear logging command [2-58](#)clear mac address-table command [2-59, 2-60](#)clear pagp command [2-61](#)clear port-security command [2-62](#)clear spanning-tree counters command [2-64](#)clear spanning-tree detected-protocols command [2-65](#)clear vmps statistics command [2-66](#)clear vtp counters command [2-67](#)command modes defined [1-2](#)

configuration, initial
 See getting started guide and hardware installation guide

configuration files
 password recovery disable considerations [A-1](#)
 specifying the name [2-30, 2-35](#)

configuring multiple interfaces [2-136](#)

config-vlan mode
 commands [2-738](#)
 description [1-4](#)
 entering [2-737](#)
 summary [1-3](#)

conventions
 command [xix](#)
 for examples [xx](#)
 publication [xix](#)
 text [xix](#)

copy (boot loader) command [A-5](#)

copy logging onboard command [2-68](#)

CoS
 assigning default value to incoming packets [2-275](#)
 assigning to Layer 2 protocol packets [2-227](#)
 overriding the incoming value [2-275](#)

CoS-to-DSCP map [2-279](#)

CPU ASIC statistics, displaying [2-398](#)

crashinfo files [2-127](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug fastethernet command [B-9](#)

debug interface command [B-12](#)

debug ip dhcp snooping command [B-10](#)

debug ip igmp filter command [B-13](#)

debug ip igmp max-groups command [B-14](#)

debug ip igmp snooping command [B-15](#)

debug ip verify source packet command [B-11](#)

debug lacp command [B-16](#)

debug mac-notification command [B-17](#)

debug matm command [B-18](#)

debug matm move update command [B-19](#)

debug monitor command [B-20](#)

debug mvrdbg command [B-21](#)

debug nvram command [B-22](#)

debug pagp command [B-23](#)

debug platform acl command [B-24](#)

debug platform backup interface command [B-26](#)

debug platform cli-redirection main command [B-27](#)

debug platform configuration command [B-28](#)

debug platform cpu-queues command [B-29](#)

debug platform device-manager command [B-31](#)

debug platform dot1x command [B-32](#)

debug platform etherchannel command [B-33](#)

debug platform fallback-bridging command [B-34](#)

debug platform ip arp inspection command [B-35](#)

debug platform ipc command [B-44](#)

debug platform ip dhcp command [B-36](#)

debug platform ip igmp snooping command [B-37](#)

debug platform ip multicast command [B-39](#)

debug platform ip unicast command [B-41](#)

debug platform ip wccp command [B-43](#)

debug platform led command [B-45](#)

debug platform matm command [B-46](#)

debug platform messaging application command [B-47](#)

debug platform phy command [B-48](#)

debug platform pm command [B-50](#)

debug platform port-asic command [B-52](#)

debug platform port-security command [B-53](#)

debug platform qos-acl-tcam command [B-54](#)

debug platform remote-commands command [B-55](#)

debug platform resource-manager command [B-56](#)

debug platform snmp command [B-57](#)

debug platform span command [B-58](#)

- debug platform stack-manager command [B-59](#)
- debug platform supervisor-asic command [B-60](#)
- debug platform sw-bridge command [B-61](#)
- debug platform team command [B-62](#)
- debug platform udd command [B-65](#)
- debug platform vlan command [B-66](#)
- debug pm command [B-67](#)
- debug port-security command [B-69](#)
- debug qos-manager command [B-70](#)
- debug spanning-tree backbonefast command [B-73](#)
- debug spanning-tree bpdu command [B-74](#)
- debug spanning-tree bpdu-opt command [B-75](#)
- debug spanning-tree command [B-71](#)
- debug spanning-tree mstp command [B-76](#)
- debug spanning-tree switch command [B-78](#)
- debug spanning-tree uplinkfast command [B-80](#)
- debug sw-vlan command [B-81](#)
- debug sw-vlan ifs command [B-83](#)
- debug sw-vlan notification command [B-84](#)
- debug sw-vlan vtp command [B-86](#)
- debug udd command [B-88](#)
- debug vqpc command [B-90](#)
- define interface-range command [2-70](#)
- delete (boot loader) command [A-6](#)
- delete command [2-72](#)
- deny (ARP access-list configuration) command [2-73](#)
- deny (IPv6) command [2-75](#)
- deny command [2-80](#)
- detect mechanism, causes [2-122](#)
- device manager requirements [xx](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-169](#)
 - enabling
 - on a VLAN [2-175](#)
 - option 82 [2-167, 2-169](#)
 - trust on an interface [2-173](#)
 - error recovery timer [2-124](#)
 - rate limiting [2-172](#)
- DHCP snooping binding database
 - binding file, configuring [2-165](#)
 - bindings
 - adding [2-163](#)
 - deleting [2-163](#)
 - displaying [2-466](#)
 - clearing database agent statistics [2-53](#)
 - database agent, configuring [2-165](#)
 - displaying
 - binding entries [2-466](#)
 - database agent status [2-468, 2-470](#)
 - renewing [2-363](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-72](#)
- documentation, related [xx](#)
- document conventions [xix](#)
- domain name, VTP [2-763, 2-767](#)
- dot1x auth-fail max-attempts [2-92](#)
- dot1x auth-fail vlan [2-94](#)
- dot1x command [2-90](#)
- dot1x control-direction command [2-96](#)
- dot1x critical global configuration command [2-98](#)
- dot1x critical interface configuration command [2-100](#)
- dot1x default command [2-102](#)
- dot1x fallback command [2-103](#)
- dot1x guest-vlan command [2-104](#)
- dot1x host-mode command [2-106](#)
- dot1x initialize command [2-107](#)
- dot1x mac-auth-bypass command [2-108](#)
- dot1x max-reauth-req command [2-110](#)
- dot1x max-req command [2-111](#)
- dot1x pae command [2-112](#)
- dot1x port-control command [2-113](#)
- dot1x re-authenticate command [2-115](#)
- dot1x reauthentication command [2-116](#)
- dot1x timeout command [2-117](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-224](#)
- DSCP-to-CoS map [2-279](#)

DSCP-to-DSCP-mutation map [2-279](#)

DTP [2-696](#)

DTP flap

error detection for [2-122](#)

error recovery timer [2-124](#)

DTP negotiation [2-700](#)

dual IPv4 and IPv6 templates [2-327](#)

duplex command [2-120](#)

dynamic-access ports

configuring [2-688](#)

restrictions [2-689](#)

dynamic ARP inspection

ARP ACLs

apply to a VLAN [2-149](#)

define [2-20](#)

deny packets [2-73](#)

display [2-387](#)

permit packets [2-325](#)

clear

log buffer [2-51](#)

statistics [2-52](#)

display

ARP ACLs [2-387](#)

configuration and operating state [2-461](#)

log buffer [2-461](#)

statistics [2-461](#)

trust state and rate limit [2-461](#)

enable per VLAN [2-159](#)

error detection for [2-122](#)

error recovery timer [2-124](#)

log buffer

clear [2-51](#)

configure [2-153](#)

display [2-461](#)

rate-limit incoming ARP packets [2-151](#)

statistics

clear [2-52](#)

display [2-461](#)

trusted interface state [2-155](#)

dynamic ARP inspection (continued)

type of packet logged [2-160](#)

validation checks [2-157](#)

dynamic auto VLAN membership mode [2-695](#)

dynamic desirable VLAN membership mode [2-695](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-111](#)

response time before retransmitting [2-117](#)

encapsulation methods [2-715](#)

environment variables, displaying [2-392](#)

errdisable detect cause command [2-122](#)

errdisable recovery command [2-124](#)

error conditions, displaying [2-434](#)

error disable detection [2-122](#)

error-disabled interfaces, displaying [2-446](#)

EtherChannel

assigning Ethernet interface to channel group [2-38](#)

creating port-channel logical interface [2-134](#)

debug EtherChannel/PAgP, display [B-8](#)

debug platform-specific events, display [B-33](#)

displaying [2-437](#)

enabling Layer 2 protocol tunneling for

LACP [2-225](#)

PAgP [2-225](#)

UDLD [2-225](#)

interface information, displaying [2-446](#)

LACP

clearing channel-group information [2-57, 2-58](#)

debug messages, display [B-16](#)

displaying [2-506](#)

modes [2-38](#)

port priority for hot-standby ports [2-228](#)

EtherChannel (continued)

restricting a protocol [2-42](#)system priority [2-230](#)load-distribution methods [2-343](#)

PAGP

aggregate-port learner [2-321](#)clearing channel-group information [2-61](#)debug messages, display [B-23](#)displaying [2-564](#)error detection for [2-122](#)error recovery timer [2-124](#)learn method [2-321](#)modes [2-38](#)physical-port learner [2-321](#)priority of interface for transmitted traffic [2-323](#)Ethernet controller, internal register display [2-400, 2-408](#)Ethernet Management port, debugging [B-9](#)Ethernet statistics, collecting [2-365](#)examples, conventions for [xx](#)exception crashinfo command [2-127, 2-132](#)exit command [2-752](#)

extended-range VLANs

and allowed VLAN list [2-715](#)and pruning-eligible list [2-715](#)configuring [2-737](#)extended system ID for STP [2-630](#)

Ffallback profile command [2-128](#)fallback profiles, displaying [2-440](#)fan information, displaying [2-430](#)file name, VTP [2-763](#)files, deleting [2-72](#)flash_init (boot loader) command [A-9](#)

Flex Links

configuring [2-690](#)displaying [2-446](#)flowcontrol command [2-130](#)format (boot loader) command [A-10](#)forwarding packets, with ACL matches [2-6](#)forwarding results, display [C-7](#)frame forwarding information, displaying [C-7](#)front-end controller counter and status information [C-9](#)fsck (boot loader) command [A-11](#)

Gglobal configuration mode [1-2, 1-4](#)

Hhardware ACL statistics [2-382](#)health monitoring diagnostic tests [2-83](#)help (boot loader) command [A-12](#)hierarchical policy maps [2-341](#)host connection, port configuration [2-694](#)host ports, private VLANs [2-698](#)

IIEEE 802.1Q trunk ports and native VLANs [2-754](#)

IEEE 802.1Q tunnel ports

configuring [2-695](#)displaying [2-420](#)limitations [2-696](#)

IEEE 802.1x

and switchport modes [2-696](#)violation error recovery [2-124](#)

See also port-based authentication

IGMP filters

applying [2-178](#)debug messages, display [B-13](#)IGMP groups, setting maximum [2-180](#)IGMP maximum groups, debugging [B-14](#)

IGMP profiles

- creating [2-182](#)
- displaying [2-473](#)

IGMP snooping

- adding ports as a static member of a group [2-198](#)
- displaying [2-474, 2-479, 2-481](#)
- enabling [2-184](#)
- enabling the configurable-leave timer [2-186](#)
- enabling the Immediate-Leave feature [2-195](#)
- flooding query count [2-192](#)
- interface topology change notification behavior [2-194](#)
- multicast table [2-477](#)
- querier [2-188](#)
- query solicitation [2-192](#)
- report suppression [2-190](#)
- switch topology change notification behavior [2-192](#)

images

- See software images

Immediate-Leave processing

- IGMP [2-195](#)
- IPv6 [2-220](#)
- MVR [2-316](#)

initial configuration

- See getting started guide and hardware installation guide

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-134](#)

interface range command [2-136](#)

interface-range macros [2-70](#)

interfaces

- assigning Ethernet interface to channel group [2-38](#)
- configuring [2-120](#)
- configuring multiple [2-136](#)
- creating port-channel logical [2-134](#)
- debug messages, display [B-12](#)
- disabling [2-609](#)
- displaying the MAC address table [2-531](#)
- restarting [2-609](#)

interface speed, configuring [2-668](#)

interface vlan command [2-139](#)

internal registers, displaying [2-400, 2-408, 2-411](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

- error detection for [2-122](#)
- error recovery timer [2-124](#)

ip access-group command [2-141](#)

ip address command [2-144](#)

IP addresses, setting [2-144](#)

IP address matching [2-264](#)

ip admission command [2-146](#)

ip admission name proxy http command [2-147](#)

ip arp inspection filter vlan command [2-149](#)

ip arp inspection limit command [2-151](#)

ip arp inspection log-buffer command [2-153](#)

ip arp inspection trust command [2-155](#)

ip arp inspection validate command [2-157](#)

ip arp inspection vlan command [2-159](#)

ip arp inspection vlan logging command [2-160](#)

IP DHCP snooping

See DHCP snooping

ip dhcp snooping binding command [2-163](#)

ip dhcp snooping command [2-162](#)

ip dhcp snooping database command [2-165](#)

ip dhcp snooping information option allow-untrusted command [2-169](#)

ip dhcp snooping information option command [2-167](#)

ip dhcp snooping information option format remote-id command [2-171](#)

ip dhcp snooping limit rate command [2-172](#)

ip dhcp snooping trust command [2-173](#)

ip dhcp snooping verify command [2-174](#)

ip dhcp snooping vlan command [2-175](#)

ip dhcp snooping vlan information option format-type circuit-id string command [2-176](#)

ip igmp filter command [2-178](#)

ip igmp max-groups command [2-180](#)

ip igmp profile command [2-182](#)

ip igmp snooping command [2-184](#)

ip igmp snooping last-member-query-interval command [2-186](#)
 ip igmp snooping querier command [2-188](#)
 ip igmp snooping report-suppression command [2-190](#)
 ip igmp snooping tcn command [2-192](#)
 ip igmp snooping tcn flood command [2-194](#)
 ip igmp snooping vlan immediate-leave command [2-195](#)
 ip igmp snooping vlan mrouter command [2-196](#)
 ip igmp snooping vlan static command [2-198](#)
 IP multicast addresses [2-313](#)
 IP phones
 auto-QoS configuration [2-22](#)
 trusting packets sent from [2-305](#)
 IP-precedence-to-DSCP map [2-279](#)
 ip snap forwarding command [2-200](#)
 ip source binding command [2-201](#)
 IP source guard
 disabling [2-205](#)
 displaying
 binding entries [2-483](#)
 configuration [2-485](#)
 dynamic binding entries only [2-466](#)
 enabling [2-205](#)
 static IP source bindings [2-201](#)
 ip ssh command [2-203](#)
 IPv6 access list, deny conditions [2-75](#)
 ipv6 access-list command [2-206](#)
 ipv6 mld snooping command [2-208](#)
 ipv6 mld snooping last-listener-query count command [2-210](#)
 ipv6 mld snooping last-listener-query-interval command [2-212](#)
 ipv6 mld snooping listener-message-suppression command [2-214](#)
 ipv6 mld snooping robustness-variable command [2-216](#)
 ipv6 mld snooping tcn command [2-218](#)
 ipv6 mld snooping vlan command [2-220](#)
 IPv6 SDM template [2-366](#)
 ipv6 traffic-filter command [2-222](#)
 ip verify source command [2-205](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-224](#)
 l2protocol-tunnel cos command [2-227](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-228](#)
 lacp system-priority command [2-230](#)
 Layer 2 mode, enabling [2-686](#)
 Layer 2 protocol ports, displaying [2-503](#)
 Layer 2 protocol-tunnel
 error detection for [2-122](#)
 error recovery timer [2-124](#)
 Layer 2 protocol tunnel counters [2-56](#)
 Layer 2 protocol tunneling error recovery [2-225](#)
 Layer 2 traceroute
 IP addresses [2-728](#)
 MAC addresses [2-725](#)
 Layer 3 mode, enabling [2-686](#)
 line configuration mode [1-3, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-122](#)
 error recovery timer [2-124](#)
 link state group command [2-232](#)
 link state track command [2-234](#)
 load-distribution methods for EtherChannel [2-343](#)
 location (global configuration) command [2-235](#)
 location (interface configuration) command [2-237](#)
 logging file command [2-239](#)
 logical interface [2-134](#)

loopback error

 detection for [2-122](#)

 recovery timer [2-124](#)

loop guard, for spanning tree [2-632, 2-636](#)

M

mac access-group command [2-241](#)

MAC access-groups, displaying [2-519](#)

MAC access list configuration mode [2-243](#)

mac access-list extended command [2-243](#)

MAC access lists [2-80](#)

MAC addresses

 displaying

 aging time [2-525](#)

 all [2-523](#)

 dynamic [2-529](#)

 MAC address-table move updates [2-533](#)

 notification settings [2-535](#)

 number of addresses in a VLAN [2-527](#)

 per interface [2-531](#)

 per VLAN [2-539](#)

 static [2-537](#)

 static and dynamic entries [2-521](#)

 dynamic

 aging time [2-245](#)

 deleting [2-59](#)

 displaying [2-529](#)

 enabling MAC address notification [2-248](#)

 enabling MAC address-table move update [2-246](#)

 matching [2-264](#)

 persistent stack [2-676](#)

 static

 adding and removing [2-250](#)

 displaying [2-537](#)

 dropping on an interface [2-251](#)

 tables [2-523](#)

MAC address notification, debugging [B-17](#)

mac address-table aging-time [2-241, 2-264](#)

mac address-table aging-time command [2-245](#)

mac address-table move update command [2-246](#)

mac address-table notification command [2-248](#)

mac address-table static command [2-250](#)

mac address-table static drop command [2-251](#)

MAC frames

 See MTU

macro apply command [2-253](#)

macro description command [2-256](#)

macro global command [2-257](#)

macro global description command [2-260](#)

macro name command [2-261](#)

macros

 adding a description [2-256](#)

 adding a global description [2-260](#)

 applying [2-257](#)

 creating [2-261](#)

 displaying [2-566](#)

 interface range [2-70, 2-136](#)

 specifying parameter values [2-257](#)

 tracing [2-257](#)

manual

 audience [xix](#)

 purpose of [xix](#)

maps

 QoS

 defining [2-279](#)

 displaying [2-549](#)

 VLAN

 creating [2-749](#)

 defining [2-264](#)

 displaying [2-601](#)

match (access-map configuration) command [2-264](#)

match (class-map configuration) command [2-266](#)

maximum transmission unit

 See MTU

mdix auto command [2-269](#)

memory (boot loader) command [A-13](#)

mkdir (boot loader) command [A-15](#)

MLD snooping

- configuring [2-214, 2-216](#)
- configuring queries [2-210, 2-212](#)
- configuring topology change notification [2-218](#)
- displaying [2-493, 2-495, 2-497, 2-499](#)
- enabling [2-208](#)
- enabling on a VLAN [2-220](#)

mls qos aggregate-policer command [2-273](#)

mls qos command [2-271](#)

mls qos cos command [2-275](#)

mls qos dscp-mutation command [2-277](#)

mls qos map command [2-279](#)

mls qos queue-set output buffers command [2-283](#)

mls qos queue-set output threshold command [2-285](#)

mls qos rewrite ip dscp command [2-287](#)

mls qos srr-queue input bandwidth command [2-289](#)

mls qos srr-queue input buffers command [2-291](#)

mls qos srr-queue input cos-map command [2-293](#)

mls qos srr-queue input dscp-map command [2-295](#)

mls qos srr-queue input priority-queue command [2-297](#)

mls qos srr-queue input threshold command [2-299](#)

mls qos srr-queue output cos-map command [2-301](#)

mls qos srr-queue output dscp-map command [2-303](#)

mls qos trust command [2-305](#)

mls qos vlan-based command [2-307](#)

mode, MVR [2-313](#)

Mode button, and password recovery [2-369](#)

modes, commands [1-2](#)

monitor session command [2-308](#)

more (boot loader) command [A-16](#)

MSTP

displaying [2-579, 2-580](#)

interoperability [2-65](#)

link type [2-634](#)

MST region

aborting changes [2-640](#)

applying changes [2-640](#)

configuration name [2-640](#)

configuration revision number [2-640](#)

MSTP (continued)

MST region (continued)

current or pending display [2-640](#)

displaying [2-579, 2-580](#)

MST configuration mode [2-640](#)

VLANs-to-instance mapping [2-640](#)

path cost [2-642](#)

protocol mode [2-638](#)

restart protocol migration process [2-65](#)

root port

loop guard [2-632](#)

preventing from becoming designated [2-632](#)

restricting which can be root [2-632](#)

root guard [2-632](#)

root switch

affects of extended system ID [2-630](#)

hello-time [2-645, 2-653](#)

interval between BDPU messages [2-646](#)

interval between hello BPDU messages [2-645, 2-653](#)

max-age [2-646](#)

maximum hop count before discarding BPDU [2-647](#)

port priority for selection of [2-649](#)

primary or secondary [2-653](#)

switch priority [2-652](#)

state changes

blocking to forwarding state [2-660](#)

enabling BPDU filtering [2-622, 2-657](#)

enabling BPDU guard [2-624, 2-657](#)

enabling Port Fast [2-657, 2-660](#)

forward-delay time [2-644](#)

length of listening and learning states [2-644](#)

rapid transition to forwarding [2-634](#)

shutting down Port Fast-enabled ports [2-657](#)

state information display [2-578](#)

MTU

configuring size [2-722](#)

displaying global setting [2-589](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-316](#)

multicast groups, MVR [2-314](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-196](#)

multicast router ports, configuring [2-196](#)

multicast router ports, IPv6 [2-220](#)

multicast storm control [2-678](#)

multicast VLAN, MVR [2-313](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-106](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

configuring [2-313](#)

configuring interfaces [2-316](#)

debug messages, display [B-21](#)

displaying [2-558](#)

displaying interface information [2-560](#)

members, displaying [2-562](#)

mvr (global configuration) command [2-313](#)

mvr (interface configuration) command [2-316](#)

mvr vlan group command [2-317](#)

N

native VLANs [2-715](#)

native VLAN tagging [2-754](#)

Network Assistant requirements [xx](#)

nonegotiate

DTP messaging [2-700](#)

speed [2-668](#)

non-IP protocols

denying [2-80](#)

forwarding [2-333](#)

non-IP traffic access lists [2-243](#)

non-IP traffic forwarding

denying [2-80](#)

permitting [2-333](#)

non-stop forwarding [2-319](#)

normal-range VLANs [2-737, 2-743](#)

note, description [xx](#)

no vlan command [2-737, 2-747](#)

nsf command [2-319](#)

O

online diagnostics

configuring health monitoring diagnostic tests [2-83](#)

displaying

configured boot-up coverage level [2-415](#)

current scheduled tasks [2-415](#)

event logs [2-415](#)

supported test suites [2-415](#)

test ID [2-415](#)

test results [2-415](#)

test statistics [2-415](#)

enabling

scheduling [2-85](#)

syslog messages [2-83](#)

global configuration mode

clearing health monitoring diagnostic test schedule [2-83](#)

clearing test-based testing schedule [2-85](#)

setting health monitoring diagnostic testing [2-83](#)

setting test-based testing [2-85](#)

setting up health monitoring diagnostic test schedule [2-83](#)

setting up test-based testing [2-85](#)

removing scheduling [2-85](#)

scheduled switchover

disabling [2-85](#)

enabling [2-85](#)

setting test interval [2-85](#)

online diagnostics (continued)

specifying health monitoring diagnostic tests [2-83](#)

starting testing [2-87](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-321](#)

pagp port-priority command [2-323](#)

password, VTP [2-763, 2-767](#)

password-recovery mechanism, enabling and disabling [2-369](#)

permit (ARP access-list configuration) command [2-325](#)

permit (IPv6) command [2-327](#)

permit (MAC access-list configuration) command [2-333](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-321](#)

PID, displaying [2-459](#)

PIM-DVMRP, as multicast router learning method [2-196](#)

police aggregate command [2-338](#)

police command [2-336](#)

policed-DSCP map [2-279](#)

policy-map command [2-340](#)

policy maps

applying to an interface [2-371, 2-377](#)

creating [2-340](#)

displaying [2-569](#)

hierarchical [2-341](#)

policers

displaying [2-542](#)

for a single class [2-336](#)

for multiple classes [2-273, 2-338](#)

policed-DSCP map [2-279](#)

traffic classification

defining the class [2-44](#)

defining trust states [2-730](#)

setting DSCP or IP precedence values [2-375](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

debug messages, display [B-5](#)

enabling guest VLAN supplicant [2-93, 2-103](#)

enabling IEEE 802.1x

globally [2-90](#)

per interface [2-113](#)

guest VLAN [2-104](#)

host modes [2-106](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-107](#)

MAC authentication bypass [2-108](#)

manual control of authorization state [2-113](#)

multiple hosts on authorized port [2-106](#)

PAE as authenticator [2-112](#)

periodic re-authentication

enabling [2-116](#)

time between attempts [2-117](#)

quiet period between failed authentication exchanges [2-117](#)

re-authenticating IEEE 802.1x-enabled ports [2-115](#)

resetting configurable IEEE 802.1x parameters [2-102](#)

switch-to-authentication server retransmission time [2-117](#)

switch-to-client frame-retransmission number [2-110 to 2-111](#)

switch-to-client retransmission time [2-117](#)

port-channel load-balance command [2-343](#)

Port Fast, for spanning tree [2-660](#)

port ranges, defining [2-68, 2-70](#)

ports, debugging [B-67](#)

ports, protected [2-713](#)

port security

aging [2-707](#)

debug messages, display [B-69](#)

enabling [2-702](#)

violation error recovery [2-124](#)

port trust states for QoS [2-305](#)

- port types, MVR [2-316](#)
- power information, displaying [2-430](#)
- priority-queue command [2-345](#)
- priority value, stack member [2-587, 2-681](#)
- private-vlan command [2-347](#)
- private-vlan mapping command [2-350](#)
- private VLANs
 - association [2-711](#)
 - configuring [2-347](#)
 - configuring ports [2-698](#)
 - displaying [2-596](#)
 - host ports [2-698](#)
 - mapping
 - configuring [2-711](#)
 - displaying [2-446](#)
 - promiscuous ports [2-698](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-459](#)
- promiscuous ports, private VLANs [2-698](#)
- protected ports, displaying [2-452](#)
- pruning
 - VLANs [2-715](#)
 - VTP
 - displaying interface information [2-446](#)
 - enabling [2-763, 2-767](#)
- pruning-eligible VLAN list [2-717](#)
- PVST+
 - See STP

Q

QoS

- auto-QoS
 - configuring [2-22](#)
 - debug messages, display [B-2](#)
 - displaying [2-388](#)

QoS (continued)

- class maps
 - creating [2-46](#)
 - defining the match criteria [2-266](#)
 - displaying [2-397](#)
- defining the CoS value for an incoming packet [2-275](#)
- displaying configuration information [2-388, 2-541](#)
- DSCP transparency [2-287](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-277](#)
 - defining DSCP-to-DSCP-mutation map [2-279](#)
- egress queues
 - allocating buffers [2-283](#)
 - defining the CoS output queue threshold map [2-301](#)
 - defining the DSCP output queue threshold map [2-303](#)
 - displaying buffer allocations [2-545](#)
 - displaying CoS output queue threshold map [2-549](#)
 - displaying DSCP output queue threshold map [2-549](#)
 - displaying queueing strategy [2-545](#)
 - displaying queue-set settings [2-552](#)
 - enabling bandwidth shaping and scheduling [2-672](#)
 - enabling bandwidth sharing and scheduling [2-674](#)
 - limiting the maximum output on a port [2-670](#)
 - mapping a port to a queue-set [2-352](#)
 - mapping CoS values to a queue and threshold [2-301](#)
 - mapping DSCP values to a queue and threshold [2-303](#)
 - setting maximum and reserved memory allocations [2-285](#)
 - setting WTD thresholds [2-285](#)
- enabling [2-271](#)
- ingress queues
 - allocating buffers [2-291](#)
 - assigning SRR scheduling weights [2-289](#)

QoS (continued)

- defining the CoS input queue threshold map [2-293](#)
- defining the DSCP input queue threshold map [2-295](#)
- displaying buffer allocations [2-545](#)
- displaying CoS input queue threshold map [2-549](#)
- displaying DSCP input queue threshold map [2-549](#)
- displaying queueing strategy [2-545](#)
- displaying settings for [2-543](#)
- enabling the priority queue [2-297](#)
- mapping CoS values to a queue and threshold [2-293](#)
- mapping DSCP values to a queue and threshold [2-295](#)
- setting WTD thresholds [2-299](#)

maps

- defining [2-279](#), [2-293](#), [2-295](#), [2-301](#), [2-303](#)
- displaying [2-549](#)

policy maps

- applying an aggregate policer [2-338](#)
- applying to an interface [2-371](#), [2-377](#)
- creating [2-340](#)
- defining policers [2-273](#), [2-336](#)
- displaying policers [2-542](#)
- displaying policy maps [2-569](#)
- hierarchical [2-341](#)
- policed-DSCP map [2-279](#)
- setting DSCP or IP precedence values [2-375](#)
- traffic classifications [2-44](#)
- trust states [2-730](#)

port trust states [2-305](#)queues, enabling the expedite [2-345](#)

statistics

- in-profile and out-of-profile packets [2-545](#)
- packets enqueued or dropped [2-545](#)
- sent and received CoS values [2-545](#)
- sent and received DSCP values [2-545](#)

QoS (continued)

- trusted boundary for IP phones [2-305](#)
- VLAN-based [2-307](#)
- quality of service
 - See QoS
- querytime, MVR [2-313](#)
- queue-set command [2-352](#)

R

- radius-server dead-criteria command [2-353](#)
- radius-server host command [2-355](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- re-authenticating IEEE 802.1x-enabled ports [2-115](#)
- re-authentication
 - periodic [2-116](#)
 - time between attempts [2-117](#)
- receiver ports, MVR [2-316](#)
- receiving flow-control packets [2-130](#)
- recovery mechanism
 - causes [2-124](#)
 - display [2-50](#), [2-395](#), [2-432](#), [2-435](#)
 - timer interval [2-125](#)
- reload command [2-357](#)
- remote command [2-359](#)
- remote-span command [2-361](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-363](#)
- requirements
 - Network Assistant [xx](#)
- reset (boot loader) command [A-18](#)
- reset command [2-752](#)
- resource templates, displaying [2-574](#)

restricted VLAN

See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-365](#)

root guard, for spanning tree [2-632](#)

routed ports

IP addresses on [2-145](#)

number supported [2-145](#)

routing frames

See MTU

RSPAN

configuring [2-308](#)

displaying [2-555](#)

filter RSPAN traffic [2-308](#)

remote-span command [2-361](#)

sessions

add interfaces to [2-308](#)

displaying [2-555](#)

start new [2-308](#)

S

scheduled switchover

disabling [2-85](#)

enabling [2-85](#)

SDM mismatch mode [2-367, 2-588](#)

sdm prefer command [2-366](#)

SDM templates

allowed resources [2-367](#)

and stacking [2-367](#)

displaying [2-574](#)

dual IPv4 and IPv6 [2-366](#)

secure ports, limitations [2-704](#)

sending flow-control packets [2-130](#)

service password-recovery command [2-369](#)

service-policy command [2-371](#)

session command [2-374](#)

set (boot loader) command [A-20](#)

set command [2-375](#)

setup command [2-377](#)

setup express command [2-380](#)

show access-lists command [2-382](#)

show archive status command [2-385](#)

show arp access-list command [2-387](#)

show auto qos command [2-388](#)

show boot command [2-392](#)

show cable-diagnostics tdr command [2-395](#)

show changes command [2-752](#)

show class-map command [2-397](#)

show controllers cpu-interface command [2-398](#)

show controllers ethernet-controller command [2-400](#)

show controllers ethernet-controller fastethernet
command [2-408](#)

show controllers tcam command [2-411](#)

show controller utilization command [2-413](#)

show current command [2-752](#)

show dot1q-tunnel command [2-420](#)

show dot1x command [2-421](#)

show dtp [2-425](#)

show eap command [2-427](#)

show env command [2-430](#)

show errdisable detect command [2-432](#)

show errdisable flap-values command [2-434](#)

show errdisable recovery command [2-435](#)

show etherchannel command [2-437](#)

show fallback profile command [2-440](#)

show flowcontrol command [2-442](#)

show idprom command [2-444](#)

show interfaces command [2-446](#)

show interfaces counters command [2-456](#)

show inventory command [2-459](#)

show ip arp inspection command [2-461](#)

show ipc command [2-487](#)

show ip dhcp snooping binding command [2-466](#)

show ip dhcp snooping command [2-465](#)

show ip dhcp snooping database command [2-468, 2-470](#)

show ip igmp profile command [2-473](#)

show ip igmp snooping address command [2-495](#)

- show ip igmp snooping command [2-474, 2-493](#)
- show ip igmp snooping groups command [2-477](#)
- show ip igmp snooping mrouter command [2-479, 2-497](#)
- show ip igmp snooping querier command [2-481, 2-499](#)
- show ip source binding command [2-483](#)
- show ipv6 access-list command [2-491](#)
- show ipv6 route updated [2-501](#)
- show ip verify source command [2-485](#)
- show l2protocol-tunnel command [2-503](#)
- show lacp command [2-506](#)
- show link state group command [2-510](#)
- show location [2-512](#)
- show location command [2-512](#)
- show logging command [2-514](#)
- show mac access-group command [2-519](#)
- show mac address-table address command [2-523](#)
- show mac address-table aging time command [2-525](#)
- show mac address-table command [2-521](#)
- show mac address-table count command [2-527](#)
- show mac address-table dynamic command [2-529](#)
- show mac address-table interface command [2-531](#)
- show mac address-table move update command [2-533](#)
- show mac address-table notification command [2-60, 2-535, B-19](#)
- show mac address-table static command [2-537](#)
- show mac address-table vlan command [2-539](#)
- show mls qos aggregate-policer command [2-542](#)
- show mls qos command [2-541](#)
- show mls qos input-queue command [2-543](#)
- show mls qos interface command [2-545](#)
- show mls qos maps command [2-549](#)
- show mls qos queue-set command [2-552](#)
- show mls qos vlan command [2-554](#)
- show monitor command [2-555](#)
- show mvr command [2-558](#)
- show mvr interface command [2-560](#)
- show mvr members command [2-562](#)
- show pagp command [2-564](#)
- show parser macro command [2-566](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform dl command [C-5](#)
- show platform etherchannel command [C-6](#)
- show platform forward command [C-7](#)
- show platform frontend-controller command [C-9](#)
- show platform igmp snooping command [C-10](#)
- show platform ipc trace command [C-18](#)
- show platform ip multicast command [C-12](#)
- show platform ip unicast command [C-13](#)
- show platform ipv6 unicast command [C-19](#)
- show platform ip wccp command [C-17](#)
- show platform layer4op command [C-21](#)
- show platform mac-address-table command [C-22](#)
- show platform messaging command [C-23](#)
- show platform monitor command [C-24](#)
- show platform mvr table command [C-25](#)
- show platform pm command [C-26](#)
- show platform port-asic command [C-27](#)
- show platform port-security command [C-32](#)
- show platform qos command [C-33](#)
- show platform resource-manager command [C-34](#)
- show platform snmp counters command [C-36](#)
- show platform spanning-tree command [C-37](#)
- show platform stack-manager command [C-39](#)
- show platform stp-instance command [C-38](#)
- show platform tb command [C-41](#)
- show platform tcam command [C-43](#)
- show platform vlan command [C-46](#)
- show policy-map command [2-569](#)
- show port security command [2-571](#)
- show proposed command [2-752](#)
- show sdm prefer command [2-574](#)
- show setup express command [2-577](#)
- show spanning-tree command [2-578](#)
- show storm-control command [2-585](#)
- show switch command [2-587](#)
- show system mtu command [2-589](#)

- show trust command [2-730](#)
- show uddl command [2-591](#)
- show version command [2-594](#)
- show vlan access-map command [2-601](#)
- show vlan command [2-596](#)
- show vlan command, fields [2-598](#)
- show vlan filter command [2-602](#)
- show vmpls command [2-603](#)
- show vtp command [2-606](#)
- shutdown command [2-609](#)
- shutdown threshold, Layer 2 protocol tunneling [2-224](#)
- shutdown vlan command [2-610](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-615](#)
- SNMP informs, enabling the sending of [2-611](#)
- snmp-server enable traps command [2-611](#)
- snmp-server host command [2-615](#)
- snmp trap mac-notification command [2-619](#)
- SNMP traps
 - enabling MAC address notification trap [2-619](#)
 - enabling the MAC address notification feature [2-248](#)
 - enabling the sending of [2-611](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-72](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-594](#)
- source ports, MVR [2-316](#)
- SPAN
 - configuring [2-308](#)
 - debug messages, display [B-20](#)
 - displaying [2-555](#)
 - filter SPAN traffic [2-308](#)

SPAN (continued)

- sessions
 - add interfaces to [2-308](#)
 - displaying [2-555](#)
 - start new [2-308](#)
- spanning-tree backbonefast command [2-621](#)
- spanning-tree bpduguard command [2-622](#)
- spanning-tree bpduguard command [2-624](#)
- spanning-tree cost command [2-626](#)
- spanning-tree etherchannel command [2-628](#)
- spanning-tree extend system-id command [2-630](#)
- spanning-tree guard command [2-632](#)
- spanning-tree link-type command [2-634](#)
- spanning-tree loopguard default command [2-636](#)
- spanning-tree mode command [2-638](#)
- spanning-tree mst configuration command [2-640](#)
- spanning-tree mst cost command [2-642](#)
- spanning-tree mst forward-time command [2-644](#)
- spanning-tree mst hello-time command [2-645](#)
- spanning-tree mst max-age command [2-646](#)
- spanning-tree mst max-hops command [2-647](#)
- spanning-tree mst port-priority command [2-649](#)
- spanning-tree mst pre-standard command [2-651](#)
- spanning-tree mst priority command [2-652](#)
- spanning-tree mst root command [2-653](#)
- spanning-tree portfast (global configuration) command [2-657](#)
- spanning-tree portfast (interface configuration) command [2-660](#)
- spanning-tree port-priority command [2-655](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-662](#)
- spanning-tree uplinkfast command [2-663](#)
- spanning-tree vlan command [2-665](#)
- speed command [2-668](#)
- srr-queue bandwidth limit command [2-670](#)
- srr-queue bandwidth shape command [2-672](#)
- srr-queue bandwidth share command [2-674](#)

- SSH, configuring version [2-203](#)
- stack-mac persistent timer command [2-676](#)
- stack member
 - access [2-374](#)
 - number [2-587, 2-684](#)
 - priority value [2-681](#)
 - provisioning [2-682](#)
 - reloading [2-357](#)
- stacks, switch
 - MAC address [2-676](#)
 - provisioning a new member [2-682](#)
 - reloading [2-357](#)
 - stack member access [2-374](#)
 - stack member number [2-587, 2-684](#)
 - stack member priority value [2-587, 2-681](#)
- static-access ports, configuring [2-688](#)
- statistics, Ethernet group [2-365](#)
- sticky learning, enabling [2-702](#)
- storm-control command [2-678](#)
- STP
 - BackboneFast [2-621](#)
 - counters, clearing [2-64](#)
 - debug messages, display
 - BackboneFast events [B-73](#)
 - MSTP [B-76](#)
 - optimized BPDUs handling [B-75](#)
 - spanning-tree activity [B-71](#)
 - switch shim [B-78](#)
 - transmitted and received BPDUs [B-74](#)
 - UplinkFast [B-80](#)
 - detection of indirect link failures [2-621](#)
 - enabling protocol tunneling for [2-224](#)
 - EtherChannel misconfiguration [2-628](#)
 - extended system ID [2-630](#)
 - path cost [2-626](#)
 - protocol modes [2-638](#)
 - root port
 - accelerating choice of new [2-663](#)
 - loop guard [2-632](#)
 - STP (continued)
 - root port (continued)
 - preventing from becoming designated [2-632](#)
 - restricting which can be root [2-632](#)
 - root guard [2-632](#)
 - UplinkFast [2-663](#)
 - root switch
 - affects of extended system ID [2-630, 2-666](#)
 - hello-time [2-665](#)
 - interval between BDPU messages [2-665](#)
 - interval between hello BPDU messages [2-665](#)
 - max-age [2-665](#)
 - port priority for selection of [2-655](#)
 - primary or secondary [2-665](#)
 - switch priority [2-665](#)
 - state changes
 - blocking to forwarding state [2-660](#)
 - enabling BPDU filtering [2-622, 2-657](#)
 - enabling BPDU guard [2-624, 2-657](#)
 - enabling Port Fast [2-657, 2-660](#)
 - enabling timer to recover from error state [2-124](#)
 - forward-delay time [2-665](#)
 - length of listening and learning states [2-665](#)
 - shutting down Port Fast-enabled ports [2-657](#)
 - state information display [2-578](#)
 - VLAN options [2-652, 2-665](#)
- SVIs, creating [2-139](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [2-686](#)
 - returning to interfaces [2-686](#)
- switchport access command [2-688](#)
- switchport backup interface command [2-690](#)
- switchport block command [2-693](#)
- switchport command [2-686](#)
- switchport host command [2-694](#)
- switchport mode command [2-695](#)
- switchport mode private-vlan command [2-698](#)

switchport nonegotiate command [2-700](#)
 switchport port-security aging command [2-707](#)
 switchport port-security command [2-702](#)
 switchport priority extend command [2-709](#)
 switchport private-vlan command [2-711](#)
 switchport protected command [2-713](#)
 switchports, displaying [2-446](#)
 switchport trunk command [2-715](#)
 switchport voice detect [2-718](#)
 switchport voice vlan command [2-719](#)
 switch priority command [2-681](#)
 switch provision command [2-682](#)
 switch renumber command [2-684](#)
 system env temperature threshold yellow command [2-721](#)
 system message logging, save message to flash [2-239](#)
 system mtu command [2-722](#)
 system resource templates [2-366](#)

T

tar files, creating, listing, and extracting [2-15](#)
 TDR, running [2-724](#)
 temperature information, displaying [2-430](#)
 templates, system resources [2-366](#)
 test cable-diagnostics tdr command [2-724](#)
 traceroute mac command [2-725](#)
 traceroute mac ip command [2-728](#)
 trunking, VLAN mode [2-695](#)
 trunk mode [2-695](#)
 trunk ports [2-695](#)
 trunks, to non-DTP device [2-696](#)
 trusted boundary for QoS [2-305](#)
 trusted port states for QoS [2-305](#)
 tunnel ports, Layer 2 protocol, displaying [2-503](#)
 type (boot loader) command [A-23](#)

U

UDLD

aggressive mode [2-732, 2-734](#)
 debug messages, display [B-88](#)
 enable globally [2-732](#)
 enable per interface [2-734](#)
 error recovery timer [2-124](#)
 message timer [2-732](#)
 normal mode [2-732, 2-734](#)
 reset a shutdown interface [2-736](#)
 status [2-591](#)

udld command [2-732](#)

udld port command [2-734](#)

udld reset command [2-736](#)

unicast storm control [2-678](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-693](#)

unknown unicast traffic, preventing [2-693](#)

unset (boot loader) command [A-24](#)

upgrading

copying software images [2-8](#)
 downloading software images [2-11](#)
 software images, monitoring status of [2-385](#)

upgrading information

See release notes

UplinkFast, for STP [2-663](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-26](#)

version mismatch mode [2-588](#)

vlan (global configuration) command [2-737](#)

vlan (VLAN configuration) command [2-743](#)

vlan access-map command [2-749](#)

VLAN access map configuration mode [2-749](#)

VLAN access maps

- actions [2-6](#)
- displaying [2-601](#)

VLAN-based QoS [2-307](#)

VLAN configuration

- rules [2-740, 2-745](#)
- saving [2-737, 2-747](#)

VLAN configuration mode

- commands
 - VLAN [2-743](#)
 - VTP [2-767](#)
- description [1-5](#)
- entering [2-751](#)
- summary [1-3](#)

vlan database command [2-751](#)vlan dot1q tag native command [2-754](#)vlan filter command [2-756](#)VLAN filters, displaying [2-602](#)VLAN ID range [2-737, 2-743](#)

VLAN maps

- applying [2-756](#)
- creating [2-749](#)
- defining [2-264](#)
- displaying [2-601](#)

VLAN Query Protocol

See VQP

VLANs

- adding [2-737](#)
- configuring [2-737, 2-743](#)
- debug messages, display
 - ISL [B-84](#)
 - VLAN IOS file system error tests [B-83](#)
 - VLAN manager activity [B-81](#)
 - VTP [B-86](#)
- displaying configurations [2-596](#)
- extended-range [2-737](#)
- MAC addresses
 - displaying [2-539](#)
 - number of [2-527](#)

VLANs (continued)

- media types [2-740, 2-745](#)
- normal-range [2-737, 2-743](#)
- private [2-698](#)
 - configuring [2-347](#)
 - displaying [2-596](#)
 - See also private VLANs
- restarting [2-610](#)
- saving the configuration [2-737](#)
- shutting down [2-610](#)
- SNMP traps for VTP [2-613, 2-616](#)
- suspending [2-610](#)
- variables [2-743](#)

VLAN Trunking Protocol

See VTP

VM mode [2-588](#)

VMPS

- configuring servers [2-761](#)
- displaying [2-603](#)
- error recovery timer [2-125](#)
- reconfirming dynamic VLAN assignments [2-758](#)

vmmps reconfirm (global configuration) command [2-759](#)vmmps reconfirm (privileged EXEC) command [2-758](#)vmmps retry command [2-760](#)vmmps server command [2-761](#)

voice VLAN

- configuring [2-718, 2-719](#)
- setting port priority [2-709](#)

VQP

- and dynamic-access ports [2-689](#)
- clearing client statistics [2-66](#)
- displaying information [2-603](#)
- per-server retry count [2-760](#)
- reconfirmation interval [2-759](#)
- reconfirming dynamic VLAN assignments [2-758](#)

VTP

- changing characteristics [2-763](#)
- clearing pruning counters [2-67](#)
- configuring
 - domain name [2-763, 2-767](#)
 - file name [2-763](#)
 - mode [2-763, 2-767](#)
 - password [2-763, 2-767](#)
- counters display fields [2-607](#)
- displaying information [2-606](#)
- enabling
 - pruning [2-763, 2-767](#)
 - tunneling for [2-224](#)
 - Version 2 [2-763, 2-767](#)
- mode [2-763, 2-767](#)
- pruning [2-763, 2-767](#)
- saving the configuration [2-737, 2-747](#)
- statistics [2-606](#)
- status [2-606](#)
- status display fields [2-608](#)
- vtp (global configuration) command [2-763](#)
- vtp (VLAN configuration) command [2-767](#)

