



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-770](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-145](#)
 MAC, displaying [2-531](#)
access list, IPv6 [2-210](#)
access map configuration mode [2-277](#)
access mode [2-712](#)
access ports [2-712](#)
ACEs [2-83](#), [2-345](#)
ACLs
 deny [2-81](#)
 displaying [2-392](#)
 for non-IP protocols [2-255](#)
 IP [2-145](#)
 matching [2-277](#)
 on Layer 2 interfaces [2-145](#)
 permit [2-343](#)
action command [2-6](#)
aggregate-port learner [2-332](#)
allowed VLANs [2-732](#)
apply command [2-770](#)
archive copy-sw command [2-8](#)
archive download-sw command [2-11](#)

archive tar command [2-15](#)
archive upload-sw command [2-18](#)
arp (boot loader) command [A-2](#)
arp access-list command [2-20](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-114](#)
autonegotiation of duplex mode [2-123](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-637](#)
backup interfaces
 configuring [2-707](#)
 displaying [2-454](#)
boot (boot loader) command [A-3](#)
boot auto-copy-sw command [2-26](#)
boot auto-download-sw command [2-27](#)
boot config-file command [2-29](#)
boot enable-break command [2-30](#)
boot helper command [2-31](#)
boot helper-config file command [2-32](#)
booting
 Cisco IOS image [2-35](#)
 displaying environment variables [2-401](#)
 interrupting [2-30](#)
 manually [2-33](#)

boot loader

accessing [A-1](#)

booting

Cisco IOS image [A-3](#)helper image [2-31](#)

directories

creating [A-19](#)displaying a list of [A-8](#)removing [A-23](#)

displaying

available commands [A-13](#)memory heap utilization [A-14](#)version [A-30](#)

environment variables

described [A-24](#)displaying settings [A-24](#)location of [A-25](#)setting [A-24](#)unsetting [A-28](#)

files

copying [A-6](#)deleting [A-7](#)displaying a list of [A-8](#)displaying the contents of [A-5, A-20, A-27](#)renaming [A-21](#)

file system

formatting [A-11](#)initializing flash [A-10](#)running a consistency check [A-12](#)prompt [A-1](#)resetting the system [A-22](#)boot manual command [2-33](#)boot private-config-file command [2-34](#)boot system command [2-35](#)BPDU filtering, for spanning tree [2-638, 2-672](#)BPDU guard, for spanning tree [2-640, 2-672](#)broadcast storm control [2-693](#)**C**cat (boot loader) command [A-5](#)CDP, enabling protocol tunneling for [2-236](#)channel-group command [2-37](#)channel-protocol command [2-41](#)

Cisco SoftPhone

auto-QoS configuration [2-22](#)trusting packets sent from [2-318](#)class command [2-42](#)class-map command [2-44](#)

class maps

creating [2-44](#)defining the match criteria [2-279](#)displaying [2-406](#)

class of service

See CoS

clear dot1x command [2-46](#)clear eap command [2-47](#)clear errdisable interface [2-48](#)clear ip arp inspection log command [2-49](#)clear ip arp inspection statistics command [2-50](#)clear ipc command [2-55](#)clear ip dhcp snooping database command [2-51, 2-53](#)clear ipv6 dhcp conflict command [2-56](#)clear l2protocol-tunnel counters command [2-57](#)clear lacp command [2-58](#)clear logging command [2-59](#)clear mac address-table command [2-60, 2-61](#)clear pagp command [2-62](#)clear port-security command [2-63](#)clear spanning-tree counters command [2-65](#)clear spanning-tree detected-protocols command [2-66](#)clear vmps statistics command [2-67](#)clear vtp counters command [2-68](#)command modes defined [1-2](#)

configuration files

password recovery disable considerations [A-1](#)specifying the name [2-29, 2-34](#)

configuring multiple interfaces [2-141](#)

config-vlan mode

 commands [2-756](#)

 description [1-5](#)

 entering [2-755](#)

 summary [1-2](#)

copy (boot loader) command [A-6](#)

copy logging onboard command [2-69](#)

CoS

 assigning default value to incoming packets [2-288](#)

 assigning to Layer 2 protocol packets [2-239](#)

 overriding the incoming value [2-288](#)

CoS-to-DSCP map [2-292](#)

CPU ASIC statistics, displaying [2-407](#)

crashinfo files [2-132](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4](#)

debug dot1x command [B-5](#)

debug dtp command [B-6](#)

debug eap command [B-7](#)

debug etherchannel command [B-8](#)

debug fastethernet command [B-9](#)

debug interface command [B-12](#)

debug ip dhcp snooping command [B-10](#)

debug ip igmp filter command [B-13](#)

debug ip igmp max-groups command [B-14](#)

debug ip igmp snooping command [B-15](#)

debug ip verify source packet command [B-11](#)

debug lacp command [B-16](#)

debug mac-notification command [B-17](#)

debug matm command [B-18](#)

debug matm move update command [B-19](#)

debug monitor command [B-20](#)

debug mvrdbg command [B-21](#)

debug nvram command [B-22](#)

debug pagp command [B-23](#)

debug platform acl command [B-24](#)

debug platform backup interface command [B-26](#)

debug platform cli-redirection main command [B-27](#)

debug platform configuration command [B-28](#)

debug platform cpu-queues command [B-29](#)

debug platform device-manager command [B-31](#)

debug platform dot1x command [B-32](#)

debug platform etherchannel command [B-33](#)

debug platform fallback-bridging command [B-34](#)

debug platform ip arp inspection command [B-35](#)

debug platform ipc command [B-44](#)

debug platform ip dhcp command [B-36](#)

debug platform ip igmp snooping command [B-37](#)

debug platform ip multicast command [B-39](#)

debug platform ip unicast command [B-41](#)

debug platform ip wccp command [B-43](#)

debug platform led command [B-45](#)

debug platform matm command [B-46](#)

debug platform messaging application command [B-47](#)

debug platform phy command [B-48](#)

debug platform pm command [B-50](#)

debug platform port-asic command [B-52](#)

debug platform port-security command [B-53](#)

debug platform qos-acl-tcam command [B-54](#)

debug platform remote-commands command [B-55](#)

debug platform resource-manager command [B-56](#)

debug platform snmp command [B-57](#)

debug platform span command [B-58](#)

debug platform stack-manager command [B-59](#)

debug platform supervisor-asic command [B-60](#)

debug platform sw-bridge command [B-61](#)

debug platform tcam command [B-62](#)

debug platform udd command [B-65](#)

debug platform vlan command [B-66](#)

debug pm command [B-67](#)

debug port-security command [B-69](#)

debug qos-manager command [B-70](#)

debug spanning-tree backbonefast command [B-73](#)

debug spanning-tree bpdu command [B-74](#)

- debug spanning-tree bpd-opt command [B-75](#)
- debug spanning-tree command [B-71](#)
- debug spanning-tree mstp command [B-76](#)
- debug spanning-tree switch command [B-78](#)
- debug spanning-tree uplinkfast command [B-80](#)
- debug sw-vlan command [B-81](#)
- debug sw-vlan ifs command [B-83](#)
- debug sw-vlan notification command [B-84](#)
- debug sw-vlan vtp command [B-86](#)
- debug udd command [B-88](#)
- debug vqpc command [B-90](#)
- define interface-range command [2-71](#)
- delete (boot loader) command [A-7](#)
- delete command [2-73](#)
- deny (ARP access-list configuration) command [2-74](#)
- deny (IPv6) command [2-76](#)
- deny command [2-81](#)
- detect mechanism, causes [2-124](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-173](#)
 - enabling
 - on a VLAN [2-179](#)
 - option 82 [2-171, 2-173](#)
 - trust on an interface [2-177](#)
 - error recovery timer [2-128](#)
 - rate limiting [2-176](#)
- DHCP snooping binding database
 - binding file, configuring [2-169](#)
 - bindings
 - adding [2-167](#)
 - deleting [2-167](#)
 - displaying [2-476](#)
 - clearing database agent statistics [2-51, 2-53](#)
 - database agent, configuring [2-169](#)
 - displaying
 - binding entries [2-476](#)
 - database agent status [2-478, 2-480](#)
 - renewing [2-373](#)
- dir (boot loader) command [A-8](#)
- directories, deleting [2-73](#)
- domain name, VTP [2-781, 2-785](#)
- dot1x auth-fail max-attempts [2-93](#)
- dot1x auth-fail vlan [2-95](#)
- dot1x command [2-91](#)
- dot1x control-direction command [2-97](#)
- dot1x critical global configuration command [2-99](#)
- dot1x critical interface configuration command [2-101](#)
- dot1x default command [2-103](#)
- dot1x fallback command [2-104](#)
- dot1x guest-vlan command [2-105](#)
- dot1x host-mode command [2-107](#)
- dot1x initialize command [2-108](#)
- dot1x mac-auth-bypass command [2-109](#)
- dot1x max-reauth-req command [2-111](#)
- dot1x max-req command [2-112](#)
- dot1x pae command [2-113](#)
- dot1x port-control command [2-114](#)
- dot1x re-authenticate command [2-116](#)
- dot1x reauthentication command [2-117](#)
- dot1x timeout command [2-118](#)
- dot1x violation-mode command [2-120](#)
- dropping packets, with ACL matches [2-6](#)
- drop threshold, Layer 2 protocol tunneling [2-236](#)
- DSCP-to-CoS map [2-292](#)
- DSCP-to-DSCP-mutation map [2-292](#)
- DTP [2-713](#)
- DTP flap
 - error detection for [2-124](#)
 - error recovery timer [2-128](#)
- DTP negotiation [2-717](#)
- dual IPv4 and IPv6 templates [2-338](#)
- duplex command [2-122](#)
- dynamic-access ports
 - configuring [2-703](#)
 - restrictions [2-704](#)

dynamic ARP inspection

ARP ACLs

apply to a VLAN [2-153](#)define [2-20](#)deny packets [2-74](#)display [2-396](#)permit packets [2-336](#)

clear

log buffer [2-49](#)statistics [2-50](#)

display

ARP ACLs [2-396](#)configuration and operating state [2-471](#)log buffer [2-471](#)statistics [2-471](#)trust state and rate limit [2-471](#)enable per VLAN [2-163](#)error detection for [2-124](#)error recovery timer [2-128](#)

log buffer

clear [2-49](#)configure [2-157](#)display [2-471](#)rate-limit incoming ARP packets [2-155](#)

statistics

clear [2-50](#)display [2-471](#)trusted interface state [2-159](#)type of packet logged [2-164](#)validation checks [2-161](#)dynamic auto VLAN membership mode [2-712](#)dynamic desirable VLAN membership mode [2-712](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

E

EAP-request/identity frame

maximum number to send [2-112](#)response time before retransmitting [2-118](#)encapsulation methods [2-732](#)environment variables, displaying [2-401](#)errdisable detect cause command [2-124](#)errdisable detect cause small-frame comand [2-126](#)errdisable recovery cause small-frame [2-131](#)errdisable recovery command [2-128](#)error conditions, displaying [2-442](#)error disable detection [2-124](#)error-disabled interfaces, displaying [2-454](#)

EtherChannel

assigning Ethernet interface to channel group [2-37](#)creating port-channel logical interface [2-139](#)debug EtherChannel/PAGP, display [B-8](#)debug platform-specific events, display [B-33](#)displaying [2-445](#)

enabling Layer 2 protocol tunneling for

LACP [2-237](#)PAgP [2-237](#)UDLD [2-237](#)interface information, displaying [2-454](#)

LACP

clearing channel-group information [2-58, 2-59](#)debug messages, display [B-16](#)displaying [2-517](#)modes [2-37](#)port priority for hot-standby ports [2-240](#)restricting a protocol [2-41](#)system priority [2-242](#)load-distribution methods [2-353](#)

EtherChannel (continued)

PAGP

- aggregate-port learner [2-332](#)
- clearing channel-group information [2-62](#)
- debug messages, display [B-23](#)
- displaying [2-577](#)
- error detection for [2-124](#)
- error recovery timer [2-128](#)
- learn method [2-332](#)
- modes [2-37](#)
- physical-port learner [2-332](#)
- priority of interface for transmitted traffic [2-334](#)

Ethernet controller, internal register display [2-409, 2-416](#)

Ethernet Management port, debugging [B-9](#)

Ethernet statistics, collecting [2-375](#)

exception crashinfo command [2-132, 2-137](#)

exit command [2-770](#)

extended-range VLANs

- and allowed VLAN list [2-732](#)
- and pruning-eligible list [2-732](#)
- configuring [2-755](#)

extended system ID for STP [2-646](#)

F

fallback profile command [2-133](#)

fallback profiles, displaying [2-448](#)

fan information, displaying [2-438](#)

file name, VTP [2-781](#)

files, deleting [2-73](#)

flash_init (boot loader) command [A-10](#)

Flex Links

- configuring [2-707](#)
- displaying [2-454](#)

flowcontrol command [2-135](#)

format (boot loader) command [A-11](#)

forwarding packets, with ACL matches [2-6](#)

forwarding results, display [C-7](#)

frame forwarding information, displaying [C-7](#)

front-end controller counter and status information [C-9](#)

fsck (boot loader) command [A-12](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-392](#)

health monitoring diagnostic tests [2-84](#)

help (boot loader) command [A-13](#)

hierarchical policy maps [2-351](#)

host connection, port configuration [2-711](#)

host ports, private VLANs [2-715](#)

I

IEEE 802.1Q trunk ports and native VLANs [2-772](#)

IEEE 802.1Q tunnel ports

- configuring [2-712](#)
- displaying [2-428](#)
- limitations [2-713](#)

IEEE 802.1x

- and switchport modes [2-713](#)
- violation error recovery [2-128](#)
- See also port-based authentication

IGMP filters

- applying [2-182](#)
- debug messages, display [B-13](#)

IGMP groups, setting maximum [2-184](#)

IGMP maximum groups, debugging [B-14](#)

IGMP profiles

- creating [2-186](#)
- displaying [2-483](#)

IGMP snooping

- adding ports as a static member of a group [2-202](#)
- displaying [2-484, 2-489, 2-491](#)

- IGMP snooping (continued)
 - enabling [2-188](#)
 - enabling the configurable-leave timer [2-190](#)
 - enabling the Immediate-Leave feature [2-199](#)
 - flooding query count [2-196](#)
 - interface topology change notification behavior [2-198](#)
 - multicast table [2-487](#)
 - querier [2-192](#)
 - query solicitation [2-196](#)
 - report suppression [2-194](#)
 - switch topology change notification behavior [2-196](#)
- images
 - See software images
- Immediate-Leave processing
 - IGMP [2-199](#)
 - IPv6 [2-232](#)
 - MVR [2-328](#)
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-139](#)
- interface range command [2-141](#)
- interface-range macros [2-71](#)
- interfaces
 - assigning Ethernet interface to channel group [2-37](#)
 - configuring [2-122](#)
 - configuring multiple [2-141](#)
 - creating port-channel logical [2-139](#)
 - debug messages, display [B-12](#)
 - disabling [2-623](#)
 - displaying the MAC address table [2-543](#)
 - restarting [2-623](#)
- interface speed, configuring [2-683](#)
- interface vlan command [2-143](#)
- internal registers, displaying [2-409, 2-416, 2-419](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-124](#)
 - error recovery timer [2-128](#)
- ip access-group command [2-145](#)
- ip address command [2-148](#)
- IP addresses, setting [2-148](#)
- IP address matching [2-277](#)
- ip admission command [2-150](#)
- ip admission name proxy http command [2-151](#)
- ip arp inspection filter vlan command [2-153](#)
- ip arp inspection limit command [2-155](#)
- ip arp inspection log-buffer command [2-157](#)
- ip arp inspection trust command [2-159](#)
- ip arp inspection validate command [2-161](#)
- ip arp inspection vlan command [2-163](#)
- ip arp inspection vlan logging command [2-164](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-167](#)
- ip dhcp snooping command [2-166](#)
- ip dhcp snooping database command [2-169](#)
- ip dhcp snooping information option allow-untrusted command [2-173](#)
- ip dhcp snooping information option command [2-171](#)
- ip dhcp snooping information option format remote-id command [2-175](#)
- ip dhcp snooping limit rate command [2-176](#)
- ip dhcp snooping trust command [2-177](#)
- ip dhcp snooping verify command [2-178](#)
- ip dhcp snooping vlan command [2-179](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-180](#)
- ip igmp filter command [2-182](#)
- ip igmp max-groups command [2-184](#)
- ip igmp profile command [2-186](#)
- ip igmp snooping command [2-188](#)
- ip igmp snooping last-member-query-interval command [2-190](#)
- ip igmp snooping querier command [2-192](#)
- ip igmp snooping report-suppression command [2-194](#)
- ip igmp snooping tcn command [2-196](#)
- ip igmp snooping tcn flood command [2-198](#)
- ip igmp snooping vlan immediate-leave command [2-199](#)
- ip igmp snooping vlan mrouter command [2-200](#)

ip igmp snooping vlan static command [2-202](#)
 IP multicast addresses [2-325](#)
 IP phones
 auto-QoS configuration [2-22](#)
 trusting packets sent from [2-318](#)
 IP-precedence-to-DSCP map [2-292](#)
 ip snap forwarding command [2-204](#)
 ip source binding command [2-205](#)
 IP source guard
 disabling [2-209](#)
 displaying
 binding entries [2-493](#)
 configuration [2-495](#)
 dynamic binding entries only [2-476](#)
 enabling [2-209](#)
 static IP source bindings [2-205](#)
 ip ssh command [2-207](#)
 IPv6 access list, deny conditions [2-76](#)
 ipv6 access-list command [2-210](#)
 ipv6 address dhcp command [2-212](#)
 ipv6 dhcp client request vendor command [2-213](#)
 ipv6 dhcp ping packets command [2-214](#)
 ipv6 dhcp pool command [2-216](#)
 ipv6 dhcp server command [2-218](#)
 ipv6 mld snooping command [2-220](#)
 ipv6 mld snooping last-listener-query count command [2-222](#)
 ipv6 mld snooping last-listener-query-interval command [2-224](#)
 ipv6 mld snooping listener-message-suppression command [2-226](#)
 ipv6 mld snooping robustness-variable command [2-228](#)
 ipv6 mld snooping tcn command [2-230](#)
 ipv6 mld snooping vlan command [2-232](#)
 IPv6 SDM template [2-376](#)
 ipv6 traffic-filter command [2-234](#)
 ip verify source command [2-209](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-236](#)
 l2protocol-tunnel cos command [2-239](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-240](#)
 lacp system-priority command [2-242](#)
 Layer 2 mode, enabling [2-701](#)
 Layer 2 protocol ports, displaying [2-514](#)
 Layer 2 protocol-tunnel
 error detection for [2-124](#)
 error recovery timer [2-128](#)
 Layer 2 protocol tunnel counters [2-57](#)
 Layer 2 protocol tunneling error recovery [2-237](#)
 Layer 2 traceroute
 IP addresses [2-746](#)
 MAC addresses [2-743](#)
 Layer 3 mode, enabling [2-701](#)
 line configuration mode [1-3, 1-6](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-124](#)
 error recovery timer [2-128](#)
 link state group command [2-244](#)
 link state track command [2-246](#)
 load-distribution methods for EtherChannel [2-353](#)
 location (global configuration) command [2-247](#)
 location (interface configuration) command [2-249](#)
 logging file command [2-251](#)
 logical interface [2-139](#)

loopback error

- detection for [2-124](#)
- recovery timer [2-128](#)

loop guard, for spanning tree [2-648, 2-652](#)

M

mac access-group command [2-253](#)

MAC access-groups, displaying [2-531](#)

MAC access list configuration mode [2-255](#)

mac access-list extended command [2-255](#)

MAC access lists [2-81](#)

MAC addresses

disabling MAC address learning per VLAN [2-258](#)

displaying

- aging time [2-537](#)
- all [2-535](#)
- dynamic [2-541](#)
- MAC address-table move updates [2-546](#)
- notification settings [2-545, 2-548](#)
- number of addresses in a VLAN [2-539](#)
- per interface [2-543](#)
- per VLAN [2-552](#)
- static [2-550](#)
- static and dynamic entries [2-533](#)

dynamic

- aging time [2-257](#)
- deleting [2-60](#)
- displaying [2-541](#)

enabling MAC address notification [2-262](#)

enabling MAC address-table move update [2-260](#)

matching [2-277](#)

persistent stack [2-691](#)

static

- adding and removing [2-264](#)
- displaying [2-550](#)
- dropping on an interface [2-265](#)

tables [2-535](#)

MAC address notification, debugging [B-17](#)

mac address-table aging-time [2-253, 2-277](#)

mac address-table aging-time command [2-257](#)

mac address-table learning command [2-258](#)

mac address-table move update command [2-260](#)

mac address-table notification command [2-262](#)

mac address-table static command [2-264](#)

mac address-table static drop command [2-265](#)

MAC frames

See MTU

macro apply command [2-267](#)

macro description command [2-270](#)

macro global command [2-271](#)

macro global description command [2-274](#)

macro name command [2-275](#)

macros

- adding a description [2-270](#)
- adding a global description [2-274](#)
- applying [2-271](#)
- creating [2-275](#)
- displaying [2-579](#)
- interface range [2-71, 2-141](#)
- specifying parameter values [2-271](#)
- tracing [2-271](#)

maps

QoS

- defining [2-292](#)
- displaying [2-562](#)

VLAN

- creating [2-767](#)
- defining [2-277](#)
- displaying [2-614](#)

match (access-map configuration) command [2-277](#)

match (class-map configuration) command [2-279](#)

maximum transmission unit

See MTU

mdix auto command [2-282](#)

memory (boot loader) command [A-14](#)

mgmt_clr (boot loader) command [A-16](#)

mgmt_init (boot loader) command [A-17, A-18](#)

mkdir (boot loader) command [A-19](#)

MLD snooping

- configuring [2-226, 2-228](#)
- configuring queries [2-222, 2-224](#)
- configuring topology change notification [2-230](#)
- displaying [2-504, 2-506, 2-508, 2-510](#)
- enabling [2-220](#)
- enabling on a VLAN [2-232](#)

mls qos aggregate-policer command [2-286](#)

mls qos command [2-284](#)

mls qos cos command [2-288](#)

mls qos dscp-mutation command [2-290](#)

mls qos map command [2-292](#)

mls qos queue-set output buffers command [2-296](#)

mls qos queue-set output threshold command [2-298](#)

mls qos rewrite ip dscp command [2-300](#)

mls qos srr-queue input bandwidth command [2-302](#)

mls qos srr-queue input buffers command [2-304](#)

mls qos-srr-queue input cos-map command [2-306](#)

mls qos srr-queue input dscp-map command [2-308](#)

mls qos srr-queue input priority-queue command [2-310](#)

mls qos srr-queue input threshold command [2-312](#)

mls qos-srr-queue output cos-map command [2-314](#)

mls qos srr-queue output dscp-map command [2-316](#)

mls qos trust command [2-318](#)

mls qos vlan-based command [2-320](#)

mode, MVR [2-325](#)

Mode button, and password recovery [2-379](#)

modes, commands [1-2](#)

monitor session command [2-321](#)

more (boot loader) command [A-20](#)

MSTP

- displaying [2-592, 2-593](#)
- interoperability [2-66](#)
- link type [2-650](#)

MSTP (continued)

MST region

- aborting changes [2-656](#)
- applying changes [2-656](#)
- configuration name [2-656](#)
- configuration revision number [2-656](#)
- current or pending display [2-656](#)
- displaying [2-592, 2-593](#)
- MST configuration mode [2-656](#)
- VLANs-to-instance mapping [2-656](#)

path cost [2-658](#)

protocol mode [2-654](#)

restart protocol migration process [2-66](#)

root port

- loop guard [2-648](#)
- preventing from becoming designated [2-648](#)
- restricting which can be root [2-648](#)
- root guard [2-648](#)

root switch

- affects of extended system ID [2-646](#)
- hello-time [2-661, 2-668](#)
- interval between BDPU messages [2-662](#)
- interval between hello BPDU messages [2-661, 2-668](#)
- max-age [2-662](#)
- maximum hop count before discarding BPDU [2-663](#)
- port priority for selection of [2-664](#)
- primary or secondary [2-668](#)
- switch priority [2-667](#)

state changes

- blocking to forwarding state [2-675](#)
- enabling BPDU filtering [2-638, 2-672](#)
- enabling BPDU guard [2-640, 2-672](#)
- enabling Port Fast [2-672, 2-675](#)
- forward-delay time [2-660](#)
- length of listening and learning states [2-660](#)

MSTP (continued)

state changes (continued)

rapid transition to forwarding [2-650](#)shutting down Port Fast-enabled ports [2-672](#)state information display [2-591](#)

MTU

configuring size [2-740](#)displaying global setting [2-603](#)

Multicast Listener Discovery

See MLD

multicast group address, MVR [2-328](#)multicast groups, MVR [2-326](#)

Multicast Listener Discovery

See MLD

multicast router learning method [2-200](#)multicast router ports, configuring [2-200](#)multicast router ports, IPv6 [2-232](#)multicast storm control [2-693](#)multicast VLAN, MVR [2-325](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-107](#)

Multiple Spanning Tree Protocol

See MSTP

MVR

configuring [2-325](#)configuring interfaces [2-328](#)debug messages, display [B-21](#)displaying [2-571](#)displaying interface information [2-573](#)members, displaying [2-575](#)mvr (global configuration) command [2-325](#)mvr (interface configuration) command [2-328](#)mvr vlan group command [2-329](#)

Nnative VLANs [2-732](#)native VLAN tagging [2-772](#)

nonegotiate

DTP messaging [2-717](#)speed [2-683](#)

non-IP protocols

denying [2-81](#)forwarding [2-343](#)non-IP traffic access lists [2-255](#)

non-IP traffic forwarding

denying [2-81](#)permitting [2-343](#)non-stop forwarding [2-330](#)normal-range VLANs [2-755, 2-761](#)no vlan command [2-755, 2-765](#)nsf command [2-330](#)

O

online diagnostics

configuring health monitoring diagnostic tests [2-84](#)

displaying

configured boot-up coverage level [2-423](#)current scheduled tasks [2-423](#)event logs [2-423](#)supported test suites [2-423](#)test ID [2-423](#)test results [2-423](#)test statistics [2-423](#)

enabling

scheduling [2-86](#)syslog messages [2-84](#)

online diagnostics (continued)

global configuration mode

clearing health monitoring diagnostic test schedule [2-84](#)

clearing test-based testing schedule [2-86](#)

setting health monitoring diagnostic testing [2-84](#)

setting test-based testing [2-86](#)

setting up health monitoring diagnostic test schedule [2-84](#)

setting up test-based testing [2-86](#)

removing scheduling [2-86](#)

scheduled switchover

disabling [2-86](#)

enabling [2-86](#)

setting test interval [2-86](#)

specifying health monitoring diagnostic tests [2-84](#)

starting testing [2-88](#)

P

PAGP

See EtherChannel

pagp learn-method command [2-332](#)

pagp port-priority command [2-334](#)

password, VTP [2-781, 2-785](#)

password-recovery mechanism, enabling and disabling [2-379](#)

permit (ARP access-list configuration) command [2-336](#)

permit (IPv6) command [2-338](#)

permit (MAC access-list configuration) command [2-343](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-332](#)

PID, displaying [2-469](#)

PIM-DVMRP, as multicast router learning method [2-200](#)

police aggregate command [2-348](#)

police command [2-346](#)

policed-DSCP map [2-292](#)

policy-map command [2-350](#)

policy maps

applying to an interface [2-381, 2-387](#)

creating [2-350](#)

displaying [2-582](#)

hierarchical [2-351](#)

policers

displaying [2-555](#)

for a single class [2-346](#)

for multiple classes [2-286, 2-348](#)

policed-DSCP map [2-292](#)

traffic classification

defining the class [2-42](#)

defining trust states [2-748](#)

setting DSCP or IP precedence values [2-385](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)

configuring violation modes [2-120](#)

debug messages, display [B-5](#)

enabling guest VLAN supplicant [2-94, 2-104](#)

enabling IEEE 802.1x

globally [2-91](#)

per interface [2-114](#)

guest VLAN [2-105](#)

host modes [2-107](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-108](#)

MAC authentication bypass [2-109](#)

manual control of authorization state [2-114](#)

multiple hosts on authorized port [2-107](#)

PAE as authenticator [2-113](#)

periodic re-authentication

enabling [2-117](#)

time between attempts [2-118](#)

quiet period between failed authentication exchanges [2-118](#)

re-authenticating IEEE 802.1x-enabled ports [2-116](#)

resetting configurable IEEE 802.1x parameters [2-103](#)

- port-based authentication (continued)
 - switch-to-authentication server retransmission time [2-118](#)
 - switch-to-client frame-retransmission number [2-111 to 2-112](#)
 - switch-to-client retransmission time [2-118](#)
- port-channel load-balance command [2-353](#)
- Port Fast, for spanning tree [2-675](#)
- port ranges, defining [2-69, 2-71](#)
- ports, debugging [B-67](#)
- ports, protected [2-730](#)
- port security
 - aging [2-724](#)
 - debug messages, display [B-69](#)
 - enabling [2-719](#)
 - violation error recovery [2-128](#)
- port trust states for QoS [2-318](#)
- port types, MVR [2-328](#)
- power information, displaying [2-438](#)
- priority-queue command [2-355](#)
- priority value, stack member [2-600, 2-696](#)
- private-vlan command [2-357](#)
- private-vlan mapping command [2-360](#)
- private VLANs
 - association [2-728](#)
 - configuring [2-357](#)
 - configuring ports [2-715](#)
 - displaying [2-609](#)
 - host ports [2-715](#)
 - mapping
 - configuring [2-728](#)
 - displaying [2-454](#)
 - promiscuous ports [2-715](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-469](#)
- promiscuous ports, private VLANs [2-715](#)
- protected ports, displaying [2-460](#)

- pruning
 - VLANs [2-732](#)
 - VTP
 - displaying interface information [2-454](#)
 - enabling [2-781, 2-785](#)
- pruning-eligible VLAN list [2-734](#)
- PVST+
 - See STP

Q

- QoS
 - auto-QoS
 - configuring [2-22](#)
 - debug messages, display [B-2](#)
 - displaying [2-397](#)
 - class maps
 - creating [2-44](#)
 - defining the match criteria [2-279](#)
 - displaying [2-406](#)
 - defining the CoS value for an incoming packet [2-288](#)
 - displaying configuration information [2-397, 2-554](#)
 - DSCP transparency [2-300](#)
 - DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-290](#)
 - defining DSCP-to-DSCP-mutation map [2-292](#)
 - egress queues
 - allocating buffers [2-296](#)
 - defining the CoS output queue threshold map [2-314](#)
 - defining the DSCP output queue threshold map [2-316](#)
 - displaying buffer allocations [2-558](#)
 - displaying CoS output queue threshold map [2-562](#)
 - displaying DSCP output queue threshold map [2-562](#)
 - displaying queueing strategy [2-558](#)
 - displaying queue-set settings [2-565](#)

QoS (continued)

egress queues (continued)

- enabling bandwidth shaping and scheduling [2-687](#)
- enabling bandwidth sharing and scheduling [2-689](#)
- limiting the maximum output on a port [2-685](#)
- mapping a port to a queue-set [2-362](#)
- mapping CoS values to a queue and threshold [2-314](#)
- mapping DSCP values to a queue and threshold [2-316](#)
- setting maximum and reserved memory allocations [2-298](#)
- setting WTD thresholds [2-298](#)

enabling [2-284](#)

ingress queues

- allocating buffers [2-304](#)
- assigning SRR scheduling weights [2-302](#)
- defining the CoS input queue threshold map [2-306](#)
- defining the DSCP input queue threshold map [2-308](#)
- displaying buffer allocations [2-558](#)
- displaying CoS input queue threshold map [2-562](#)
- displaying DSCP input queue threshold map [2-562](#)
- displaying queueing strategy [2-558](#)
- displaying settings for [2-556](#)
- enabling the priority queue [2-310](#)
- mapping CoS values to a queue and threshold [2-306](#)
- mapping DSCP values to a queue and threshold [2-308](#)
- setting WTD thresholds [2-312](#)

maps

- defining [2-292, 2-306, 2-308, 2-314, 2-316](#)
- displaying [2-562](#)

QoS (continued)

policy maps

- applying an aggregate policer [2-348](#)
- applying to an interface [2-381, 2-387](#)
- creating [2-350](#)
- defining policers [2-286, 2-346](#)
- displaying policers [2-555](#)
- displaying policy maps [2-582](#)
- hierarchical [2-351](#)
- policed-DSCP map [2-292](#)
- setting DSCP or IP precedence values [2-385](#)
- traffic classifications [2-42](#)
- trust states [2-748](#)

port trust states [2-318](#)queues, enabling the expedite [2-355](#)

statistics

- in-profile and out-of-profile packets [2-558](#)
- packets enqueued or dropped [2-558](#)
- sent and received CoS values [2-558](#)
- sent and received DSCP values [2-558](#)

trusted boundary for IP phones [2-318](#)VLAN-based [2-320](#)

quality of service

See QoS

querytime, MVR [2-325](#)queue-set command [2-362](#)

R
radius-server dead-criteria command [2-363](#)radius-server host command [2-365](#)

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

re-authenticating IEEE 802.1x-enabled ports [2-116](#)

re-authentication

- periodic [2-117](#)
- time between attempts [2-118](#)

receiver ports, MVR [2-328](#)

receiving flow-control packets [2-135](#)

recovery mechanism

- causes [2-128](#)
- display [2-48, 2-404, 2-440, 2-443](#)
- timer interval [2-129](#)

reload command [2-367](#)

remote command [2-369](#)

remote-span command [2-371](#)

Remote Switched Port Analyzer

- See RSPAN

rename (boot loader) command [A-21](#)

renew ip dhcp snooping database command [2-373](#)

reset (boot loader) command [A-22](#)

reset command [2-770](#)

resource templates, displaying [2-587](#)

restricted VLAN

- See dot1x auth-fail vlan

rmdir (boot loader) command [A-23](#)

rmon collection stats command [2-375](#)

root guard, for spanning tree [2-648](#)

routed ports

- IP addresses on [2-149](#)
- number supported [2-149](#)

routing frames

- See MTU

RSPAN

- configuring [2-321](#)
- displaying [2-568](#)
- filter RSPAN traffic [2-321](#)
- remote-span command [2-371](#)
- sessions
 - add interfaces to [2-321](#)
 - displaying [2-568](#)
 - start new [2-321](#)

S

scheduled switchover

- disabling [2-86](#)
- enabling [2-86](#)

SDM mismatch mode [2-377, 2-601](#)

sdm prefer command [2-376](#)

SDM templates

- allowed resources [2-377](#)
- and stacking [2-376](#)
- displaying [2-587](#)
- dual IPv4 and IPv6 [2-376](#)

secure ports, limitations [2-721](#)

sending flow-control packets [2-135](#)

service password-recovery command [2-379](#)

service-policy command [2-381](#)

session command [2-384](#)

set (boot loader) command [A-24](#)

set command [2-385](#)

setup command [2-387](#)

setup express command [2-390](#)

show access-lists command [2-392](#)

show archive status command [2-395](#)

show arp access-list command [2-396](#)

show auto qos command [2-397](#)

show boot command [2-401](#)

show cable-diagnostics tdr command [2-404](#)

show changes command [2-770](#)

show class-map command [2-406](#)

show controllers cpu-interface command [2-407](#)

show controllers ethernet-controller command [2-409](#)

show controllers ethernet-controller fastethernet command [2-416](#)

show controllers tcam command [2-419](#)

show controller utilization command [2-421](#)

show current command [2-770](#)

show dot1q-tunnel command [2-428](#)

show dot1x command [2-429](#)

show dtp [2-433](#)

- show eap command [2-435](#)
- show env command [2-438](#)
- show errdisable detect command [2-440](#)
- show errdisable flap-values command [2-442](#)
- show errdisable recovery command [2-443](#)
- show etherchannel command [2-445](#)
- show fallback profile command [2-448](#)
- show flowcontrol command [2-450](#)
- show idprom command [2-452](#)
- show interfaces command [2-454](#)
- show interfaces counters command [2-466](#)
- show inventory command [2-469](#)
- show ip arp inspection command [2-471](#)
- show ipc command [2-497](#)
- show ip dhcp snooping binding command [2-476](#)
- show ip dhcp snooping command [2-475](#)
- show ip dhcp snooping database command [2-478, 2-480](#)
- show ip igmp profile command [2-483](#)
- show ip igmp snooping address command [2-506](#)
- show ip igmp snooping command [2-484, 2-504](#)
- show ip igmp snooping groups command [2-487](#)
- show ip igmp snooping mrouter command [2-489, 2-508](#)
- show ip igmp snooping querier command [2-491, 2-510](#)
- show ip source binding command [2-493](#)
- show ipv6 access-list command [2-501](#)
- show ipv6 dhcp conflict command [2-503](#)
- show ipv6 route updated [2-512](#)
- show ip verify source command [2-495](#)
- show l2protocol-tunnel command [2-514](#)
- show lacp command [2-517](#)
- show link state group command [2-521](#)
- show location [2-523](#)
- show location command [2-523](#)
- show logging command [2-526](#)
- show mac access-group command [2-531](#)
- show mac address-table address command [2-535](#)
- show mac address-table aging time command [2-537](#)
- show mac address-table command [2-533](#)
- show mac address-table count command [2-539](#)
- show mac address-table dynamic command [2-541](#)
- show mac address-table interface command [2-543](#)
- show mac address-table learning command [2-545](#)
- show mac address-table move update command [2-546](#)
- show mac address-table notification command [2-61, 2-548, B-19](#)
- show mac address-table static command [2-550](#)
- show mac address-table vlan command [2-552](#)
- show mls qos aggregate-policer command [2-555](#)
- show mls qos command [2-554](#)
- show mls qos input-queue command [2-556](#)
- show mls qos interface command [2-558](#)
- show mls qos maps command [2-562](#)
- show mls qos queue-set command [2-565](#)
- show mls qos vlan command [2-567](#)
- show monitor command [2-568](#)
- show mvr command [2-571](#)
- show mvr interface command [2-573](#)
- show mvr members command [2-575](#)
- show pagp command [2-577](#)
- show parser macro command [2-579](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform dl command [C-5](#)
- show platform etherchannel command [C-6](#)
- show platform forward command [C-7](#)
- show platform frontend-controller command [C-9](#)
- show platform igmp snooping command [C-10](#)
- show platform ipc trace command [C-18](#)
- show platform ip multicast command [C-12](#)
- show platform ip unicast command [C-13](#)
- show platform ipv6 unicast command [C-19](#)
- show platform ip wccp command [C-17](#)
- show platform layer4op command [C-21](#)
- show platform mac-address-table command [C-22](#)
- show platform messaging command [C-23](#)
- show platform monitor command [C-24](#)
- show platform mvr table command [C-25](#)

- show platform pm command [C-26](#)
- show platform port-asic command [C-27](#)
- show platform port-security command [C-32](#)
- show platform qos command [C-33](#)
- show platform resource-manager command [C-34](#)
- show platform snmp counters command [C-36](#)
- show platform spanning-tree command [C-37](#)
- show platform stack-manager command [C-39](#)
- show platform stp-instance command [C-38](#)
- show platform tb command [C-41](#)
- show platform team command [C-43](#)
- show platform vlan command [C-46](#)
- show policy-map command [2-582](#)
- show port security command [2-584](#)
- show proposed command [2-770](#)
- show sdm prefer command [2-587](#)
- show setup express command [2-590](#)
- show spanning-tree command [2-591](#)
- show storm-control command [2-598](#)
- show switch command [2-600](#)
- show system mtu command [2-603](#)
- show trust command [2-748](#)
- show udd command [2-604](#)
- show version command [2-607](#)
- show vlan access-map command [2-614](#)
- show vlan command [2-609](#)
- show vlan command, fields [2-611](#)
- show vlan filter command [2-615](#)
- show vmcs command [2-616](#)
- show vtp command [2-618](#)
- shutdown command [2-623](#)
- shutdown threshold, Layer 2 protocol tunneling [2-236](#)
- shutdown vlan command [2-624](#)
- small violation-rate command [2-625](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-631](#)
- SNMP informs, enabling the sending of [2-627](#)
- snmp-server enable traps command [2-627](#)
- snmp-server host command [2-631](#)
- snmp trap mac-notification command [2-635](#)
- SNMP traps
 - enabling MAC address notification trap [2-635](#)
 - enabling the MAC address notification feature [2-262](#)
 - enabling the sending of [2-627](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-8](#)
 - deleting [2-73](#)
 - downloading [2-11](#)
 - upgrading [2-8, 2-11](#)
 - uploading [2-18](#)
- software version, displaying [2-607](#)
- source ports, MVR [2-328](#)
- SPAN
 - configuring [2-321](#)
 - debug messages, display [B-20](#)
 - displaying [2-568](#)
 - filter SPAN traffic [2-321](#)
 - sessions
 - add interfaces to [2-321](#)
 - displaying [2-568](#)
 - start new [2-321](#)
- spanning-tree backbonefast command [2-637](#)
- spanning-tree bpduguard command [2-638](#)
- spanning-tree bpduguard command [2-640](#)
- spanning-tree cost command [2-642](#)
- spanning-tree etherchannel command [2-644](#)
- spanning-tree extend system-id command [2-646](#)
- spanning-tree guard command [2-648](#)
- spanning-tree link-type command [2-650](#)
- spanning-tree loopguard default command [2-652](#)
- spanning-tree mode command [2-654](#)
- spanning-tree mst configuration command [2-656](#)
- spanning-tree mst cost command [2-658](#)
- spanning-tree mst forward-time command [2-660](#)
- spanning-tree mst hello-time command [2-661](#)

- spanning-tree mst max-age command [2-662](#)
- spanning-tree mst max-hops command [2-663](#)
- spanning-tree mst port-priority command [2-664](#)
- spanning-tree mst pre-standard command [2-666](#)
- spanning-tree mst priority command [2-667](#)
- spanning-tree mst root command [2-668](#)
- spanning-tree portfast (global configuration) command [2-672](#)
- spanning-tree portfast (interface configuration) command [2-675](#)
- spanning-tree port-priority command [2-670](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-677](#)
- spanning-tree uplinkfast command [2-678](#)
- spanning-tree vlan command [2-680](#)
- speed command [2-683](#)
- srr-queue bandwidth limit command [2-685](#)
- srr-queue bandwidth shape command [2-687](#)
- srr-queue bandwidth share command [2-689](#)
- SSH, configuring version [2-207](#)
- stack-mac persistent timer command [2-691](#)
- stack member
 - access [2-384](#)
 - number [2-600, 2-699](#)
 - priority value [2-696](#)
 - provisioning [2-697](#)
 - reloading [2-367](#)
- stacks, switch
 - MAC address [2-691](#)
 - provisioning a new member [2-697](#)
 - reloading [2-367](#)
 - stack member access [2-384](#)
 - stack member number [2-600, 2-699](#)
 - stack member priority value [2-600, 2-696](#)
- static-access ports, configuring [2-703](#)
- statistics, Ethernet group [2-375](#)
- sticky learning, enabling [2-719](#)
- storm-control command [2-693](#)
- STP
 - BackboneFast [2-637](#)
 - counters, clearing [2-65](#)
 - debug messages, display
 - BackboneFast events [B-73](#)
 - MSTP [B-76](#)
 - optimized BPDUs handling [B-75](#)
 - spanning-tree activity [B-71](#)
 - switch shim [B-78](#)
 - transmitted and received BPDUs [B-74](#)
 - UplinkFast [B-80](#)
 - detection of indirect link failures [2-637](#)
 - enabling protocol tunneling for [2-236](#)
 - EtherChannel misconfiguration [2-644](#)
 - extended system ID [2-646](#)
 - path cost [2-642](#)
 - protocol modes [2-654](#)
 - root port
 - accelerating choice of new [2-678](#)
 - loop guard [2-648](#)
 - preventing from becoming designated [2-648](#)
 - restricting which can be root [2-648](#)
 - root guard [2-648](#)
 - UplinkFast [2-678](#)
 - root switch
 - affects of extended system ID [2-646, 2-681](#)
 - hello-time [2-680](#)
 - interval between BDPU messages [2-680](#)
 - interval between hello BPDU messages [2-680](#)
 - max-age [2-680](#)
 - port priority for selection of [2-670](#)
 - primary or secondary [2-680](#)
 - switch priority [2-680](#)

STP (continued)

state changes

- blocking to forwarding state [2-675](#)
- enabling BPDU filtering [2-638, 2-672](#)
- enabling BPDU guard [2-640, 2-672](#)
- enabling Port Fast [2-672, 2-675](#)
- enabling timer to recover from error state [2-128](#)
- forward-delay time [2-680](#)
- length of listening and learning states [2-680](#)
- shutting down Port Fast-enabled ports [2-672](#)

state information display [2-591](#)VLAN options [2-667, 2-680](#)SVIs, creating [2-143](#)SVI status calculation [2-705](#)

Switched Port Analyzer

See SPAN

switching characteristics

modifying [2-701](#)returning to interfaces [2-701](#)switchport access command [2-703](#)switchport autostate exclude command [2-705](#)switchport backup interface command [2-707](#)switchport block command [2-710](#)switchport command [2-701](#)switchport host command [2-711](#)switchport mode command [2-712](#)switchport mode private-vlan command [2-715](#)switchport nonegotiate command [2-717](#)switchport port-security aging command [2-724](#)switchport port-security command [2-719](#)switchport priority extend command [2-726](#)switchport private-vlan command [2-728](#)switchport protected command [2-730](#)switchports, displaying [2-454](#)switchport trunk command [2-732](#)switchport voice detect [2-735](#)switchport voice vlan command [2-736](#)switch priority command [2-696](#)switch provision command [2-697](#)switch renumber command [2-699](#)system env temperature threshold yellow command [2-738](#)system message logging, save message to flash [2-251](#)system mtu command [2-740](#)system resource templates [2-376](#)

Ttar files, creating, listing, and extracting [2-15](#)TDR, running [2-742](#)temperature information, displaying [2-438](#)templates, system resources [2-376](#)test cable-diagnostics tdr command [2-742](#)traceroute mac command [2-743](#)traceroute mac ip command [2-746](#)trunking, VLAN mode [2-712](#)trunk mode [2-712](#)trunk ports [2-712](#)trunks, to non-DTP device [2-713](#)trusted boundary for QoS [2-318](#)trusted port states for QoS [2-318](#)tunnel ports, Layer 2 protocol, displaying [2-514](#)type (boot loader) command [A-27](#)

U

UDLD

aggressive mode [2-750, 2-752](#)debug messages, display [B-88](#)enable globally [2-750](#)enable per interface [2-752](#)error recovery timer [2-128](#)message timer [2-750](#)normal mode [2-750, 2-752](#)reset a shutdown interface [2-754](#)status [2-604](#)udld command [2-750](#)udld port command [2-752](#)

uddl reset command [2-754](#)
 unicast storm control [2-693](#)
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing [2-710](#)
 unknown unicast traffic, preventing [2-710](#)
 unset (boot loader) command [A-28](#)
 upgrading
 copying software images [2-8](#)
 downloading software images [2-11](#)
 software images, monitoring status of [2-395](#)
 UplinkFast, for STP [2-678](#)
 user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-30](#)
 version mismatch mode [2-601](#)
 vlan (global configuration) command [2-755](#)
 vlan (VLAN configuration) command [2-761](#)
 vlan access-map command [2-767](#)
 VLAN access map configuration mode [2-767](#)
 VLAN access maps
 actions [2-6](#)
 displaying [2-614](#)
 VLAN-based QoS [2-320](#)
 VLAN configuration
 rules [2-758, 2-763](#)
 saving [2-755, 2-765](#)
 VLAN configuration mode
 commands
 VLAN [2-761](#)
 VTP [2-785](#)
 description [1-5](#)
 entering [2-769](#)
 summary [1-3](#)
 vlan database command [2-769](#)
 vlan dot1q tag native command [2-772](#)
 vlan filter command [2-774](#)
 VLAN filters, displaying [2-615](#)
 VLAN ID range [2-755, 2-761](#)
 VLAN maps
 applying [2-774](#)
 creating [2-767](#)
 defining [2-277](#)
 displaying [2-614](#)
 VLAN Query Protocol
 See VQP
 VLANs
 adding [2-755](#)
 configuring [2-755, 2-761](#)
 debug messages, display
 ISL [B-84](#)
 VLAN IOS file system error tests [B-83](#)
 VLAN manager activity [B-81](#)
 VTP [B-86](#)
 displaying configurations [2-609](#)
 extended-range [2-755](#)
 MAC addresses
 displaying [2-552](#)
 number of [2-539](#)
 media types [2-758, 2-763](#)
 normal-range [2-755, 2-761](#)
 private [2-715](#)
 configuring [2-357](#)
 displaying [2-609](#)
 See also private VLANs
 restarting [2-624](#)
 saving the configuration [2-755](#)
 shutting down [2-624](#)
 SNMP traps for VTP [2-629, 2-632](#)
 suspending [2-624](#)
 variables [2-761](#)
 VLAN Trunking Protocol
 See VTP
 VM mode [2-601](#)

VMPS

- configuring servers [2-779](#)
- displaying [2-616](#)
- error recovery timer [2-129](#)
- reconfirming dynamic VLAN assignments [2-776](#)

vmps reconfirm (global configuration) command [2-777](#)

vmps reconfirm (privileged EXEC) command [2-776](#)

vmps retry command [2-778](#)

vmps server command [2-779](#)

voice VLAN

- configuring [2-735, 2-736](#)
- setting port priority [2-726](#)

VQP

- and dynamic-access ports [2-704](#)
- clearing client statistics [2-67](#)
- displaying information [2-616](#)
- per-server retry count [2-778](#)
- reconfirmation interval [2-777](#)
- reconfirming dynamic VLAN assignments [2-776](#)

VTP

- changing characteristics [2-781](#)
- clearing pruning counters [2-68](#)
- configuring
 - domain name [2-781, 2-785](#)
 - file name [2-781](#)
 - mode [2-781, 2-785](#)
 - password [2-781, 2-785](#)
- counters display fields [2-619](#)
- displaying information [2-618](#)
- enabling
 - pruning [2-781, 2-785](#)
 - tunneling for [2-236](#)
 - Version 2 [2-781, 2-785](#)
- mode [2-781, 2-785](#)
- pruning [2-781, 2-785](#)
- saving the configuration [2-755, 2-765](#)
- statistics [2-618](#)
- status [2-618](#)
- status display fields [2-620](#)

vtp (global configuration) command [2-781](#)

vtp (VLAN configuration) command [2-785](#)

