



CHAPTER 9

Configuring N Port Virtualization

N port virtualization (NPV) reduces the number of Fibre Channel domain IDs in SANs. Switches operating in the NPV mode do not join a fabric. They pass traffic between NPV core switch links and end devices, which eliminates the domain IDs for these edge switches.

NPV is supported by the following Cisco MDS 9000 switches and Cisco Nexus 5000 Series switches only:

- Cisco MDS 9124 Multilayer Fabric Switch
- Cisco MDS 9134 Fabric Switch
- Cisco Fabric Switch for HP c-Class BladeSystem
- Cisco Fabric Switch for IBM BladeCenter
- Cisco Nexus 5000 Series switches



Note

NPV is available on these switches only while in NPV mode; if in switch mode, NPV is not available.

This chapter includes the following sections:


- [About N Port Identifier Virtualization, page 9-1](#)
- [About N Port Virtualization, page 9-2](#)
- [NPV Guidelines and Requirements, page 9-7](#)
- [Configuring NPV, page 9-8](#)
- [Using the NPV Setup Wizard, page 9-14](#)

About N Port Identifier Virtualization

N port identifier virtualization (NPIV) provides a means to assign multiple FC IDs to a single N port. This feature allows multiple applications on the N port to use different identifiers and allows access control, zoning, and port security to be implemented at the application level. [Figure 9-1](#) shows an example application using NPIV.

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-1 NPIV Example

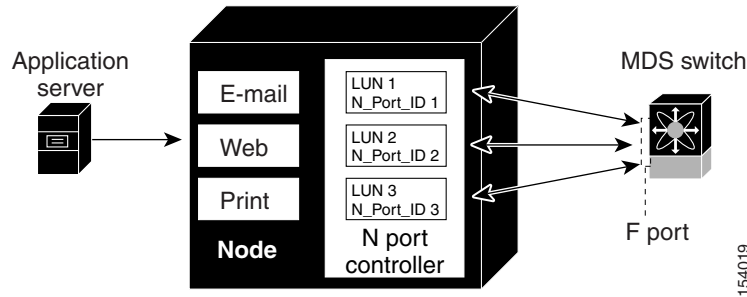

You must globally enable NPIV for all VSANs on the MDS switch to allow the NPIV-enabled applications to use multiple N port identifiers.



Note

All of the N port identifiers are allocated in the same VSAN.

Enabling N Port Identifier Virtualization

You must globally enable NPIV for all VSANs on the MDS switch to allow the NPIV-enabled applications to use multiple N port identifiers.



Note

All of the N port identifiers are allocated in the same VSAN.


About N Port Virtualization

Typically, Fibre Channel networks are deployed using a core-edge model with a large number of fabric switches connected to edge devices. Such a model is cost-effective because the per port cost for director class switches is much higher than that of fabric switches. However, as the number of ports in the fabric increases, the number of switches deployed also increases, and you can end up with a significant increase in the number of domain IDs (the maximum number supported is 239). This challenge becomes even more difficult when additional blade chassis are deployed in Fibre Channel networks.

NPV addresses the increase in the number of domain IDs needed to deploy a large number of the ports by making a fabric or blade switch appear as a host to the core Fibre Channel switch, and as a Fibre Channel switch to the servers in the fabric or blade switch. NPV aggregates multiple locally connected N ports into one or more external NP links, which shares the domain ID of the NPV core switch among multiple NPV switches. NPV also allows multiple devices to attach to same port on the NPV core switch, which reduces the need for more ports on the core.

Send documentation comments to fm-docfeedback@cisco.com


Figure 9-2 Cisco NPV Fabric Configuration

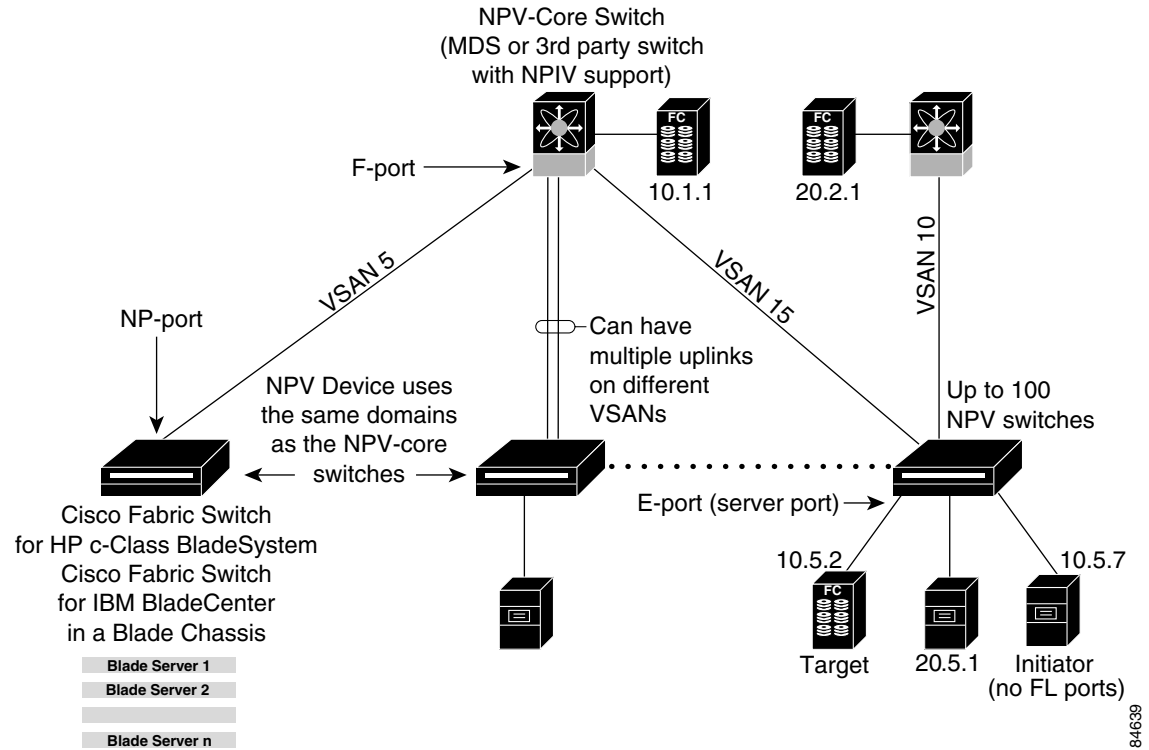

While NPV is similar to N port identifier virtualization (NPIV), it does not offer exactly the same functionality. NPIV provides a means to assign multiple FC IDs to a single N port, and allows multiple applications on the N port to use different identifiers. NPIV also allows access control, zoning, and port security to be implemented at the application level. NPV makes use of NPIV to get multiple FCIDs allocated from the core switch on the NP port.

Figure 9-3 shows a more granular view of an NPV configuration at the interface level.

Figure 9-3 Cisco NPV Configuration–Interface View

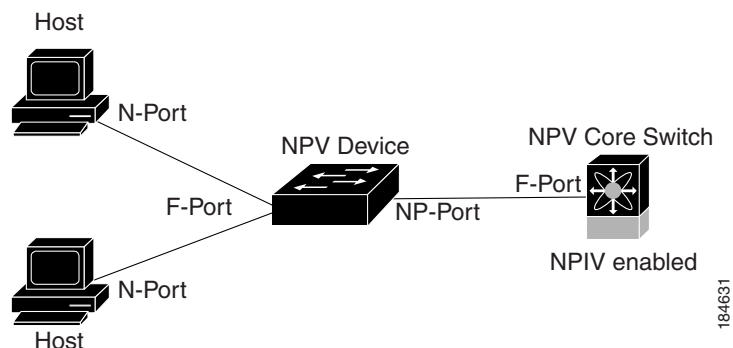

Send documentation comments to fm-docfeedback@cisco.com

NPV Mode

A switch is in NPV mode after a user has enabled NPV and the switch has successfully rebooted. NPV mode applies to an entire switch. All end devices connected to a switch that is in NPV mode must log in as an N port to use this feature (loop-attached devices are not supported). All links from the edge switches (in NPV mode) to the NPV core switches are established as NP ports (not E ports), which are used for typical interswitch links. NPIV is used by the switches in NPV mode to log in to multiple end devices that share a link to the NPV core switch.



Note

In-order data delivery is not required in NPV mode because the exchange between two end devices always takes the same uplink to the core from the NPV device. For traffic beyond the NPV device, core switches will enforce in-order delivery if needed and/or configured.

NP Ports

An NP port (proxy N port) is a port on a device that is in NPV mode and connected to the NPV core switch using an F port. NP ports behave like N ports except that in addition to providing N port behavior, they also function as proxies for multiple, physical N ports.



Note

A Cisco Nexus 5000 Series switch in NPV mode that runs Cisco NX-OS Release 4.2(1) or later releases supports trunking F port mode on NP ports. You can enable either, or both, VSAN trunking and an F port on an NP port.

NP Links

An NP link is basically an NPIV uplink to a specific end device. NP links are established when the uplink to the NPV core switch comes up; the links are terminated when the uplink goes down. Once the uplink is established, the NPV switch performs an internal FLOGI to the NPV core switch, and then (if the FLOGI is successful) registers itself with the NPV core switch's name server. Subsequent FLOGIs from end devices in this NP link are converted to FDISCs. For more details refer to the [“Internal FLOGI Parameters” section on page 9-4](#).

Server links are uniformly distributed across the NP links. All the end devices behind a server link will be mapped to only one NP link.

Internal FLOGI Parameters

When an NP port comes up, the NPV device first logs itself in to the NPV core switch and sends a FLOGI request that includes the following parameters:

- The fWWN (fabric port WWN) of the NP port used as the pWWN in the internal login.
- The VSAN-based sWWN (switch WWN) of the NPV device used as nWWN (node WWN) in the internal FLOGI.

After completing its FLOGI request, the NPV device registers itself with the fabric name server using the following additional parameters:

- Switch name and interface name (for example, fc1/4) of the NP port is embedded in the symbolic port name in the name server registration of the NPV device itself.

Send documentation comments to fm-docfeedback@cisco.com

- The IP address of the NPV device is registered as the IP address in the name server registration of the NPV device.



Note

The BB_SCN of internal FLOGIs on NP ports is always set to zero. The BB_SCN is supported at the F-port of the NPV device.

Figure 9-4 shows the internal FLOGI flows between an NPV core switch and an NPV device.

Figure 9-4 Internal FLOGI Flows

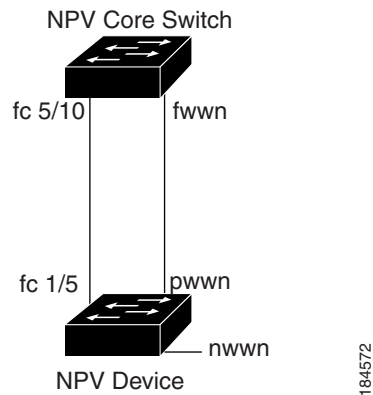


Table 9-1 identifies the internal FLOGI parameters that appear in Figure 9-4.

Table 9-1 Internal FLOGI Parameters

Parameter	Derived From
pWWN	The fWWN of the NP port.
nWWN	The VSAN-based sWWN of the NPV device.
fWWN	The fWWN of the F port on the NPV core switch.
symbolic port name	The switch name and NP port interface string. Note If there is no switch name available, then the output will display “switch.” For example, switch: fc1/5.
IP address	The IP address of the NPV device.
symbolic node name	The NPV switch name.

Although fWWN-based zoning is supported for NPV devices, it is not recommended because:

- Zoning is not enforced at the NPV device (rather, it is enforced on the NPV core switch).
- Multiple devices behind an NPV device log in via the same F port on the core (they use same fWWN and cannot be separated into different zones).
- The same device might log in using different fWWNs on the core switch (depending on the NPV link it uses) and may need to be zoned using different fWWNs.

[Send documentation comments to fm-docfeedback@cisco.com](mailto:fm-docfeedback@cisco.com)

Default Port Numbers

Port numbers on NPV-enabled switches will vary depending on the switch model. For details about port numbers for NPV-eligible switches, see the *Cisco NX-OS Family Licensing Guide*.

NPV CFS Distribution over IP

NPV devices use only IP as the transport medium. CFS uses multicast forwarding for CFS distribution. NPV devices do not have ISL connectivity and FC domain. To use CFS over IP, multicast forwarding has to be enabled on the Ethernet IP switches all along the network that physically connects the NPV switch. You can also manually configure the static IP peers for CFS distribution over IP on NPV-enabled switches. For more information, see the *Cisco MDS 9000 Family NX-OS System Management Configuration Guide*.

NPV Traffic Management

This sections discusses the following aspects of load balancing:

- [Auto, page 9-6](#)
- [Traffic Map, page 9-6](#)
- [Disruptive, page 9-7](#)

Auto

Before Cisco MDS SAN-OS Release 3.3(1a), NPV supported automatic selection of external links. When a server interface is brought up, an external interface with the minimum load is selected from the available links. There is no manual selection on the server interfaces using the external links. Also, when a new external interface was brought up, the existing load was not distributed automatically to the newly available external interface. This newly brought up interface is used only by the server interfaces that come up after this interface.

Traffic Map

As in Cisco MDS SAN-OS Release 3.3(1a) and NX-OS Release 4.1(1a), NPV supports traffic management by allowing you to select and configure the external interfaces that the server uses to connect to the core switches.



Note

When the NPV traffic management is configured, the server uses only the configured external interfaces. Any other available external interface will not be used.

The NPV traffic management feature provides the following benefits:

- Facilitates traffic engineering by providing dedicated external interfaces for the servers connected to NPV.
- Uses the shortest path by selecting external interfaces per server interface.
- Uses the persistent FC ID feature by providing the same traffic path after a link break, or reboot of the NPV or core switch.

Send documentation comments to fm-docfeedback@cisco.com

- Balances the load by allowing the user to evenly distribute the load across external interfaces.

Disruptive

Disruptive load balance works independent of automatic selection of interfaces and configured traffic map of external interfaces. This feature forces reinitialization of the server interfaces to achieve load balance when this feature is enabled and whenever a new external interface comes up. To avoid flapping the server interfaces too often undesirably, enable this feature once and then disable it whenever the needed load balance is achieved.

If disruptive load balance is not enabled, you need to manually flap the server interface to move some of the load to a new external interface.

Multiple VSAN Support

By grouping devices into different NPV sessions based on VSANs, it is possible to support multiple VSANs on the NPV-enabled switch. The correct uplink must be selected based on the VSAN that the uplink is carrying.

NPV Guidelines and Requirements

Following are recommended guidelines and requirements when deploying NPV:

- NPV core switches must support NPIV.
- You can have up to 100 NPV devices.
- Nondisruptive upgrades are supported. See the *Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide*.
- Port tracking is supported. See the *Cisco MDS 9000 Family NX-OS Security Configuration Guide*.
- You can configure zoning for end devices that are connected to NPV devices using all available member types on the NPV core switch. If fWWN, sWWN, domain, or port-based zoning is used, then fWWN, sWWN or the domain/port of the NPV core switch should be used.
- Port security is supported on the NPV core switch for devices logged in via NPV.
- NPV uses a load balancing algorithm to automatically assign end devices in a VSAN to one of the NPV core switch links (in the same VSAN) upon initial login. If there are multiple NPV core switch links in the same VSAN, then you cannot assign a specific one to an end device.
- Both servers and targets can be connected to an NPV device.
- Remote SPAN is not supported.
- Local switching is not supported; all traffic is switched using the NPV core switch.
- NPV devices can connect to multiple NPV core switches. In other words, different NP ports can be connected to different NPV core switches.
- NPV supports NPIV-capable module servers (nested NPIV).
- Only F, NP, and SD ports are supported in NPV mode.
- In the case of servers that are booted over the SAN with NPV, if an NPV link failover occurs, servers will lose access to their boot LUN temporarily.

Send documentation comments to fm-docfeedback@cisco.com

- NPV switches do not recognize the BB_SCN configuration on the xNP ports because of interoperability issues with the third-party core switches.

NPV Traffic Management Guidelines

When deploying NPV traffic management, follow these guidelines:

- Use NPV traffic management only when the automatic traffic engineering by the NPV device is not sufficient for the network requirements.
- Do not configure traffic maps for all the servers. For non-configured servers, NPV will use automatic traffic engineering.
- Configure the Persistent FC ID on the core switch. Traffic engineering directs the associated server interface to external interfaces that lead to the same core switch. The server will be assigned the same FC ID for every log in. This guideline is not applicable if a 91x4 switch is used as the core switch.
- Server interfaces configured to a set of external interfaces cannot use any other available external interfaces, even if the configured interfaces are not available.
- Do not configure disruptive load balancing because this involves moving a device from one external interface to another interface. Moving the device between external interfaces requires NPV relogin to the core switch through F port leading to traffic disruption.
- Link a set of servers to a core switch by configuring the server to a set of external interfaces that are linked to the core switch.

Configuring NPV

When you enable NPV, the system configuration is erased and the system reboots with the NPV mode enabled.



Note

We recommend that you save the current configuration either on bootflash or a TFTP server before NPV (if the configuration is required for later use). Use the following commands to save either your non-NPV or NPV configuration:

```
switch# copy running bootflash:filename
```

The configuration can be reapplied later using the following command:


```
switch# copy bootflash:filename running-config
```

Send documentation comments to fm-docfeedback@cisco.com

To use Fabric Manager and Device Manager to configure NPV, follow these steps:

- Step 1** Launch Device Manager from the core NPV switch to enable NPIV on the core NPV switch. From the Admin drop-down menu, select Feature Control. Select **enable** for the NPIV feature (see Figure 9-5).

Figure 9-5 Enabling NPIV and NPV

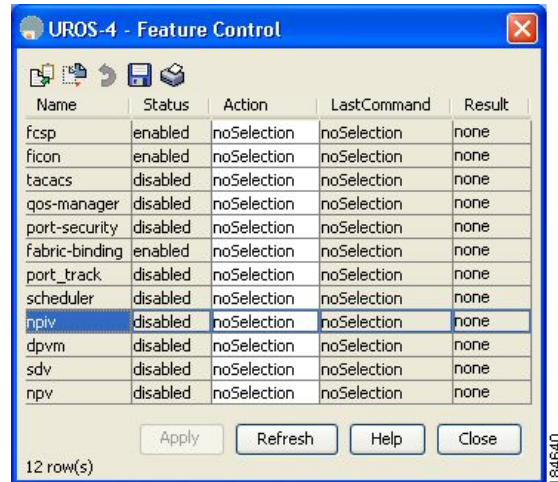

- Step 2** Click **Apply**.
- Step 3** From the Interface drop-down menu, select **FC All** to configure the NPIV core switch port as an F Port.
- Step 4** In the Mode Admin column, select the F port mode and click **Apply**.
- Step 5** Launch Device Manager from the NPV device to enable NPV on the NPV device. From the Admin drop-down menu, select Feature Control. Select enable for the NPV feature and click **Apply**.
- Step 6** From the Interface drop-down menu, select **FC All** to configure the external interfaces on the NPV device.
- Step 7** In the Mode Admin column, select the NP port mode and click **Apply**.
- Step 8** From the Interface drop-down menu, select FC All to configure the server interfaces on the NPV device.
- Step 9** In the Mode Admin column, select F port mode and click **Apply**.
- Step 10** The default Admin status is down. After configuring port modes, you must select up Admin Status to bring up the links.

Send documentation comments to fm-docfeedback@cisco.com

Configuring NPV Traffic Management

The NPV traffic management feature is enabled after configuring NPV. Configuring NPV traffic management involves configuring a list of external interfaces to the servers, and enabling or disabling disruptive load balancing.

Configuring List of External Interfaces per Server Interface

A list of external interfaces are linked to the server interfaces when the server interface is down, or if the specified external interface list includes the external interface already in use.

To configure the list of external interfaces per server interface using Fabric Manager, perform the following tasks:

-
- Step 1** Choose **Physical Attributes > Switches > N_Port Virtualizer (NPV)** (see [Figure 9-6](#)).

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-6 NPV Traffic Map Tab

Fabric Manager 3.4(1) [admin@localhost (session 2)] /SAN/Fabric_sw2

File View Zone Tools Performance Server Help

Logical Domains

- SAN
 - Fabric_sw2
 - All VSANs
 - VSAN0001
 - VSAN0002 (down)
 - VSAN4000
 - Groups

Physical Attributes

- Switches
 - Hardware
 - Licenses
 - CFS
 - Clock
 - Supervisor Statistics
 - Copy Configuration
 - Interfaces
 - FC Services
 - Events
 - Security
 - NPV
 - N_Port Virtualizer (NPV)
 - Flex Attach
 - NP Link Statistics
 - ISLs
 - End Devices

Control Traffic Map Load Balance NP Link

Switch	Server Interface	External Interface List
sw4	fc1/2	fc1/2
sw3	fc1/10	fc1/19-fc1/21
sw4	fc1/5	fc1/16
sw3	fc1/33	fc1/32,fc1/34
sw4	fc1/8	fc1/2,fc1/6,fc1/9-fc1/10,fc1/14,fc1/17,fc1/21
sw4	fc1/10	fc1/4-fc1/5,fc1/12,fc1/15,fc1/19-fc1/21
sw4	fc1/13	fc1/16,fc1/18
sw4	fc1/15	fc1/20-fc1/21
sw4	fc1/19	fc1/8-fc1/9,fc1/12
sw4	fc1/20	fc1/9-fc1/10,fc1/13,fc1/17

20:00:00:1b:32:09:e8:df-H

20:00:00:1b:32:09:6e:e0-H

20:00:00:1b:32:09:89:df-H

20:00:00:1b:32:07:13:e9-H

sw3

sw2

sw1

Fabric_sw2 Log Events

10 rows, queried 2 switches


Step 2 Click the **Traffic Map** tab.

Step 3 Click the  icon in the toolbar or right click and then select **Create Row...**

Send documentation comments to fm-docfeedback@cisco.com


- Step 4** Select the Switch from the drop-down list (see [Figure 9-7](#)).

Figure 9-7 Map Entry Dialog Box

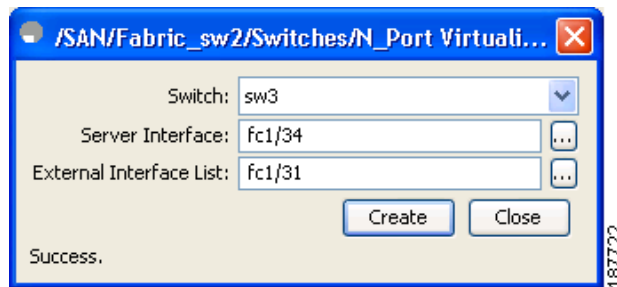

- Step 5** Type the port numbers or click the [...] button (not available on blade server switches) to select the Server Interface and External Interfaces from the port selection dialog box (see [Figure 9-8](#)).

Figure 9-8 Port Selection Dialog Box

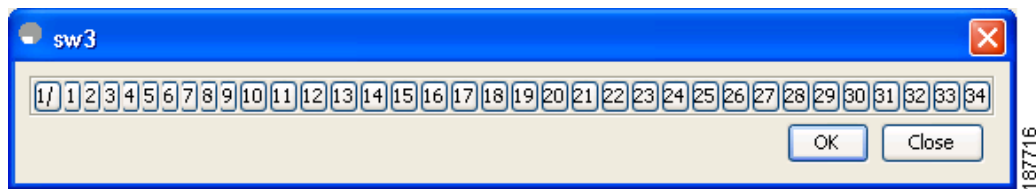

Note You can select only one Server Interface but multiple External Interfaces can be mapped on to it. Previously selected ports are disabled and cannot be selected.

To delete the map entry, select the row from the Traffic Map tab, and then click the  icon in the toolbar or right click and select **Delete Row**.

Enabling the Global Policy for Disruptive Load Balancing

Disruptive load balancing allows you to review the load on all the external interfaces and balance the load disruptively. Disruptive load balancing is done by moving the servers using heavily loaded external interfaces, to the external interfaces running with fewer loads.


To enable disruptive load balancing using Fabric Manager, perform the following tasks:

- Step 1** Choose **Physical Attributes > Switches > N_Port Virtualizer (NPV)** (see [Figure 9-9](#)).
- Step 2** Click the **Load Balance** tab.
- Step 3** Check the **Enable** check box to enable disruptive load balancing on the switch.

Send documentation comments to fm-docfeedback@cisco.com

To enable disruptive load balancing on all the switches, check the **Enable All** check box (see Figure 9-9).

Figure 9-9 NPV Load Balance Tab

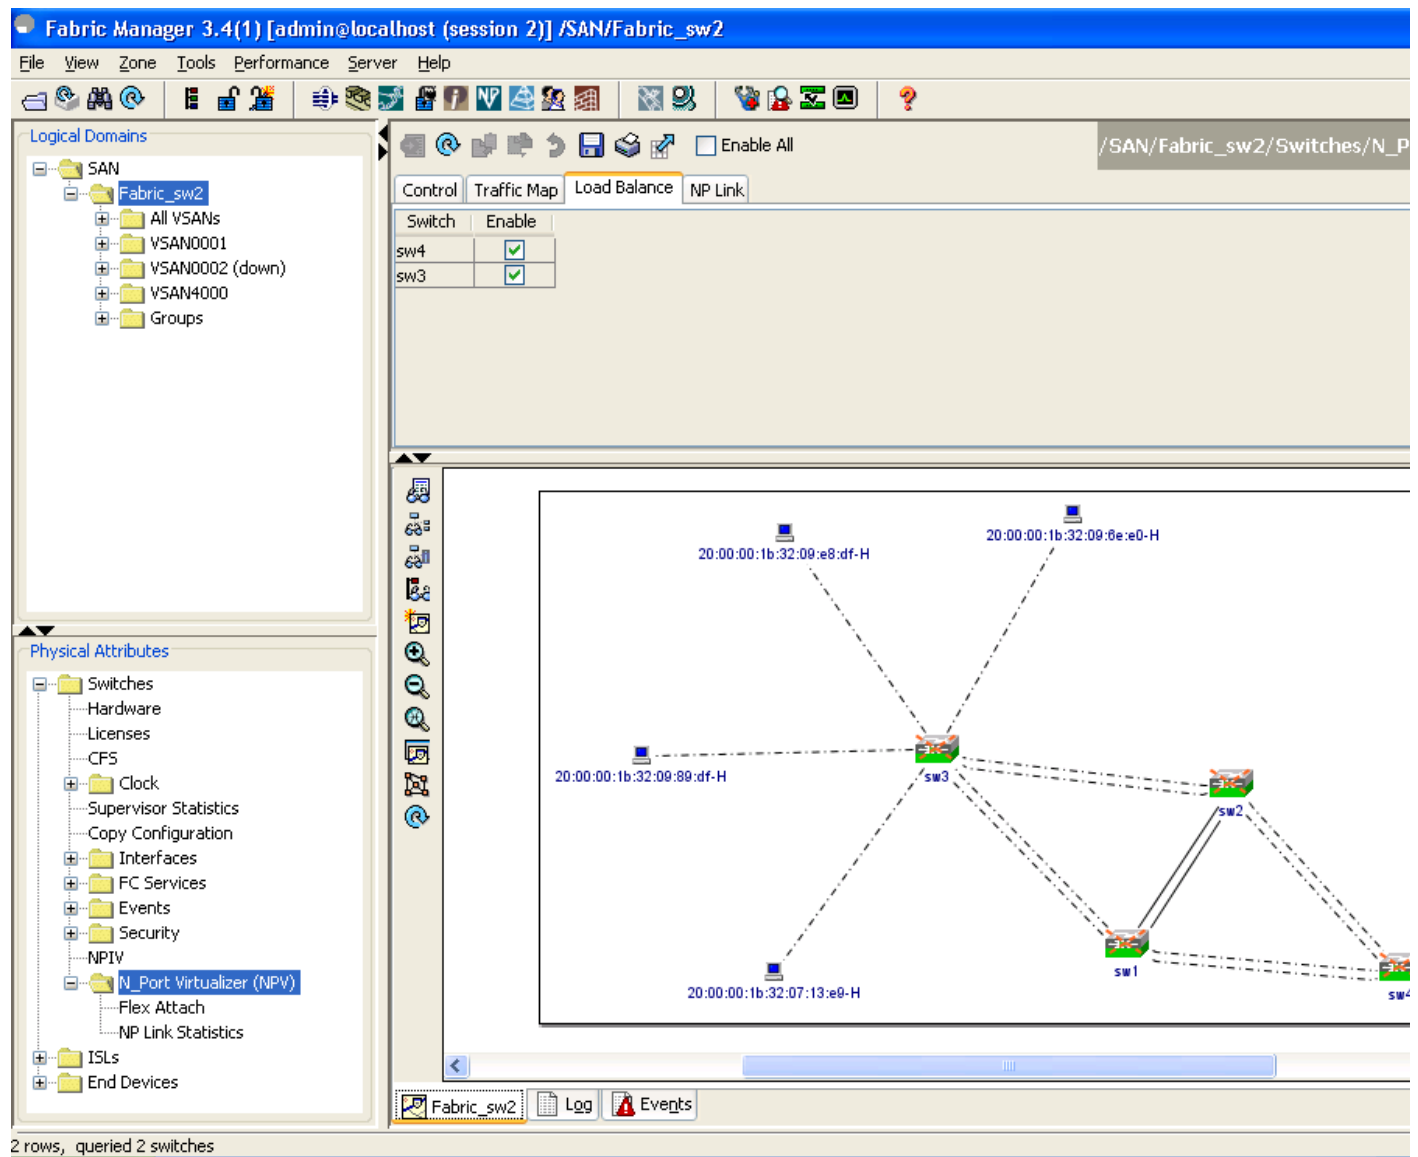


Displaying the External Interface Usage for Server Interfaces

To display the external interface usage for the server interfaces, follow these steps:

- Step 1** Choose **Physical Attributes > Switches > N_Port Virtualizer (NPV)** (see Figure 9-10).
- Step 2** Click the **External Interface Usage** tab.

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-10 External Interface Usage

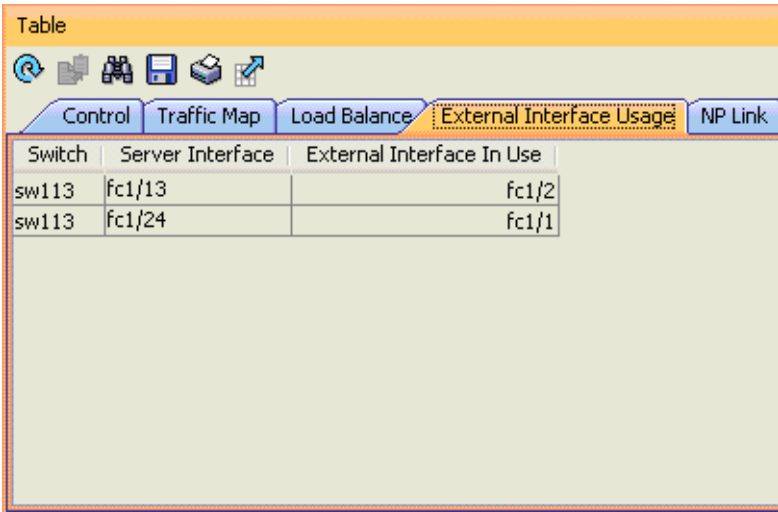

Switch	Server Interface	External Interface In Use
sw113	fc1/13	fc1/2
sw113	fc1/24	fc1/1

Using the NPV Setup Wizard



Note


For Cisco Nexus 5000 Series switches, you must first enable the NPV mode for the switch by choosing **Switches > N_Port Virtualization (NPV)** in the Physical Attributes pane, and then use the NPV wizard to configure other NPV-related settings on the switch.

Send documentation comments to fm-docfeedback@cisco.com

To configure NPV using the wizard, follow these steps:

- Step 1** Select **Tools > NPV > NPV Setup...** to launch NPV Setup Wizard from Fabric Manager (see Figure 9-11).

Figure 9-11 Launching NPV Setup Wizard

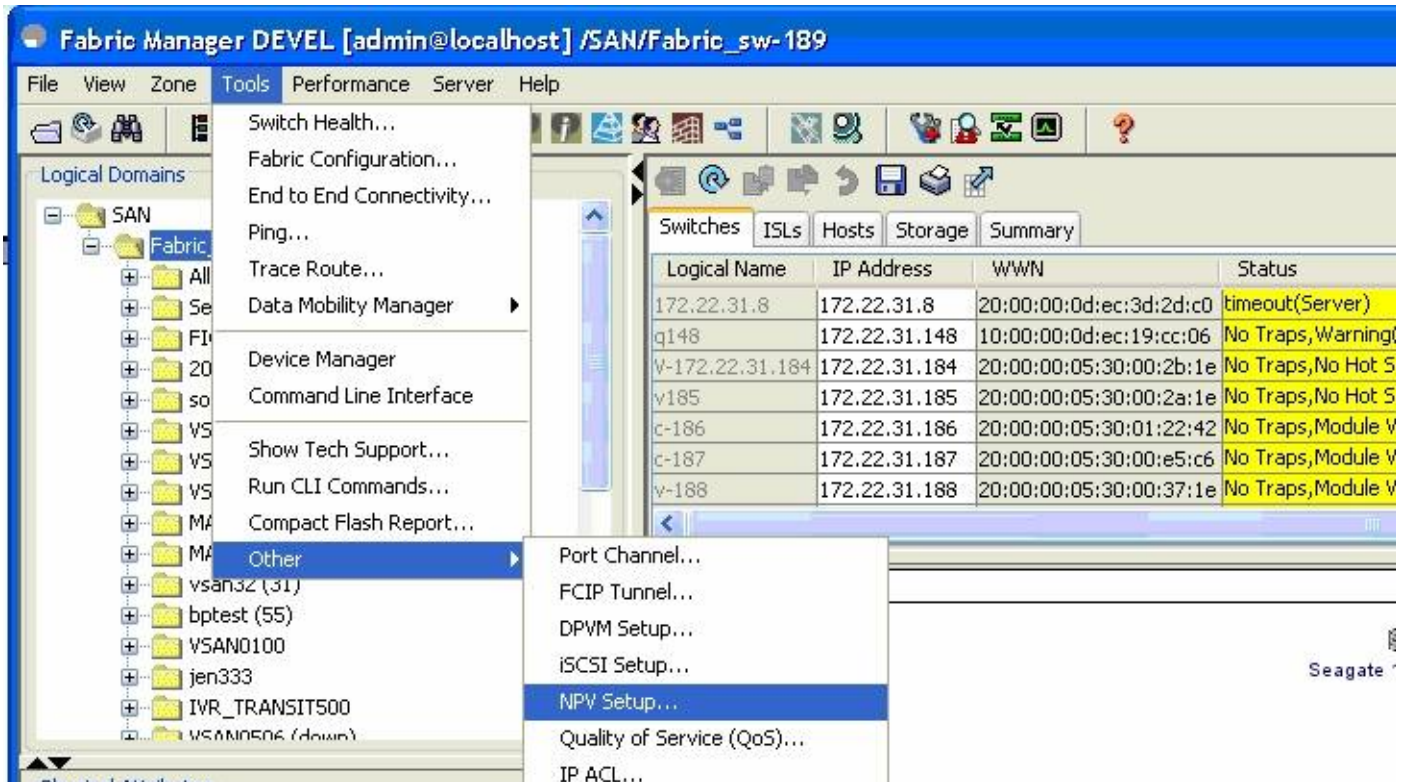

Before the wizard starts, Fabric Manager checks if there are any NPV- and NPIV-capable switches from the client's SAN. An NPV-capable switch has to be a Cisco MDS 9124, 9134, a Cisco Nexus 5000 Series switch, an HP Blade Server, or an IBM Blade Server with SAN-OS Release 3.2.2 and later. An NPIV-capable switch has to be Cisco switch with SAN-OS Release 3.0.1 and later. If there are no NPV-capable switches, Fabric Manager displays an error message (see Figure 9-12).

Send documentation comments to fm-docfeedback@cisco.com


Figure 9-12 **Error in Launching**



Send documentation comments to fm-docfeedback@cisco.com

Step 2 Select the NPV devices (see [Figure 9-13](#)).

Figure 9-13 Selecting the NPV Devices

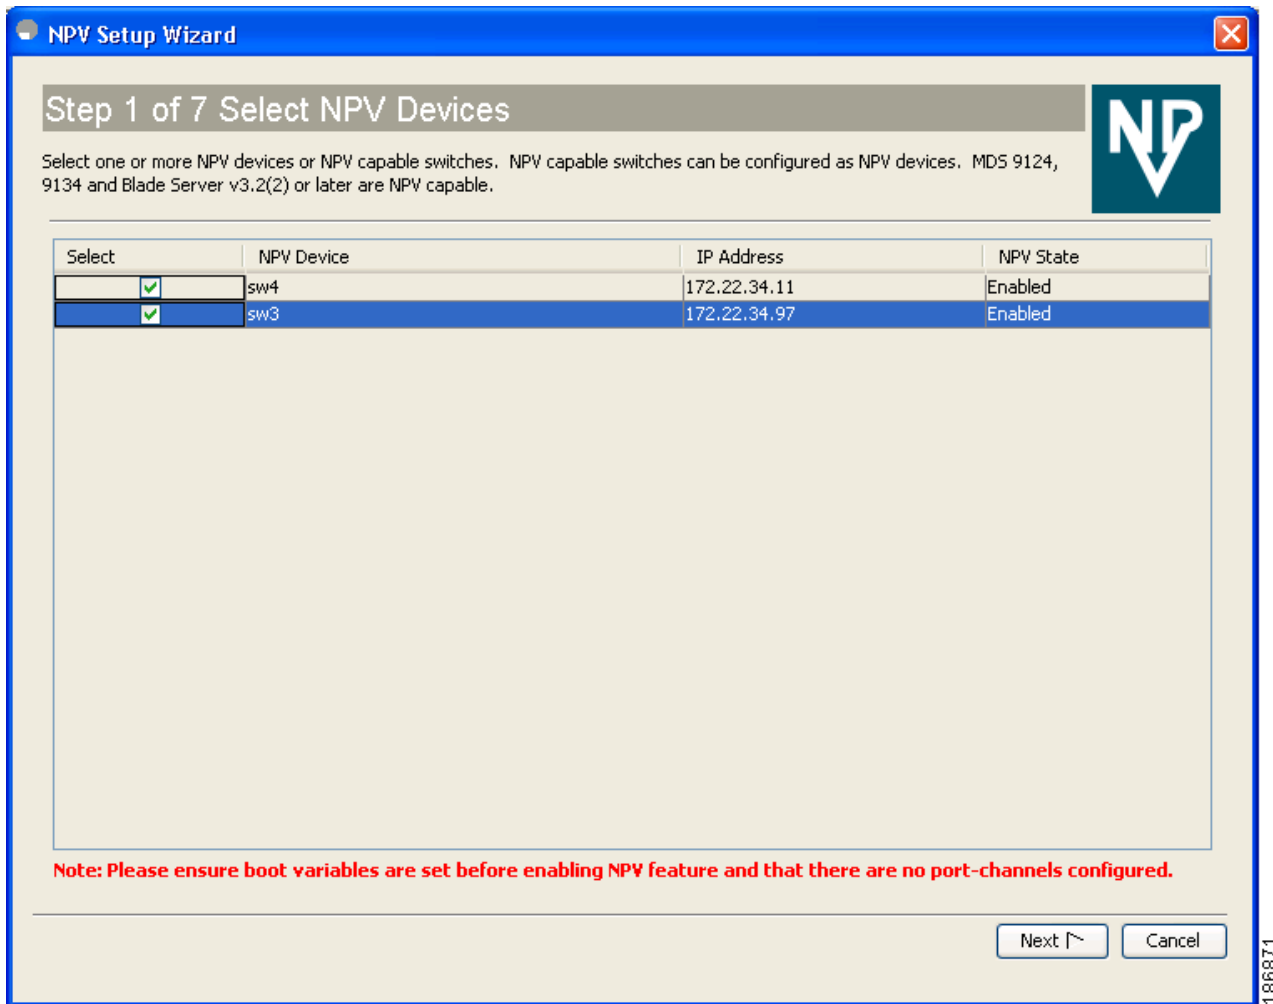


A table lists all the available NPV-capable switches including the switches on which NPV is not yet enabled. Check the check boxes to select the required NPV devices. On devices that are not NPV enabled, this wizard will enable NPV on the devices in the final step.

Send documentation comments to fm-docfeedback@cisco.com

If you choose switches that are NPV disabled and click **Next**, a warning message appears with a list of IP addresses of the NPV devices on which NPV will be enabled. Enabling NPV on the switch will result in reboot of the switch. Boot variables of the switches have to be set, to enable NPV on them through this wizard (see [Figure 9-14](#)).

Figure 9-14 *Warning to Enable NPV Feature on NPV-Capable Switches*

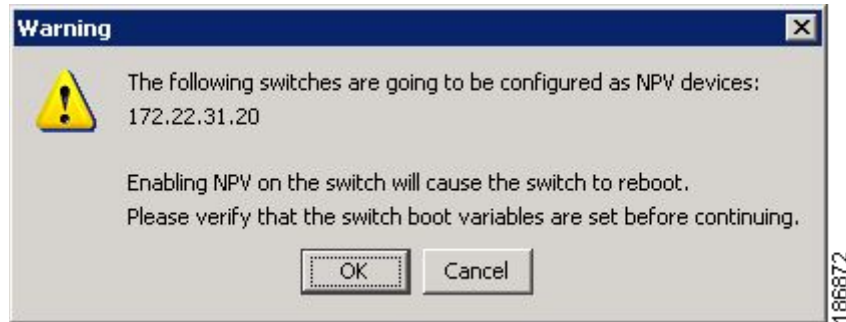

Send documentation comments to fm-docfeedback@cisco.com

Step 3 Select the NPIV core switches (see [Figure 9-15](#)).

Figure 9-15 Selecting the NPIV Core Switches

NPV Setup Wizard

Step 2 of 7 Select NPIV Core Switches

Select one or more NPIV core or NPIV capable switches. NPIV capable switches can be configured as NPIV cores. Switches detected as connected to selected NPV devices are automatically selected.

Select	NPIV Core Switch	IP Address	NPIV State
☒	sw2	172.22.34.46	Enabled
☒	sw1	172.22.34.224	Enabled

Back Next Cancel


186874

Check the check boxes to select the required NPIV core switches. The table lists all the available NPIV core switches including the core switches that have not yet enabled the NPIV feature. NPIV core switches that are not NPIV-enabled. This wizard will enable NPIV in the final step.

Send documentation comments to fm-docfeedback@cisco.com

Step 4 Create new NPV device and NPIV core switch pairs as required (see [Figure 9-16](#)).

Figure 9-16 Creating NPV Device and NPIV Core Switch Pairs

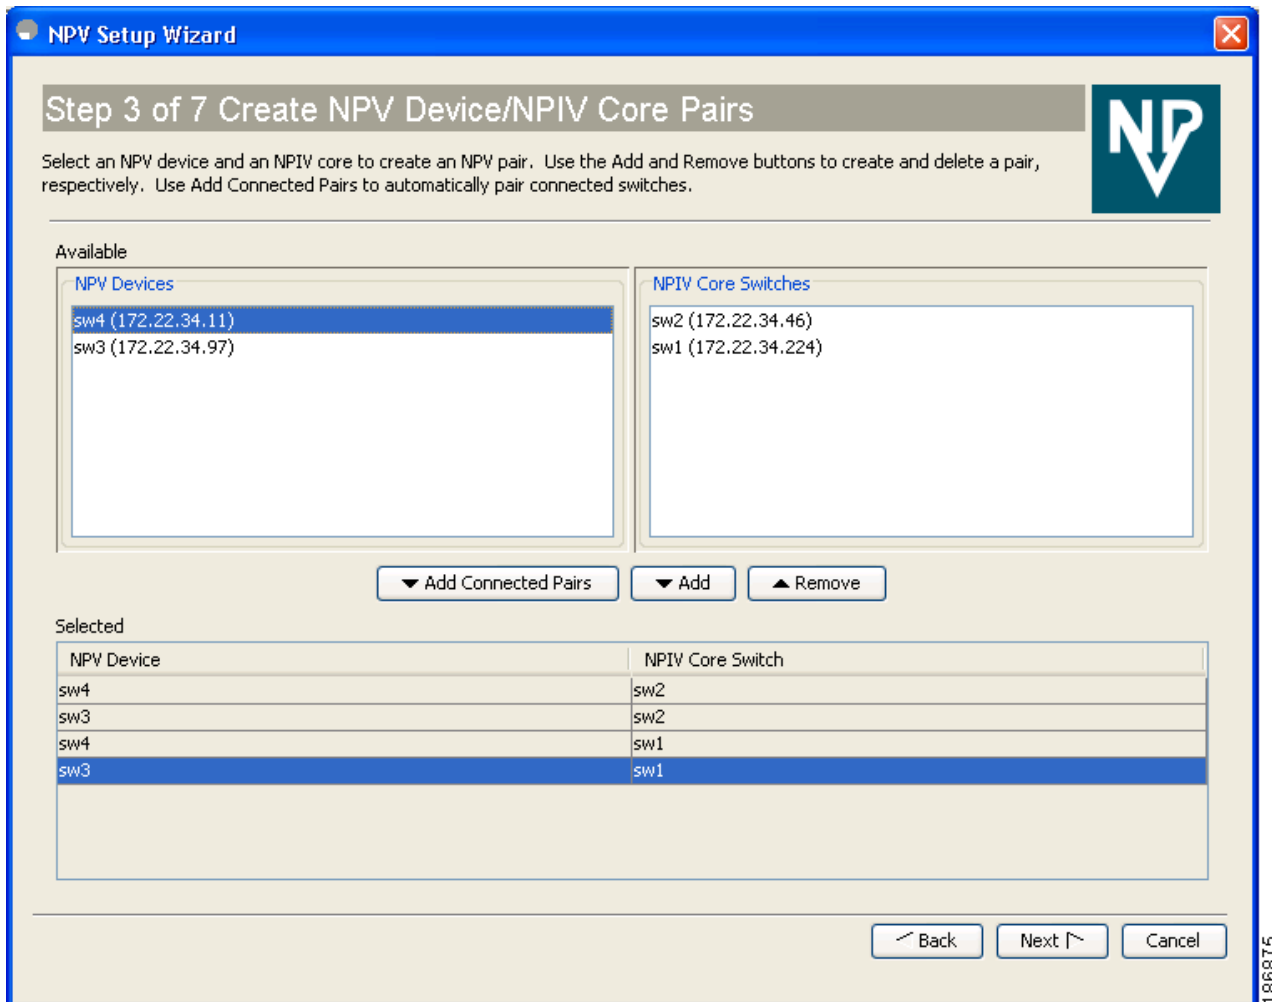

Based on selections in the previous steps, the wizard displays all available NPV devices and NPIV core switches in separate lists. You can select one from each list and click **Add** or **Remove** buttons to create new NPV device and NPIV core switch combinations or pairs.

The NPV wizard checks if there are any NPIV core switches that are already connected to the NPV devices selected in the previous step. Click the **Add Connected Pairs** button to add a list of all the existing pairs that are interconnected, to the Selected table.

The Selected table is then populated with both the existing and the intended pairs. Each NPIV core switch can be paired with multiple NPV devices.

After Step 6, the wizard prompts you to physically connect the new pairs that are not yet connected.

On the switches that are not paired, the NPV wizard enables the NPV and NPIV modes. However, there is a possibility that these unpaired switches may be segmented and lose their presence on the fabric.

Send documentation comments to fm-docfeedback@cisco.com


After you click the Next button in Step 3 of 6, the wizard determines if you have selected all the connected pairs. A warning message is displayed (See [Figure 9-19](#)) that lists all the connected pairs that you have not selected and warns that they will be segmented after the NPV setup.



Note

- NPV wizard does not detect ports that are in a channel group and that are not connected by ISLs. The wizard does not configure any port in a Port Channel Group to F ports on the core switch. Port channel grouping is not applicable to NPV devices. (See [Figure 9-17](#).)
- Remove the port channel groups if you need to select those particular ports as F ports during the setup. For more information, see the *Cisco MDS 9000 Family NX-OS Security Configuration Guide*.

Figure 9-17 Port Channel Group Detected

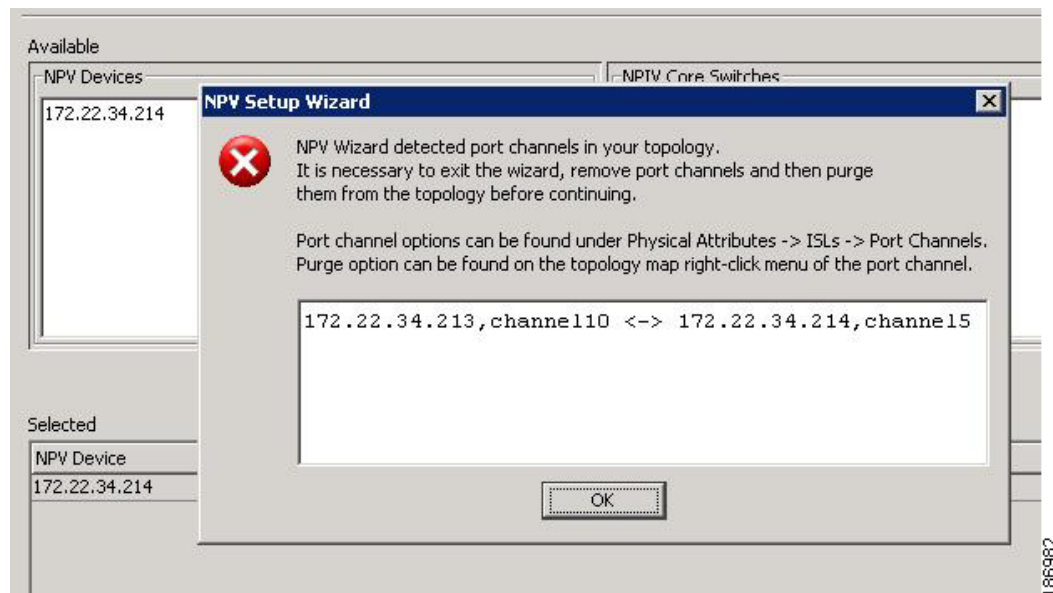

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-18 **Warning, NPV Setup Wizard**

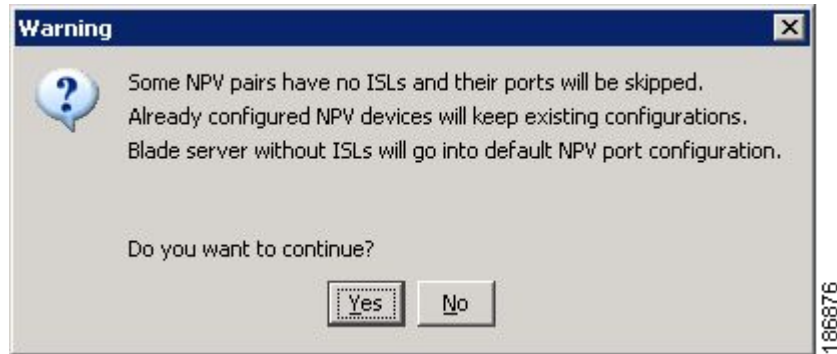



Figure 9-19 **Warning, NPV Setup Wizard Continued**



Send documentation comments to fm-docfeedback@cisco.com

- Step 5** You can configure NPV associated ports either through automated or manual methods. (See [Figure 9-20](#).)

Figure 9-20 Configuring NPV Associated Ports by the Automatic Method

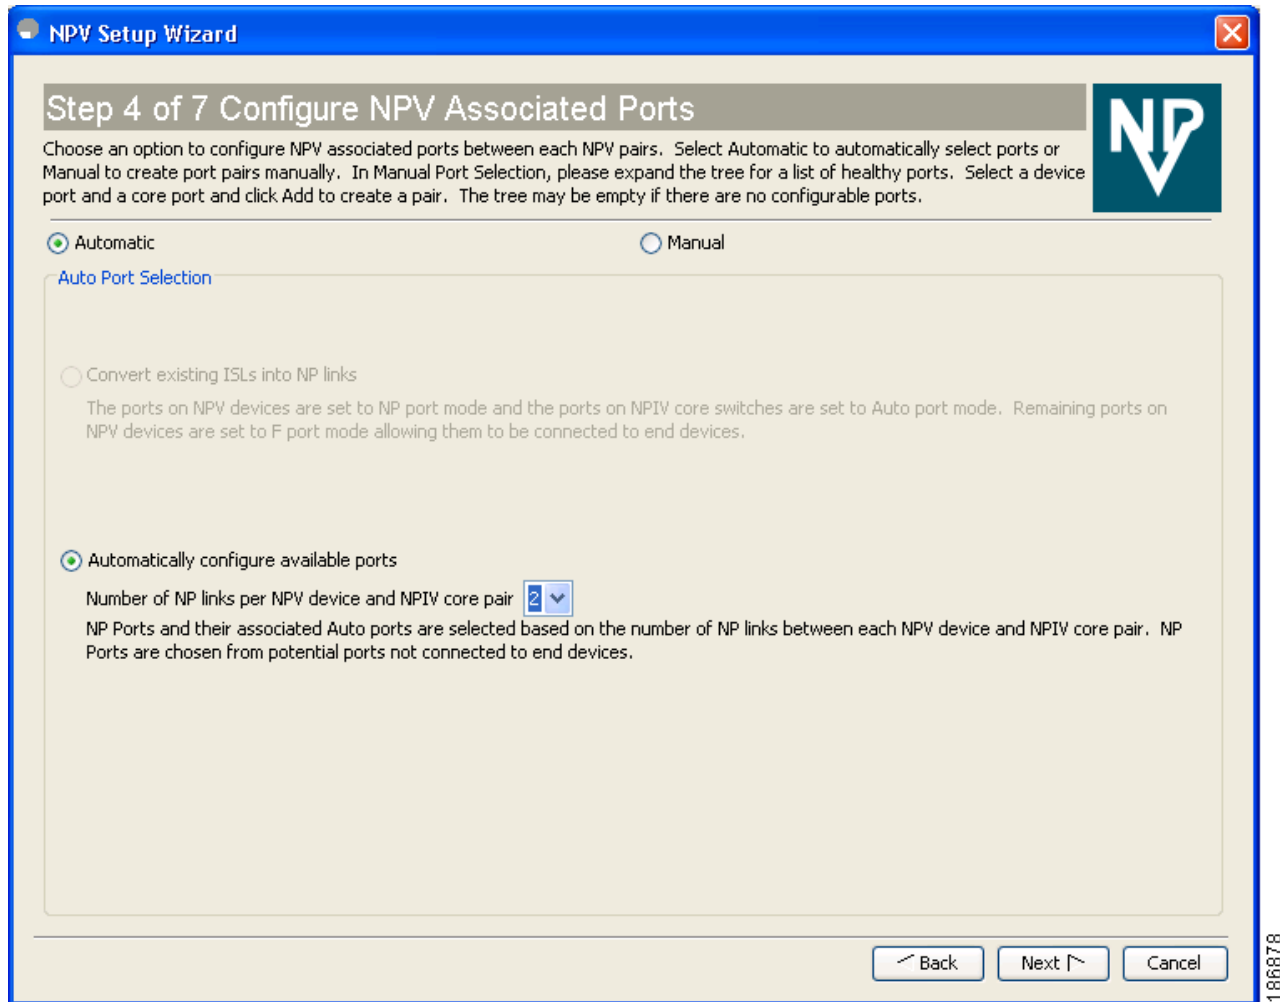

The Auto Port Selection has two options:

- Choosing the first option allows you to convert the existing ISLs to be run as NPV links. If you want ISLs to take priority, then choose the Convert existing ISLs option.

The wizard discovers ISLs (Up or Down) between the selected switches, that are available at the time of wizard launch.

- Choosing the second option allows the NPV wizard to automatically configure free ports for NPV usage. In the second option, you can choose up to a maximum of six additional NPV links per NPV device and core switch pair.

During automatic port selection on the NPV switch, ports are defined as licensed FC ports with “Operational status” = Auto and “Status Cause” = none(2), offline(8), or sfp not present(29), and “Operational Status” = TE or E.

Ports on the NPV switch are selected in the following way:

Send documentation comments to fm-docfeedback@cisco.com

The ISLs are considered in the second method. The selection algorithm spreads out the free port selections, so that the first port in every four ports is selected, for example, the 1st, 5th, 9th, etc. If after going through the 1st port in every four ports, you still have not selected enough ports (because the preferred ports were not free) then move to the second port in every four, for example, the 2nd, 6th, 10th etc. Different switches have different port preferences.

Ports on the NPIV switch are selected in the following way:

During automatic port selection on the NPIV switch free ports are defined as ports that are licensed FC ports and ports that have "Operational status" = Auto and "Status Cause" =none(2), offline(8) or sfp not present(29). If the ports are found in any other operational state, (for example F, NP, E, TE etc), then they are considered used, except for E and TE ports that are in ISLs connected to NPV device switches that will be enabled for NPV mode in this wizard session, as they will be considered to be free.

However, these ISL ports will not necessarily be the ports selected by the automatic port selection algorithm as they are treated no different then any other free port. If you want to convert those used ISL ports, then choose the Convert existing ISLs option first and then run the wizard a second time choosing Automatic port selection (option 2) to add additional links.

When you choose to configure ports from available ports, the wizard searches for ports that are not currently participating in NP link configuration. It is possible that all ports can be participating in NP port configuration. In that case a warning message is displayed. (See [Figure 9-21](#).)

**Note**

In both manual and automatic methods of configuring NPV associated ports, the ports that are unhealthy or that are in adminDown state are not considered during port selection.

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-21 Warning, not Enough Number of Ports


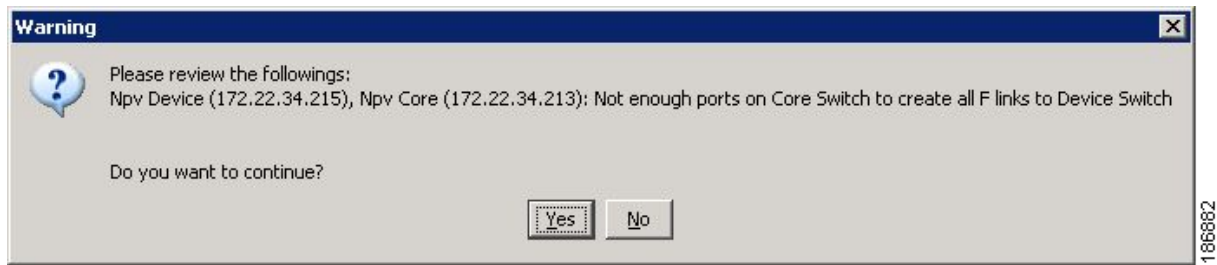


Figure 9-22 Configuring NPV Associated Ports by the Manual Method

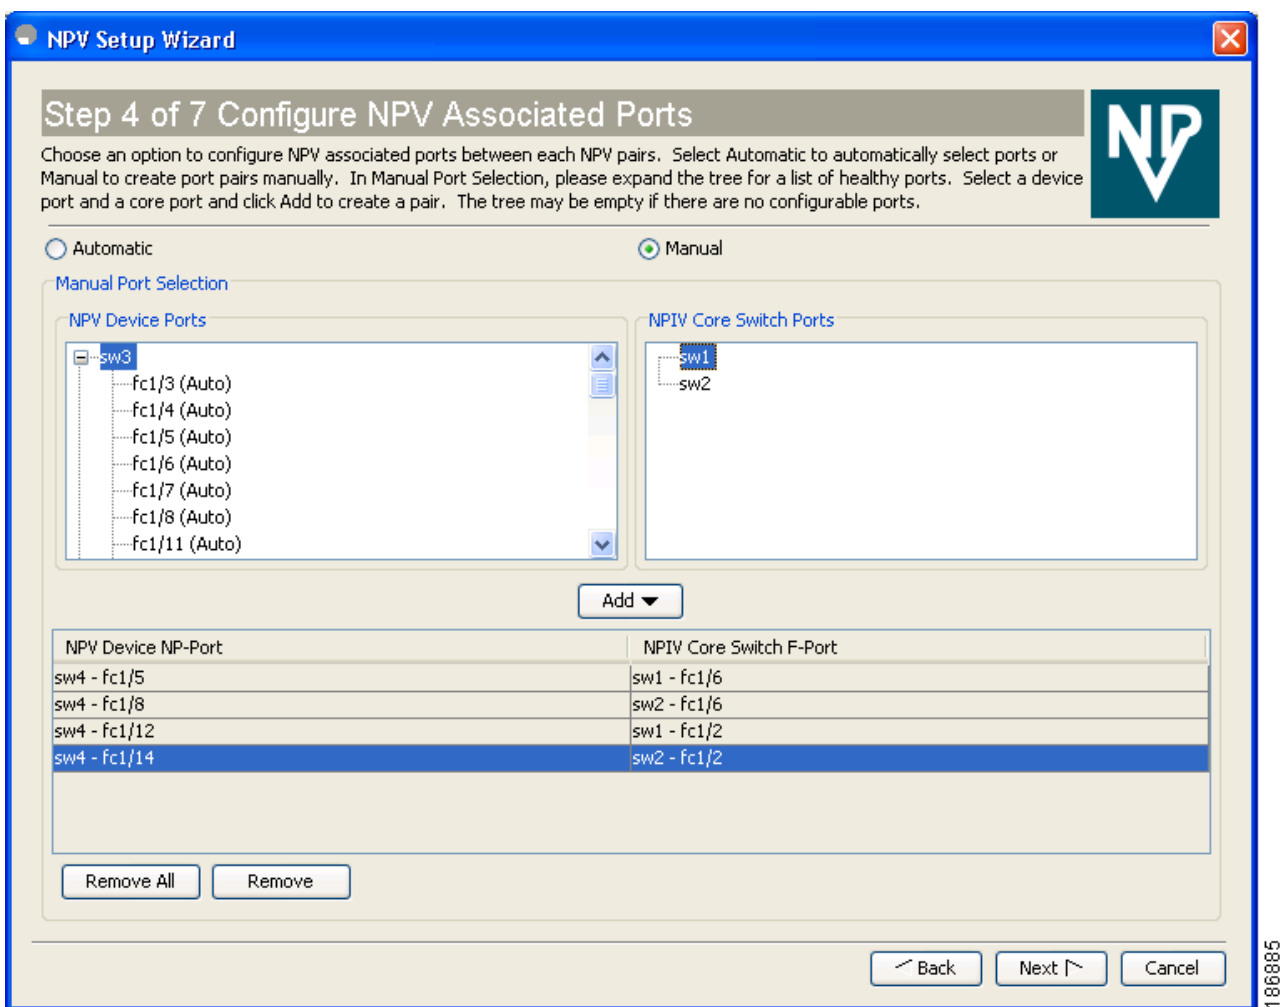

Select the **Manual** method to manually create port pairs (see Figure 9-22.) Click on a satellite switch and select the NP device port expanded under each of the NPV switches listed. Then select the required F port on the NPIV core switch and click **Add** for them to pair.

Send documentation comments to fm-docfeedback@cisco.com

During manual selection from the list for NPV and NPV, ports are defined as the licensed FC ports with "Operational status" = Auto and "Status Cause" = none(2), offline(8), or sfp not present(29) and 'Operational Status' = TE or E.



Note Failed ports with the Auto operational status will not be listed. Failed ports with the E operational status will be listed and available for NPV configuration.

Based on user selection, the wizard decides which ports are set to NP ports on the NPV device side and which are F ports on the core switch side to make an NPV connection.



Note

Some times the **Manual** selection in step 4 does not show any port when the NPV switch tree is expanded as the NPV Wizard filters out ports that are in fail or down status. Only healthy ports are made visible in the NPV Switch tree. Check your port settings.


Figure 9-23 Message Alert to Connect Port Pair



Send documentation comments to fm-docfeedback@cisco.com

Step 6 Select a VSAN as shown in Figure 9-24.

Figure 9-24 Selecting a VSAN

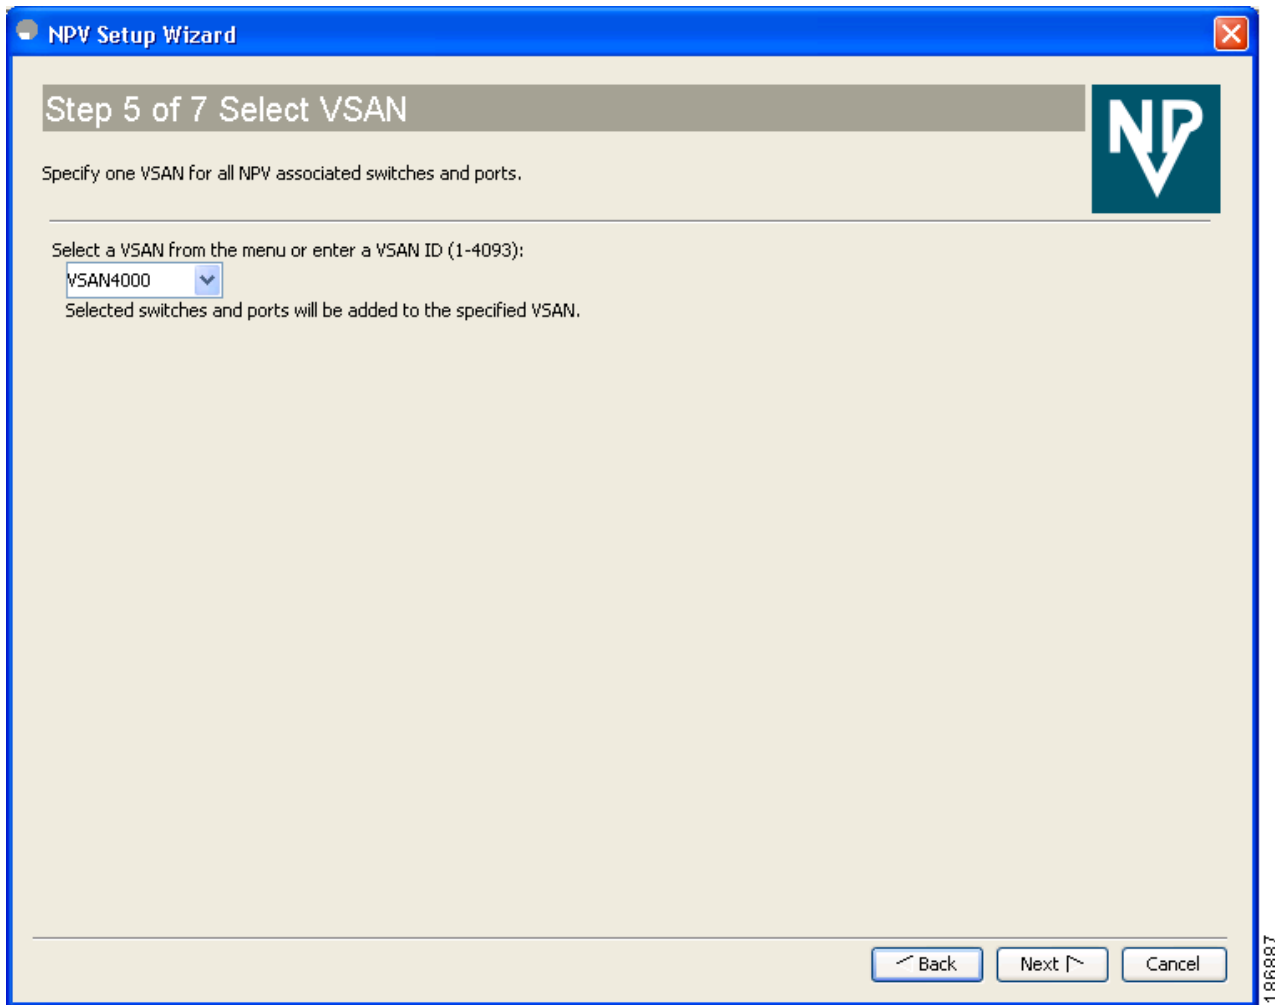

From the drop-down list select a VSAN or enter a VSAN ID to specify the VSAN. All selected NPV devices and NPIV core switches are added to the specified VSAN. All ports on the selected NPV devices and associated ports on the NPIV core switches are added to the VSAN.

Send documentation comments to fm-docfeedback@cisco.com

The VSAN configuration is applied in the final step.

- Step 7** Map the server interfaces with external interfaces for disruptive load balancing as shown in Figure 9-25.

Figure 9-25 Mapping Server Interfaces with External Interfaces for Load Balancing

NPV Setup Wizard

Step 6 of 7 Traffic Map & Load Balancing

To setup traffic management map, choose a switch version 3.4(1) or above, server interface and external interface(s). Click Add to create a new map row. Then double click on the cells to make/update your selection. To configure load balancing policy, click on Configure Load Balancing button to launch the dialog.

NPV Device	Server Interface	External Interface
sw4	fc1/2	1/2
sw4	fc1/5	1/16
sw4	fc1/15	1/20-1/21
sw4	fc1/8	1/2,1/6,1/9-1/10,1/14,1/17,1/21
sw4	fc1/19	1/8-1/9,1/12
sw4	fc1/13	1/16,1/18
sw4	fc1/10	1/4-1/5,1/12,1/15,1/19-1/21
sw4	fc1/20	1/9-1/10,1/13,1/17


Note: Configuring traffic map will be disruptive as server ports will be disabled while settings are changed.

187720

Send documentation comments to fm-docfeedback@cisco.com

To select the NPV devices that need load balancing, click **Configure Load Balancing**, and then select the NPV devices for disruptive load balancing as shown in Figure 9-26.


Figure 9-26 Select the NPV Devices for Load Balancing

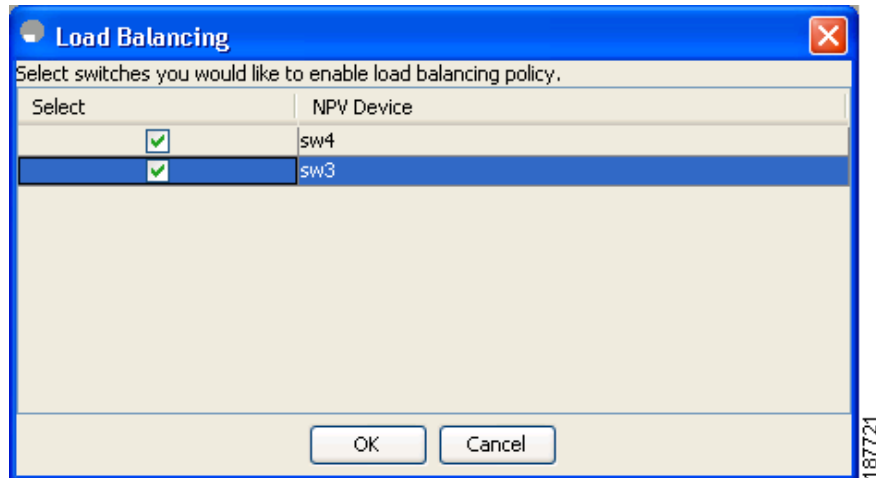

To set up the traffic management map, select at least one switch of version 4.1(1a) or above, a server interface, and external interfaces. To add a map entry, follow these steps:

- a. Click **Add** to create a new map row.
- b. Double-click the NPV Device cell and select the switch from the drop-down list.
- c. Double-click the Server Interface cell and then type the port numbers or click the [...] button (not available on blade server switches) in the cell to display the port selection dialog box. In the port selection dialog box, click the numbered buttons to select the ports as shown in Figure 9-27.

Figure 9-27 Select the Interfaces

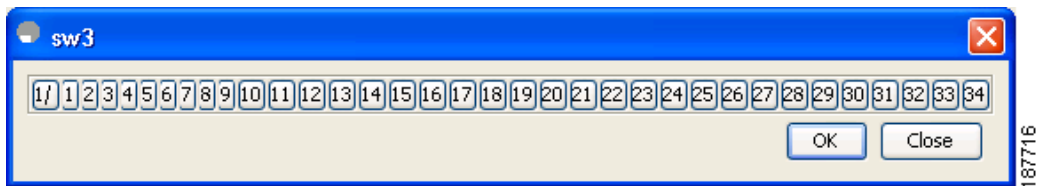

Note You can select only one Server Interface port in a row, but multiple External Interface ports can be mapped to it. Previously selected ports are disabled and cannot be selected.

- d. Double-click the External Interfaces cell and type the port numbers or click the [...] button (not available on blade server switches) in the cell to display the port selection dialog box. In the port selection dialog box, click the numbered buttons to select the ports as shown in Figure 9-27.


To delete an existing map entry, select the row, and then click **Delete**.

To delete all the existing map entries, click **Delete All**.

Send documentation comments to fm-docfeedback@cisco.com

- Step 8** Review all the NPV Setup configurations you entered in the earlier steps and click **Finish** to complete the setup as shown in [Figure 9-28](#).

Figure 9-28 **Completing the NPV Setup**

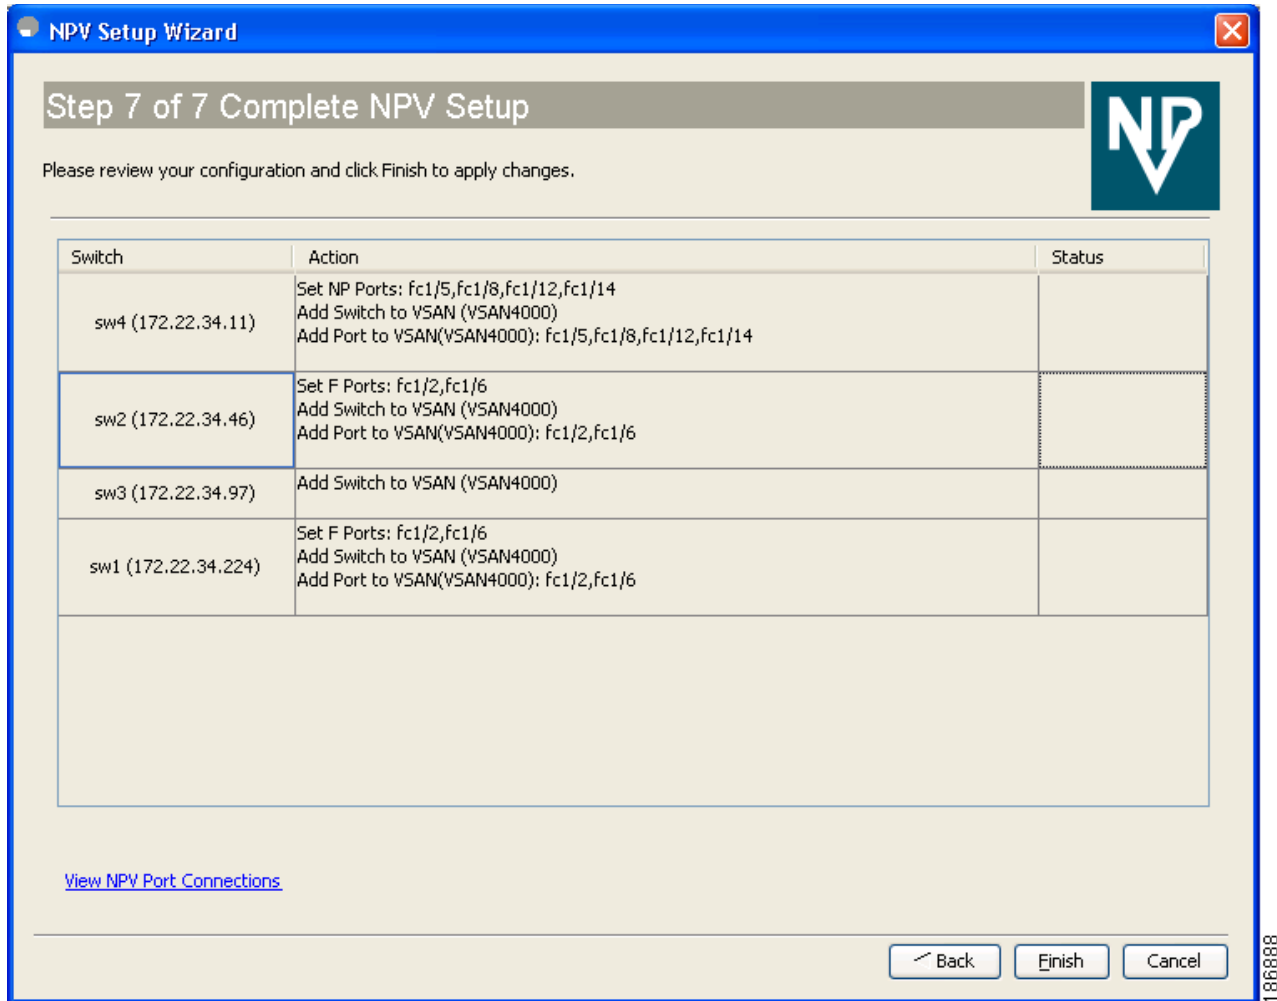

Enable Switch Feature lists the switches, the impending actions against them with reference to features, and the resultant status.

Set Port Type lists the switches and the ports to be set on the switches to configure NPV associate ports.

Configure VSAN lists the switches and ports to be added to the specified VSAN.


Click >> to view the expanded the panes. Click << to collapse the panes.

A progress bar at the bottom of the window indicates the overall extent of completion of the configuration tasks. A text message that runs below the progress bar indicates the current task in progress.

The status cells against each item indicate **In progress**, **Success**, and **Error** states. When a configuration cannot be applied, the status cell against the task is changed to **Error**. Click **Error** to view **Details**. A message is displayed in place of the progress bar stating, Cannot apply all configurations as shown in [Figure 9-29](#).

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-29 Error in Applying Configurations and Details

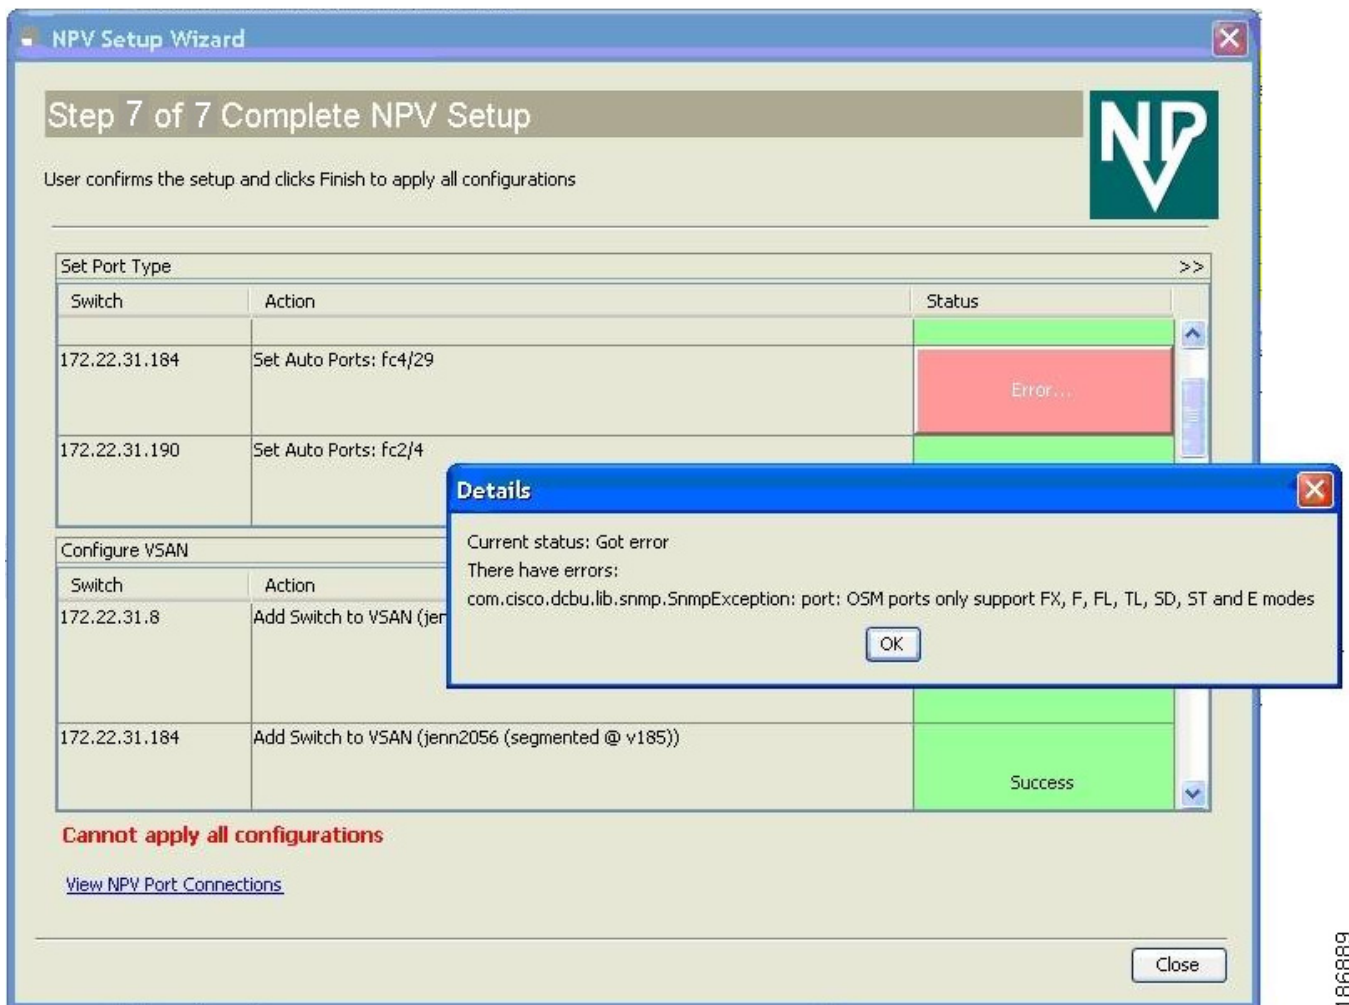


After the completion of all the tasks, a **View NPV Port Connections** link is displayed in the place of the progress bar. (See [Figure 9-29](#).)

Click **View NPV Port Connections** to view the NPV port connections in a table (See [Figure 9-31](#)). Refer to this list to verify the physical connections between NP Port on NPV devices and Auto ports on NPV core switches. The physical connections already exist for the ISLs and they have to be verified. In some cases when the physical connections do not exist, they have to be established manually.


Send documentation comments to fm-docfeedback@cisco.com

Figure 9-30 New NPV Port Pairs

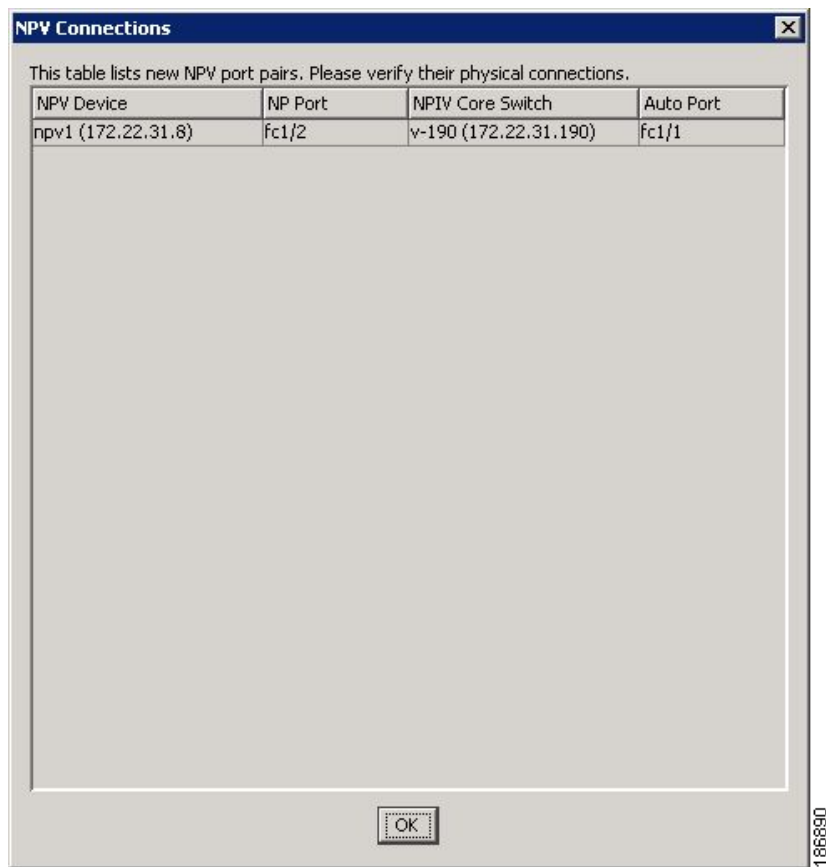

Send documentation comments to fm-docfeedback@cisco.com

Figure 9-31 **New NPV Port Pairs, Details**

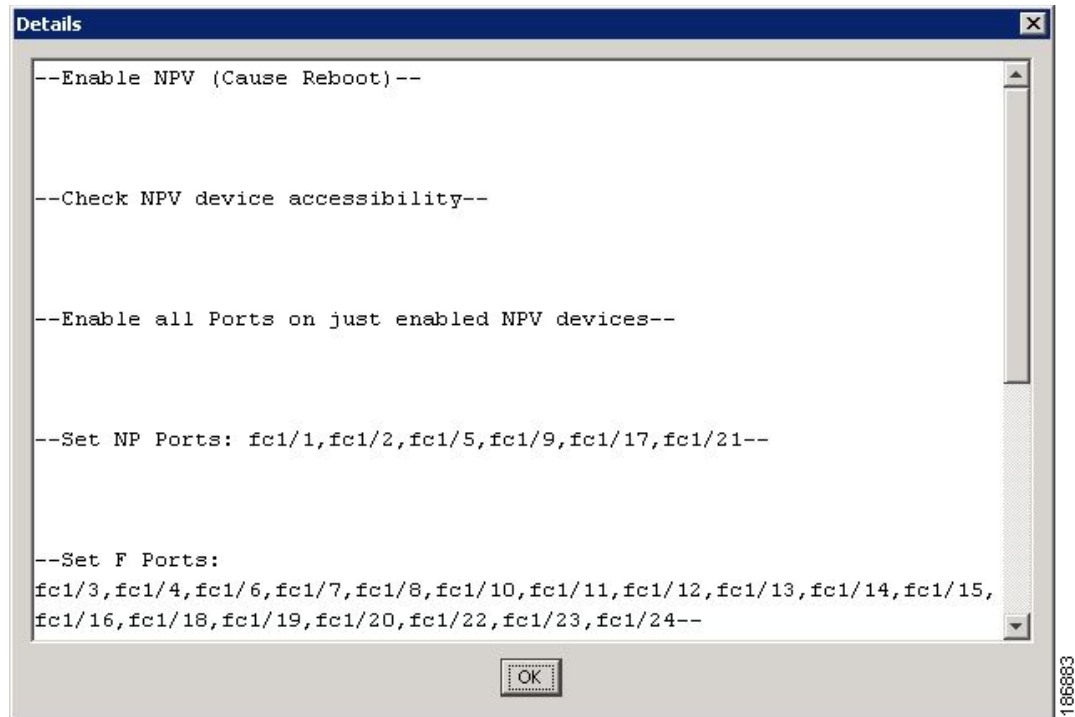

DPVM Configuration

When NPV is enabled, the following requirements must be met before you configure DPVM on the NPV core switch:

- You must explicitly configure the WWN of the internal FLOGI in DPVM. If DPVM is configured on the NPV core switch for an end device that is connected to the NPV device, then that end device must be configured to be in the same VSAN. Logins from a device connected to an NPV device will fail if the device is configured to be in a different VSAN. To avoid VSAN mismatches, ensure that the internal FLOGI VSAN matches the port VSAN of the NP port.
- The first login from an NP port determines the VSAN of that port. If DPVM is configured for this first login, which is the internal login of the NPV device, then the NPV core switch's VSAN F port is located in that VSAN. Otherwise, the port VSAN remains unchanged.

For details about DPVM configuration, see the *Cisco MDS 9000 Family NX-OS Fabric Configuration Guide*.

NPV and Port Security

Port security is enabled on the NPV core switch on a per interface basis. To enable port security on the NPV core switch for devices logging in via NPV, you must adhere to the following requirements:

- The internal FLOGI must be in the port security database; in this way, the port on the NPV core switch will allow communications/links.

Send documentation comments to fm-docfeedback@cisco.com

- All the end device pWWNs must also be in the port security database.

Once these requirements are met, you can enable port security as you would in any other context. For details about enabling port security, see the *Cisco MDS 9000 Family NX-OS Security Configuration Guide*.