



INDEX

A

advanced

 IVR configuration [2-1](#)

 IVR zone zones and zone sets [2-17](#)

AFIDs

 configuring default [2-6](#)

 configuring individual [2-7](#)

 description [1-4, 2-5, 2-9](#)

 guidelines [2-6](#)

 verifying database configuration [2-7](#)

Auto mode

 configuration [1-12](#)

autonomous fabric ID

 See AFIDs

autonomous fabric identifiers. See AFIDs

auto topology mode

 configuration guidelines [1-9](#)

 enabling [1-12](#)

B

basic

 IVR configuration [1-1](#)

basic configuration

 task list [1-6](#)

border switches

 description [1-4](#)

 IVR configuration guidelines [2-9](#)

C

configuration limits [1-4](#)

current VSANs

 description [1-3](#)

D

domain IDs

 IVR configuration guidelines [2-8](#)

 non-unique and IVR NAT [1-10](#)

 unique [2-8](#)

E

edge switches

 description [1-4](#)

edge VSANs

 description [1-3](#)

F

Fabric Manager [1-7](#)

FC ID

 configuring [2-16](#)

 features and benefits [2-14](#)

 guidelines [2-15](#)

 Fibre Channel header modifications [1-5](#)

I

Inter-VSAN Routing zones. See IVR zones

Inter-VSAN Routing zone sets. See IVR zone sets

IVR

 activating topologies [2-11](#)

 AF IDs [2-9](#)

Send documentation comments to mdsfeedback-doc@cisco.com

- basic configuration **1-1**
- basic configuration task list **1-6**
- border switch **1-4**
- border switch, guidelines **2-9**
- border switch configuration guidelines **2-9**
- border switches **1-4**
- configuration limits **1-4**
- configuration task lists **1-6, 2-1**
- configuring
 - advanced **2-2**
 - basic **1-6**
- configuring logging levels **1-22**
- configuring without auto topology **2-7**
- configuring without IVR NAT **2-7**
 - guidelines **2-8**
- current VSANs **1-3**
- database merge guidelines **1-22**
- databases **1-8**
- default settings **1-28**
- default zone policy **1-15**
- domain ID configuration guidelines **2-8**
- domain ID guidelines **2-8**
- edge switch **1-4**
- edge switches **1-4**
- edge VSANs **1-3**
- enabling **1-7**
- enabling distribution with CFS **1-7**
- features **1-2**
- Fibre Channel header modifications **1-5**
- interoperability **1-6**
- logging **1-22**
- native VSANs **1-3**
- paths **1-3**
- persistent FC IDs **2-14**
- read-only zoning **2-20**
- service groups **2-2 to 2-5**
- terminology **1-3**
- transit VSAN configuration guidelines **2-8**
- transit VSANs **1-4**
- virtual domains **1-13**
- VSAN topologies **1-5**
- zone communication **1-15**
- zone configuration guidelines **2-18**
- zones **1-3, 1-15 to 1-16**
- zone sets **1-3**
- Zone Wizard **1-7**
- IVR databases
 - active **1-8**
 - configured **1-8**
 - merge guidelines **1-22**
 - pending **1-8**
- IVR logging
 - configuring levels **1-22**
- IVR logging levels
 - verifying configuration **1-22**
- IVR manual configuration
 - guidelines **2-9**
- IVR NAT
 - border switch, guidelines **1-11**
 - configuration guidelines **1-9**
 - description **1-10**
 - enabling auto-discovery **1-12**
 - load balancing **1-10**
 - requirements **1-10**
 - transit VSANs, guidelines **1-11**
- IVR persistent FC IDs
 - configuring **2-16**
 - persistent **2-14**
 - verifying configuration **2-16**
- IVR service groups
 - activation **2-3**
 - characteristics **2-2**
 - clearing **2-5**
 - configuring **2-4**
 - copying active **2-5**
 - default **2-3**
 - description **1-4**
- IVR configuration guidelines **2-2**

Send documentation comments to mdsfeedback-doc@cisco.com

- verifying configuration [2-5](#)
 - IVR topologies
 - activating a manually configured topology [2-11](#)
 - adding IVR-enabled switches [2-12](#)
 - clearing manual entries [2-13](#)
 - configuring manually [2-10](#)
 - copying active topologies [2-13](#)
 - enabling automatic discovery [1-12](#)
 - migrating from IVR auto topology mode to IVR manual topology mode [2-14](#)
 - verifying configuration [2-13](#)
 - IVR virtual domains
 - clearing [1-14](#)
 - configuring [1-13](#)
 - description [1-13](#)
 - verifying configuration [1-14](#)
 - IVR zones
 - activating with force option [1-18](#)
 - advanced
 - description [2-17](#)
 - automatic creation [1-15](#)
 - clearing database [1-21, 2-20](#)
 - configuring [1-16 to ??](#)
 - configuring LUNs [2-18](#)
 - configuring with IVR Zone Wizard [1-7](#)
 - description [1-3, 1-14, 1-15](#)
 - differences with zones (table) [1-15](#)
 - maximum number of members [1-4](#)
 - maximum number of zones [1-4](#)
 - renaming [2-19](#)
 - verifying configuration [1-19](#)
 - verifying QoS configuration [2-19](#)
 - IVR zone sets
 - activating [1-19](#)
 - advanced configuration
 - description [2-17](#)
 - configuring [1-16 to ??](#)
 - deactivating [1-19](#)
 - description [1-3, 1-14](#)
 - maximum number [1-4](#)
 - renaming [2-19](#)
 - verifying configuration [1-19](#)
 - IVR Zone Wizard [1-7](#)
-
- ## N
- NAT. See IVR NAT
 - native VSANs
 - description [1-3](#)
-
- ## P
- persistent FC IDs
 - configuring [2-16](#)
 - description [2-14](#)
-
- ## T
- transit VSANS
 - configuration guidelines [1-11](#)
 - description [1-4, 2-11](#)
 - IVR configuration guidelines [2-8](#)
-
- ## V
- VSANs
 - transit [2-11](#)
-
- ## Z
- zones
 - configuration guidelines [2-18](#)
 - differences with IVR zones [1-15](#)
 - IVR communication [1-15](#)
 - read-only for IVR [2-20](#)

Send documentation comments to mdsfeedback-doc@cisco.com