



INDEX

B

boot variables
 synchronizing [2-2](#)

D

documentation
 related documents [i-viii](#)

H

high availability
 automatic synchronization [2-3](#)
 description [2-1](#)
 process restartability [2-1](#)
 supervisor module switchover mechanism [2-1](#)
 synchronizing supervisor modules [2-2](#)

R

redundancy states
 value descriptions [2-3](#)

S

software images
 synchronizing [2-2](#)
standby supervisor modules
 monitoring [1-1](#)
 synchronizing [2-2](#)
supervisor modules
 high availability [1-1](#)

manual switchovers [2-2](#)
standby state [2-4](#)
state descriptions [2-3](#)
switchover mechanisms [2-1](#)
synchronizing [2-2](#)
switches
 internal states [2-4](#)
switchovers
 guidelines [2-2](#)
 initiating manually [2-2](#)

Send documentation comments to dcnm-san-docfeedback@cisco.com