



W Commands

This chapter describes the Cisco Nexus 1000V commands that begin with the letter W.

where

To display your current context in the command-line interface (CLI), use the **where** command.

where [**detail**]

Syntax Description	detail (Optional) Displays detailed context information.				
Defaults	Displays summary context information.				
Command Modes	Any				
SupportedUserRoles	network-admin				
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>4.0(4)SV1(1)</td><td>This command was introduced.</td></tr></table>	Release	Modification	4.0(4)SV1(1)	This command was introduced.
Release	Modification				
4.0(4)SV1(1)	This command was introduced.				
Usage Guidelines	This command helps you to keep track where you are in the CLI and how you got to that place.				
Examples	This example shows how to display summary context information: <pre>n1000v(config-if)# where ?conf; interface Ethernet2/3 admin@switch%default</pre>				

Send document comments to nexus1k-docfeedback@cisco.com.

This example shows how to display detailed context information:

```
n1000v(config-if)# where detail
?conf; interface Ethernet2/3      admin@switch%default
mode:                             conf
                                interface Ethernet2/3
username:                         admin
vdc:                              switch
routing-context vrf: default
```

Send document comments to nexus1k-docfeedback@cisco.com.

write erase

To erase configurations in persistent memory areas, use the **write erase** command.

write erase [**boot** | **debug**]

Syntax Description	boot	(Optional) Erases only the boot variable and mgmt0 interface configuration.
	debug	(Optional) Erases only the debug configuration.

Defaults	Erases all configuration in persistent memory except for the boot variable, mgmt0 interface, and debug configuration.
----------	---

Command Modes	Any
---------------	-----

Supported User Roles	network-admin
----------------------	---------------

Command History	Release	Modification
	4.0(4)SV1(1)	This command was introduced.

Usage Guidelines	You can use this command to erase the startup configuration in the persistent memory when information is corrupted or otherwise unusable. Erasing the startup configuration returns the device to its initial state, except for the boot variable, mgmt0 interface, and debug configurations. You have to explicitly erase those configurations with the boot and debug options.
------------------	--

Examples	This example shows how to erase the startup configuration: <pre>n1000v(config)# write erase Warning: This command will erase the startup-configuration. Do you wish to proceed anyway? (y/n) [n] y</pre> This example shows how to erase the boot variable and mgmt0 interface configuration in the persistent memory: <pre>n1000v(config)# write erase boot</pre> This example shows how to erase the debug configuration in the persistent memory: <pre>n1000v(config)# write erase debug</pre>
----------	--

Send document comments to nexus1k-docfeedback@cisco.com.

Related Commands	Command	Description
	copy running-config startup-config	Copies the running configuration to the startup configuration.
	show running-config	Displays the startup configuration.