

Send comments to nexus5k-docfeedback@cisco.com



H Commands

This chapter describes the Cisco NX-OS FabricPath commands that begin with H.

Send comments to nexus5k-docfeedback@cisco.com

hostname dynamic (FabricPath)

To configure a dynamic hostname exchange for Intermediate-System-to-Intermediate System (IS-IS), use the **hostname dynamic** command. To return to the default setting, use the **no** form of this command.

hostname dynamic

no hostname dynamic

Syntax Description This command has no arguments or keywords.

Command Default ON

Command Modes FabricPath IS-IS configuration mode

Command History	Release	Modification
	5.1(3)N1(1)	This command was introduced.

Usage Guidelines This command requires an Enhanced Layer 2 license.

Examples This example shows how to configure a dynamic hostname exchange for IS-IS:

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# fabricpath domain default
switch(config-fabricpath-isis)# hostname dynamic
switch(config-fabricpath-isis)#
```

Related Commands	Command	Description
	show hostname	Displays the system's hostname.
