

Send comments to nexus5k-docfeedback@cisco.com



A Commands

This chapter describes the Cisco NX-OS commands that begin with A that are used to manage a Cisco Nexus 2000 Series Fabric Extender from a Cisco Nexus 5000 Series switch.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

attach fex

To access the command-line interface (CLI) of a connected Fabric Extender to run diagnostic commands, use the **attach fex** command.

attach fex *chassis_ID*

Syntax Description	<i>chassis_ID</i>	Fabric Extender chassis ID. The chassis ID range is from 100 to 199.
--------------------	-------------------	--

Command Default	None
-----------------	------

Command Modes	EXEC mode
---------------	-----------

Command History	Release	Modification
	4.0(1a)N2(1)	This command was introduced.

Usage Guidelines	Use the attach fex command to access the CLI on a connected Fabric Extender and performing diagnostic commands. We recommend that you use this command only following direction from Cisco technical support personnel.
------------------	--

Examples	This example shows how to access the CLI of a connected Fabric Extender to run diagnostic commands: switch# attach fex 101
----------	--

Related Commands	Command	Description
	show fex	Displays all configured Fabric Extender chassis connected to the switch.