

F Commands

This chapter describes the basic Cisco NX-OS system commands that begin with F.

Send comments to nexus5k-docfeedback@cisco.com

find

To find filenames beginning with a character string, use the **find** command.

find *filename-prefix*

| | ntax | 1100 | APIP | sti o n |
|-----|--------|------|------|---|
| -71 | villax | 1162 | | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, |
| | | | | |

| C· I C· | T21 4 4 | 11 . C . C 1 | T1 C1 | C' |
|-----------------|-------------------|-------------------|-----------------|---------------------------|
| filename-prefix | First part or all | II of a filename. | i ne filename i | orefix is case sensitive. |
| | | | | |

Command Default

None

Command Modes

EXEC mode

Command History

| Release | Modification |
|--------------|------------------------------|
| 4.0(0)N1(1a) | This command was introduced. |

Usage Guidelines

The **find** command searches all subdirectories under the current working directory. You can use the **cd** and **pwd** commands to navigate to the starting directory.

Examples

This example shows how to display filenames beginning with "n5000":

switch# find n5000

Related Commands

| Command | Description |
|---------|---|
| cd | Changes the current working directory. |
| pwd | Displays the name of the current working directory. |

Send comments to nexus5k-docfeedback@cisco.com

format

To format the bootflash device, which erases its contents and restores it to its factory-shipped state, use the **format** command.

format bootflash:

| /ntax | | | |
|-------|--|--|--|
| | | | |
| | | | |
| | | | |

| bootflash: | Specifies the name of the bootflash | file system. |
|------------|-------------------------------------|--------------|
| | | |

Command Default

None

Command Modes

EXEC mode

Command History

| Release | Modification |
|--------------|------------------------------|
| 4.0(0)N1(1a) | This command was introduced. |

Examples

This example shows how to format the bootflash device:

switch# format bootflash:

Related Commands

| Command | Description |
|---------|---|
| cd | Changes the current working directory. |
| dir | Displays the directory contents. |
| pwd | Displays the name of the current working directory. |

Send comments to nexus5k-docfeedback@cisco.com