

Send comments to nexus5k-docfeedback@cisco.com



H Commands

This chapter describes the basic Cisco NX-OS system commands that begin with H.

Send comments to nexus5k-docfeedback@cisco.com

hostname

To configure the hostname for the switch, use the **hostname** command. To revert to the default, use the **no** form of this command.

hostname *name*

no hostname

Syntax Description

<i>name</i>	Hostname for the switch. The name is alphanumeric, case sensitive, can contain special characters, and can have a maximum of 32 characters.
-------------	---

Command Default

“switch” is the default hostname.

Command Modes

EXEC mode

Command History

Release	Modification
4.0(0)N1(1a)	This command was introduced.

Usage Guidelines

The Cisco NX-OS software uses the hostname in command-line interface (CLI) prompts and in default configuration filenames.

The **hostname** command performs the same function as the **switchname** command.

Examples

This example shows how to configure the hostname for a Cisco Nexus 5000 Series switch:

```
switch# configure terminal
switch(config)# hostname Engineering2
Engineering2(config)#
```

This example shows how to revert to the default hostname:

```
Engineering2# configure terminal
Engineering2(config)# no hostname
switch(config)#
```

Related Commands

Command	Description
show hostname	Displays the switch hostname.
show switchname	Displays the switch hostname.
switchname	Configures the switch hostname.