

Send comments to nexus5k-docfeedback@cisco.com



U Commands

This chapter describes the basic Cisco NX-OS system commands that begin with U.

Send comments to nexus5k-docfeedback@cisco.com

update license

To update an existing license, use the **update license** command.

update license [*filesystem: [//server/]*] [*directory*] *src-filename* [*target-filename*]

Syntax Description

<i>filesystem:</i>	(Optional) Name of the file system. Valid values are bootflash or volatile .
<i>//server/</i>	(Optional) Name of the server. Valid values are <i>///</i> , //module-1/ , //sup-1/ , //sup-active/ , or //sup-local/ . The double slash (//) is required.
<i>directory</i>	(Optional) Name of a directory. The directory name is case sensitive.
<i>src-filename</i>	Name of the source license file.
<i>target-filename</i>	(Optional) Name of the target license file.



Note

There can be no spaces in the *filesystem://server/directory/filename* string. Individual elements of this string are separated by colons (:) and slashes (/).

Command Default

None

Command Modes

EXEC mode

Command History

Release	Modification
4.0(0)N1(1a)	This command was introduced.

Examples

This example shows how to update a license:

```
switch# update license bootflash:fm.lic fm-update.lic
```

Related Commands

Command	Description
show license	Displays license information.