

R Commands

This chapter describes the Cisco NX-OS interface commands that begin with R.

Send comments to nexus5k-docfeedback@cisco.com

rate-limit cpu direction

To set the packet per second (PPS) rate limit for an interface, use the **rate-limit cpu direction** command. To revert of the default value, use the **no** form of this command.

rate-limit cpu direction {both | input | output} pps pps_value action log

no rate-limit cpu direction {both | input | output} pps *pps_value* **action log**

Syntax Description	both	Sets the maximum input and output packet rate.		
	input	Sets the maximum input packet rate.		
	output	Sets the maximum output packet rate.		
	pps <i>pps_value</i>	Specifies the packets per second. The range is from 0 to 100,000.		
	action	Specifies the action is logged.		
	log	Writes a syslog message if the PPS value matches or exceeds the specified rate limit.		
Command Default	None			
Command Modes	Interface configuration	n mode		
Command History	Release	Modification		
	5.1(3)N1(1)	This command was introduced.		
Usage Guidelines	This command does not require a license.			
osage durachines				
	This example shows h logging of syslog mes	now to set the maximum input packet rate to 3 for an interface and enable the		
	<pre>logging of syslog mes switch# configure t switch(config)# int</pre>	now to set the maximum input packet rate to 3 for an interface and enable the ssages: erminal		
Examples Related Commands	<pre>logging of syslog mes switch# configure t switch(config)# int switch(config-if)# :</pre>	now to set the maximum input packet rate to 3 for an interface and enable the ssages: erminal erface ethernet 1/5		

Send comments to nexus5k-docfeedback@cisco.com

Related	Commands	Comma
---------	----------	-------

s Command	Description
remote ip address	Configures the IPv4 address for a remote machine.
remote port	Configures the TCP port for a remote machine.
remote vrf	Configures the virtual routing and forwarding (VRF) instance for a remote machine.
show svs connections	Displays SVS connection information.
svs connection	Enables an SVS connection.

Send comments to nexus5k-docfeedback@cisco.com