

Send comments to nexus5k-docfeedback@cisco.com



C Commands

This chapter describes the Cisco NX-OS PIM commands that begin with C.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip mroute

To clear the multicast routing table, use the **clear ip mroute** command.

clear ip mroute { * | *group* [*source*] | *group-prefix* } [**vrf** { *vrf-name* | **all** | **default** | **management** }]

Syntax Description		
	*	Specifies all routes.
	<i>group</i>	Group address in the format <i>A.B.C.D</i> .
	<i>source</i>	(Optional) Source (S, G) route.
	<i>group-prefix</i>	Group prefix in the format <i>A.B.C.D/length</i> .
	vrf	(Optional) Clears the virtual routing and forwarding (VRF) instance information.
	<i>vrf-name</i>	VRF name. The name can be a maximum of 32 alphanumeric characters and is case sensitive.
	all	Specifies that all VRF entries be cleared from the multicast routing table.
	default	Specifies that the default VRF entry be cleared from the multicast routing table.
	management	Specifies that the management VRF entry be cleared from the multicast routing table.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	4.0(3)	This command was introduced.

Usage Guidelines The **clear routing multicast** command is an alternative form of this command.

Examples This example shows how to clear the multicast routing table:

```
switch(config)# clear ip mroute *
switch(config)#
```

Related Commands	Command	Description
	clear routing multicast	Clears the multicast routing table
	show ip mroute	Displays information about the multicast routing table.

Send comments to nexus5k-docfeedback@cisco.com

clear ip pim event-history

To clear information in the IPv4 Protocol Independent Multicast (PIM) event history buffers, use the **clear ip pim event-history** command.

clear ip pim event-history

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

Usage Guidelines

This command requires the LAN Base Services license.

Examples

This example shows how to clear information in the PIM event history buffers:

```
switch(config)# clear ip pim event-history
switch(config)#
```

Related Commands

Command	Description
ip pim event-history	Configures the size of the PIM event history buffers.
show ip pim event-history	Displays information in the PIM event history buffers.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip pim interface statistics

To clear Protocol Independent Multicast (PIM) counters for a specified interface, use the **clear ip pim interface statistics** command.

clear ip pim interface statistics [**ethernet** *slot/port* | **port-channel** *channel-number* [*.sub_if-number*] | **vlan** *vlan-id*]

Syntax Description		
ethernet <i>slot/port</i>	(Optional) Specifies the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128.	
port-channel <i>number</i>	(Optional) Specifies the EtherChannel interface and EtherChannel number. The range is from 1 to 4096.	
<i>sub_if-number</i>	(Optional) Subinterface number. The range is from 1 to 4093.	
vlan <i>vlan-id</i>	(Optional) Specifies the VLAN. The range is from 1 to 4094.	

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines This command requires the LAN Base Services license.

Examples This example shows how to clear the PIM counters for a specified interface:

```
switch# clear ip pim interface statistics ethernet 2/1
switch#
```

Related Commands	Command	Description
	show ip pim statistics	Displays PIM statistics.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip pim policy statistics

To clear Protocol Independent Multicast (PIM) policy counters, use the **clear ip pim policy statistics** command.

```
clear ip pim policy statistics {jp-policy | neighbor-policy} {ethernet slot/port | port-channel
channel-number[.sub_if-number] | vlan vlan-id}
```

```
clear ip pim policy statistics register-policy [vrf {vrf-name | all | default | management}]
```

Syntax Description

jp-policy	Specifies statistics for the join-prune policy.
neighbor-policy	Specifies statistics for the neighbor policy.
ethernet <i>slot/port</i>	Specifies the Ethernet interface and the slot number and port number. The slot number is from 1 to 255, and the port number is from 1 to 128.
port-channel <i>number</i>	Specifies the EtherChannel interface and EtherChannel number. The range is from 1 to 4096.
<i>sub_if-number</i>	(Optional) Subinterface number. The range is from 1 to 4093.
vlan	Specifies the VLAN.
<i>vlan-id</i>	VLAN number. The range is from 1 to 4094.
register-policy	Specifies statistics for the register policy.
vrf	(Optional) Clears the virtual routing and forwarding (VRF) instance information.
<i>vrf-name</i>	VRF name. The name can be a maximum of 32 alphanumeric characters and is case sensitive.
all	Specifies that all VRF entries be cleared from the IPv4 multicast routing table.
default	Specifies that the default VRF entry be cleared from the IPv4 multicast routing table.
management	Specifies that the management VRF entry be cleared from the IPv4 multicast routing table.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.


Usage Guidelines

This command requires the LAN Base Services license.

Examples

This example shows how to clear PIM register policy counters:

```
switch# clear ip pim policy statistics register-policy
```

 clear ip pim policy statistics

Send comments to nexus5k-docfeedback@cisco.com

switch#

Related Commands

Command	Description
show ip pim policy statistics	Displays PIM policy statistics.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip pim route

To clear routes specific to Protocol Independent Multicast (PIM) for IPv4, use the **clear ip pim route** command.

clear ip pim route { * | *group* [*source*] | *group-prefix* } [**vrf** { *vrf-name* | **all** | **default** | **management** }]

Syntax Description

*	Specifies all routes.
<i>group</i>	Group address in the format <i>A.B.C.D</i> .
<i>source</i>	(Optional) Source (S, G) route.
<i>group-prefix</i>	Group prefix in the format <i>A.B.C.D/length</i> .
vrf	(Optional) Clears the virtual routing and forwarding (VRF) instance information.
<i>vrf-name</i>	VRF name. The name can be a maximum of 32 alphanumeric characters and is case sensitive.
all	Specifies that all VRF entries be cleared from the multicast routing table.
default	Specifies that the default VRF entry be cleared from the multicast routing table.
management	Specifies that the management VRF entry be cleared from the multicast routing table.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

Usage Guidelines

This command requires the LAN Base Services license.

Examples

This example shows how to clear the all the routes specific to PIM:

```
switch(config)# clear ip pim route *
switch(config)#
```

Related Commands

Command	Description
show ip pim route	Displays information about PIM specific routes.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip pim statistics

To clear Protocol Independent Multicast (PIM) statistics counters, use the **clear ip pim statistics** command.

clear ip pim statistics [**vrf** {*vrf-name* | **all** | **default** | **management**}]

Syntax Description	
vrf	(Optional) Clears the virtual routing and forwarding (VRF) instance information.
<i>vrf-name</i>	VRF name. The name can be a maximum of 32 alphanumeric characters and is case sensitive.
all	Specifies that all VRF entries be cleared from the multicast routing table.
default	Specifies that the default VRF entry be cleared from the multicast routing table.
management	Specifies that the management VRF entry be cleared from the multicast routing table.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	This command requires the LAN Base Services license.
-------------------------	--

Examples	<p>This example shows how to clear PIM statistics counters:</p> <pre>switch# clear ip pim statistics switch#</pre>
-----------------	--

Related Commands	Command	Description
	show ip pim statistics	Displays PIM statistics.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip routing multicast event-history

To clear information in the IPv4 Multicast Routing Information Base (MRIB) event history buffers, use the **clear ip routing multicast event-history** command.

```
clear ip routing multicast event-history {cli | mfdm-debug | mfdm-event | mfdm-stat | rib |
vrf}
```

Syntax Description	cli	Clears the CLI event history buffer.
	mfdm-debug	Clears the multicast FIB distribution (MFDM) debug history buffer.
	mfdm-event	Clears the MFDM events history buffer.
	mfdm-stat	Clears the MFDM sum event history buffer.
	rib	Clears the RIB event history buffer.
	vrf	Clears the virtual routing and forwarding (VRF) event history buffer.

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
------------------	--

Examples	This example shows how to clear information in the MRIB RIB event history buffer:
----------	---

```
switch(config)# clear ip routing multicast event-history rib
switch(config)#
```

Related Commands	Command	Description
	ip routing multicast event-history	Configures the size of the IPv4 MRIB event history buffers.
	show routing ip multicast event-history	Displays information in the IPv4 MRIB event history buffers.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear routing multicast

To clear the IPv4 multicast routing table, use the **clear routing multicast** command.

```
clear routing [ip | ipv4] multicast { * | group [source] | group-prefix } [vrf { vrf-name | all | default | management }]
```

Syntax Description

ip	(Optional) Clears IP commands.
ipv4	(Optional) Clears IPv4 commands.
*	Specifies all routes.
<i>group</i>	Group address in the format <i>A.B.C.D</i> .
<i>source</i>	(Optional) Source (S, G) route.
<i>group-prefix</i>	Group prefix in the format <i>A.B.C.D/length</i> .
vrf	(Optional) Clears the virtual routing and forwarding (VRF) instance information.
<i>vrf-name</i>	VRF name. The name can be a maximum of 32 alphanumeric characters and is case sensitive.
all	Specifies that all VRF entries be cleared from the IPv4 multicast routing table.
default	Specifies that the default VRF entry be cleared from the IPv4 multicast routing table.
management	Specifies that the management VRF entry be cleared from the IPv4 multicast routing table.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

Usage Guidelines

The **clear ip mroute** command is an alternative form of this command.

This command does not require a license.

Examples

This example shows how to clear the IPv4 multicast routing table:

```
switch(config)# clear routing multicast *
switch(config)#
```

Send comments to nexus5k-docfeedback@cisco.com

Related Commands	Command	Description
	clear ip mroute	Clears the multicast routing table.
	show routing ip multicast	Displays information about IPv4 multicast routes.

Send comments to nexus5k-docfeedback@cisco.com