

Send comments to nexus5k-docfeedback@cisco.com



R Commands

This chapter describes the Cisco NX-OS PIM commands that begin with R.

Send comments to nexus5k-docfeedback@cisco.com

restart pim

To restart the IPv4 Protocol Independent Multicast (PIM) process, use the **restart pim** command.

restart pim

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	This command requires the LAN Base Services license.
-------------------------	--

Examples	This example shows how to restart the PIM process: <pre>switch(config)# restart pim</pre>
-----------------	---

Related Commands	Command	Description
	ip pim flush-routes	Enables flushing routes when the PIM process is restarted.