



## INDEX

---

### A

aaa accounting default command [5-2](#)  
aaa authentication login console command [5-3](#)  
aaa authentication login default command [5-5](#)  
aaa authentication login error-enable command [5-7](#)  
aaa authentication login mschap command [5-8](#)  
aaa group server radius command [5-9](#)  
action command [5-10](#)

---

### B

banner motd command [1-2](#)  
boot command [1-3](#)

---

### C

cd command [1-5](#)  
cfs distribute command [7-2](#)  
cfs ipv4 distribute command [7-3](#)  
cfs ipv4 mcast-address command [7-5](#)  
cfs ipv6 distribute command [7-7](#)  
cfs ipv6 mcast-address command [7-9](#)  
cfs region command [7-11](#)  
cfs staggered-merge command [7-13](#)  
channel-group (Ethernet configuration) command [2-2](#)  
class-map command [4-2](#)  
clear access-list counters command [5-11](#)  
clear accounting log command [5-12](#)  
clear cli history command [1-6](#)  
clear cores command [1-7](#)  
clear debug-logfile command [1-8](#)  
clear device-alias command [7-14](#)

clear fcdomain command [7-15](#)  
clear fcflow stats command [7-16](#)  
clear fens statistics command [7-17](#)  
clear fcsn log command [7-18](#)  
clear fcs statistics command [7-19](#)  
clear fctimer session command [7-20](#)  
clear fspf counters command [7-21](#)  
clear install failure-reason command [1-9](#)  
clear license command [1-10](#)  
clear logging nvram command [6-2](#)  
clear logging onboard command [6-3](#)  
clear logging session command [6-4](#)  
clear mac access-list counters command [2-5](#)  
clear mac-address-table dynamic command [2-8](#)  
clear mac dynamic command [2-6](#)  
clear ntp session command [2-10](#)  
clear ntp statistics command [2-11](#)  
clear port-security command [7-22](#)  
clear rlr command [7-23](#)  
clear rscn session command [7-24](#)  
clear rscn statistics command [7-25](#)  
clear spanning-tree counters command [2-12](#)  
clear spanning-tree detected-protocol command [2-13](#)  
clear user command [1-11](#)  
clear zone command [7-26](#)  
cli var name command [1-12](#)  
clock set command [1-14](#)  
clock summer-time command [1-15](#)  
clock timezone command [1-17](#)  
configure terminal command [1-18](#)  
copy command [1-19](#)  
copy running-config startup-config command [1-23](#)

***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

## D

databits command [1-24](#)  
 deadtime command [5-13](#)  
 debug logfile command [1-25](#)  
 debug logging command [1-26](#)  
 delete command [1-27](#)  
 deny (IPv4) command [5-15](#)  
 deny (MAC) command [5-25](#)  
 description (user role) command [5-28](#)  
 device-alias abort command [7-27](#)  
 device-alias commit command [7-28](#)  
 device-alias database command [7-29](#)  
 device-alias distribute command [7-30](#)  
 device-alias import command [7-31](#)  
 device-alias mode command [7-32](#)  
 device-alias name command [7-33](#)  
 device-alias rename command [7-34](#)  
 dir command [1-28](#)  
 discover custom-list command [7-35](#)  
 discover scsi-target command [7-36](#)

## E

echo command [1-30](#)  
 end command [1-31](#)  
 exec-timeout command [1-32](#)  
 exit (EXEC) command [1-34](#)  
 exit (global) command [1-35](#)

## F

fabric-binding activate command [7-39](#)  
 fabric-binding database command [7-40](#)  
 fabric-binding database diff command [7-41](#)  
 fabric-binding database vsan command [7-42](#)  
 fabric-binding enable command [7-44](#)  
 fabric profile command [7-38](#)  
 fcalias clone command [7-45](#)

fcalias name command [7-46](#)  
 fcalias rename command [7-47](#)  
 fcdomain abort vsan command [7-50](#)  
 fcdomain command [7-48](#)  
 fcdomain commit vsan command [7-51](#)  
 fcdomain distribute command [7-52](#)  
 fcdomain rfc-reject command [7-53](#)  
 fcdroplateny command [7-54](#)  
 fcflow stats command [7-55](#)  
 fcid-allocation command [7-57](#)  
 fcinterop fcid-allocation command [7-58](#)  
 fcns no-auto-poll command [7-59](#)  
 fcns proxy-port command [7-60](#)  
 fcns reject-duplicate-pwvn command [7-61](#)  
 fcping command [7-62](#)  
 feroute command [7-64](#)  
 fcsp command [7-69](#)  
 fcsp dhchap command [7-71](#)  
 fcsp enable command [7-73](#)  
 fcs plat-check-global command [7-66](#)  
 fcsp reauthenticate command [7-74](#)  
 fcsp timeout command [7-75](#)  
 fcs register command [7-67](#)  
 fcs virtual-device-add command [7-68](#)  
 fctimer abort command [7-77](#)  
 fctimer command [7-76](#)  
 fctimer commit command [7-78](#)  
 fctimer distribute command [7-79](#)  
 fctrace command [7-80](#)  
 fdmi suppress-updates command [7-81](#)  
 feature (user role feature group) command [5-29](#)  
 feature fcoe command [7-82](#)  
 feature interface-vlan command [2-14](#)  
 feature lacp command [2-15](#)  
 feature lldp command [1-36](#)  
 feature private-vlan command [2-16](#)  
 feature tacacs+ command [5-30](#)  
 find command [1-37](#)  
 format command [1-38](#)

***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

fspf config command [7-83](#)  
 fspf cost command [7-85](#)  
 fspf dead-interval command [7-86](#)  
 fspf enable command [7-87](#)  
 fspf hello-interval command [7-88](#)  
 fspf passive command [7-89](#)  
 fspf retransmit-interval command [7-90](#)

## G

gunzip command [1-39](#)  
 gzip command [1-40](#)

## H

hostname command [1-41](#)

## I

in-order-guarantee command [7-91](#)  
 install all command [1-42](#)  
 install license command [1-45](#)  
 instance vlan command [2-17](#)  
 interface ethernet command [2-19](#)  
 interface fc command [7-92](#)  
 interface policy deny command [5-31](#)  
 interface port-channel command [2-20](#)  
 interface san-port-channel command [7-94](#)  
 interface vethernet command [2-22](#)  
 interface vfc command [7-97](#)  
 interface vig command [7-96](#)  
 ip access-list command [5-32](#)  
 ip igmp snooping (EXEC) command [2-23](#)  
 ip igmp snooping (VLAN) command [2-24](#)  
 ip port access-group command [5-34](#)

## L

lacp port-priority command [2-26](#)  
 lacp system-priority command [2-27](#)  
 line console command [1-46](#)  
 line vty command [1-47](#)  
 lldp (interface) command [7-101](#)  
 lldp command [7-99](#)  
 logging abort command [7-102](#)  
 logging commit command [7-103](#)  
 logging console command [6-5](#)  
 logging distribute command [7-104](#)  
 logging level command [6-7](#)  
 logging logfile command [6-9](#)  
 logging module command [6-11](#)  
 logging monitor command [6-13](#)  
 logging server command [6-15](#)  
 logging timestamp command [6-17](#)

## M

mac access-list command [5-36](#)  
 mac-address-table aging-time command [2-28](#)  
 mac-address-table notification command [2-30](#)  
 mac-address-table static command [2-31](#)  
 mac port access-group command [5-38](#)  
 match command [5-40](#)  
 match cos command [4-3](#)  
 member (fcalias configuration submode) command [7-105](#)  
 member (zone configuration submode) command [7-107](#)  
 member (zoneset configuration submode) command [7-109](#)  
 modem in command [1-48](#)  
 modem init-string command [1-49](#)  
 modem set-string user-input command [1-51](#)  
 monitor session command [2-33](#)  
 move command [1-52](#)

***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

---

## N

name (MST configuration) command [2-35](#)  
name (VLAN configuration) command [2-34](#)  
npiv enable command [7-110](#)  
npv auto-load-balance disruptive command [7-111](#)  
npv enable command [7-112](#)  
ntp abort command [2-37](#)  
ntp command [2-36](#)  
ntp commit command [2-38](#)  
ntp distribute command [2-39](#)  
ntp sync-retry command [2-40](#)

---

## P

parity command [1-54](#)  
permit (IPv4) command [5-41](#)  
permit (MAC) command [5-51](#)  
permit interface command [5-54](#)  
permit vlan command [5-56](#)  
permit vrf command [5-58](#)  
ping command [1-55](#)  
policy-map command [4-4](#)  
port-channel load-balance ethernet command [2-41](#)  
port-security abort command [7-115](#)  
port-security command [7-113](#)  
port-security commit command [7-116](#)  
port-security database command [7-117](#)  
port-security distribute command [7-119](#)  
port-security enable command [7-120](#)  
port-track enable command [7-121](#)  
port-track force-shut command [7-122](#)  
port-track interface command [7-123](#)  
private-vlan association command [2-45](#)  
private-vlan command [2-43](#)  
private-vlan synchronize command [2-47](#)  
purge fcdomain fcid command [7-124](#)

---

## R

radius-server deadtime command [5-59](#)  
radius-server directed-request command [5-60](#)  
radius-server host command [5-61](#)  
radius-server key command [5-63](#)  
radius-server retransmit command [5-64](#)  
radius-server timeout command [5-65](#)  
reload command [1-57](#)  
remark command [5-66](#)  
resequence command [5-68](#)  
revision command [2-48](#)  
rlir preferred-cond fcid command [7-125](#)  
rmdir command [1-58](#)  
role feature-group name command [5-70](#)  
role name command [5-71](#)  
rscn abort command [7-128](#)  
rscn command [7-127](#)  
rscn commit command [7-129](#)  
rscn distribute command [7-130](#)  
rscn event-tov command [7-131](#)  
rule command [5-72](#)  
run-script command [1-59](#)

---

## S

san-port-channel persistent command [7-132](#)  
scsi-target command [7-133](#)  
send command [1-60](#)  
server command [5-74](#)  
service-policy command [4-6](#)  
session-limit command [1-62](#)  
setup command [1-61](#)  
show aaa accounting command [5-76](#)  
show aaa authentication command [5-77](#)  
show aaa groups command [5-78](#)  
show access-lists command [5-79](#)  
show accounting log command [5-80](#)  
show banner motd command [1-63](#)

***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

show boot command [1-64](#)  
 show cfs command [8-2](#)  
 show class-map command [4-11](#)  
 show cli alias command [1-65](#)  
 show cli history command [1-66](#)  
 show cli variables command [1-67](#)  
 show clock command [1-68](#)  
 show copyright command [1-69](#)  
 show debug logfile command [1-70](#)  
 show debug npv command [8-4](#)  
 show device-alias command [8-5](#)  
 show environment command [1-71](#)  
 show fabric-binding command [8-7](#)  
 show fc2 command [8-9](#)  
 show fcalias command [8-11](#)  
 show fcdomain command [8-12](#)  
 show fcdroplacency command [8-14](#)  
 show fcflow stats command [8-15](#)  
 show fcid-allocation command [8-16](#)  
 show fcns database command [8-17](#)  
 show fcns statistics command [8-19](#)  
 show fcoe command [8-20](#)  
 show fcroute command [8-21](#)  
 show fcs command [8-23](#)  
 show fcsp command [8-25](#)  
 show fctimer command [8-27](#)  
 show fdmi command [8-29](#)  
 show file command [1-72](#)  
 show flogi command [8-30](#)  
 show fspf command [8-32](#)  
 show hardware internal command [1-73](#)  
 show hostname command [1-74](#)  
 show incompatibility system command [1-75](#)  
 show in-order-guarantee command [8-33](#)  
 show install all command [1-76](#)  
 show interface command [8-34](#)  
 show interface mac-address command [3-2](#)  
 show interface port-channel command [3-3](#)  
 show interface priority-flow-control command [4-14](#)  
 show interface private-vlan mapping command [3-4](#)  
 show interface switchport command [3-5](#)  
 show interface vlan command [3-6](#)  
 show inventory command [1-77](#)  
 show ip access-lists command [5-82](#)  
 show ip igmp snooping command [3-8](#)  
 show lacp command [3-9](#)  
 show license command [1-78](#)  
 show license host-id command [1-79](#)  
 show license usage command [1-80](#)  
 show line command [1-81](#)  
 show lldp command [8-37](#)  
 show loadbalancing command [8-36](#)  
 show logging console command [6-18](#)  
 show logging info command [6-19](#)  
 show logging last command [6-20](#)  
 show logging level command [6-21](#)  
 show logging logfile command [6-22](#)  
 show logging module command [6-23](#)  
 show logging monitor command [6-24](#)  
 show logging nvram command [6-25](#)  
 show logging onboard command [6-26](#)  
 show logging server command [6-31](#)  
 show logging session status command [6-32](#)  
 show logging status command [6-33](#)  
 show logging timestamp command [6-34](#)  
 show mac access-lists command [5-83](#)  
 show mac-address-table aging-time command [3-10](#)  
 show mac-address-table command [3-13](#)  
 show mac-address-table count command [3-11](#)  
 show mac-address-table notification command [3-12](#)  
 show module command [1-82](#)  
 show monitor session command [3-15](#)  
 show npv flogi-table command [8-40](#)  
 show npv status command [8-41](#)  
 show policy-map command [4-10, 4-12](#)  
 show policy-map interface command [4-15](#)  
 show port-channel capacity command [3-16](#)

***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

show port-channel compatibility-parameters command [3-17](#)

show port-channel database command [3-18](#)

show port-channel load-balance command [3-19](#)

show port-channel summary command [3-21](#)

show port-channel traffic command [3-22](#)

show port-channel usage command [3-23](#)

show port index-allocation command [8-42](#)

show port-security command [8-43](#)

show processes command [1-83](#)

show processes cpu command [1-84](#)

show processes log command [1-85](#)

show processes memory command [1-86](#)

show radius-server command [5-84](#)

show rlir command [8-45](#)

show role command [5-86](#)

show role feature command [5-87](#)

show role feature-group command [5-88](#)

show rscn command [8-46](#)

show running-config aaa command [5-89](#)

show running-config command [1-87, 3-24](#)

show running-config diff command [1-88](#)

show running-config radius command [5-90](#)

show running-config security command [5-91](#)

show running-config spanning-tree command [3-25](#)

show running-config vlan command [3-26](#)

show san-port-channel command [8-47](#)

show scsi-target command [8-49](#)

show spanning-tree active command [3-30](#)

show spanning-tree bridge command [3-32](#)

show spanning-tree brief command [3-34](#)

show spanning-tree command [3-27](#)

show spanning-tree detail command [3-36](#)

show spanning-tree interface command [3-38](#)

show spanning-tree mst command [3-40](#)

show spanning-tree root command [3-42](#)

show spanning-tree summary command [3-44](#)

show spanning-tree vlan command [3-46](#)

show sprom command [1-90](#)

show ssh key command [5-92](#)

show ssh server command [5-93](#)

show startup-config aaa command [5-94](#)

show startup-config command [1-91, 3-49](#)

show startup-config radius command [5-95](#)

show startup-config security command [5-96](#)

show switchname command [1-92](#)

show system cores command [1-93](#)

show system qos command [4-13](#)

show system reset-reason command [1-94](#)

show system uptime command [1-95](#)

show tacacs-server command [5-97](#)

show tech-support command [1-96](#)

show telnet server command [5-99](#)

show terminal command [1-97](#)

show topology command [8-51](#)

show trunk protocol command [8-52](#)

show user-account command [5-100](#)

show users command [5-101](#)

show version command [1-98](#)

show vig command [8-53](#)

show vlan access-list command [5-102](#)

show vlan access-map command [5-103](#)

show vlan command [3-50](#)

show vlan filter command [5-104](#)

show vlan id command [3-52](#)

show vlan private-vlan command [3-53](#)

show vsan command [8-54](#)

show wwn command [8-56](#)

show zone analysis command [8-59](#)

show zone command [8-57](#)

show zoneset command [8-62](#)

shutdown (VLAN configuration) command [2-49](#)

sleep command [1-99](#)

spanning-tree bpdupfilter command [2-51](#)

spanning-tree bpduguard command [2-53](#)

spanning-tree cost command [2-55](#)

spanning-tree guard command [2-57](#)

spanning-tree link-type command [2-58](#)

## ***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

spanning-tree loopguard default command [2-59](#)  
 spanning-tree mode command [2-60](#)  
 spanning-tree mst configuration command [2-61](#)  
 spanning-tree mst cost command [2-63](#)  
 spanning-tree mst forward-time command [2-65](#)  
 spanning-tree mst hello-time command [2-66](#)  
 spanning-tree mst max-age command [2-67](#)  
 spanning-tree mst max-hops command [2-68](#)  
 spanning-tree mst port-priority command [2-69](#)  
 spanning-tree mst priority command [2-70](#)  
 spanning-tree mst root command [2-71](#)  
 spanning-tree mst simulate pvst command [2-73](#)  
 spanning-tree mst simulate pvst global command [2-75](#)  
 spanning-tree pathcost method command [2-77](#)  
 spanning-tree port-priority command [2-90](#)  
 spanning-tree port type edge bpduguard default command [2-80](#)  
 spanning-tree port type edge bpduguard default command [2-82](#)  
 spanning-tree port type edge command [2-78](#)  
 spanning-tree port type edge default command [2-84](#)  
 spanning-tree port type network command [2-86](#)  
 spanning-tree port type network default command [2-88](#)  
 spanning-tree vlan command [2-91](#)  
 speed command [1-100](#)  
 ssh command [5-105](#)  
 ssh key command [5-106](#)  
 ssh server enable command [5-108](#)  
 state command [2-93](#)  
 stopbits command [1-101](#)  
 storm-control level command [5-109](#)  
 svi enable command [2-94](#)  
 switchname command [1-104](#)  
 switchport access vlan command [2-95](#)  
 switchport block command [2-96](#)  
 switchport command [7-135](#)  
 switchport ignore bit-errors command [7-138](#)  
 switchport mode private-vlan host command [2-97](#)  
 switchport mode private-vlan promiscuous command [2-98](#)

switchport private-vlan host-association command [2-99](#)  
 switchport private-vlan mapping command [2-101](#)  
 system cores command [1-102](#)  
 system default switchport command [7-140](#)  
 system default zone default-zone permit command [7-142](#)  
 system default zone distribute full command [7-143](#)  
 system jumbomtu command [4-8](#)  
 system qos command [4-9](#)  
 system startup-config unlock command [1-103](#)

---

## **T**

tacacs-server deadtime command [5-111](#)  
 tacacs-server directed-request command [5-112](#)  
 tacacs-server host command [5-113](#)  
 tacacs-server key command [5-115](#)  
 tacacs-server timeout command [5-116](#)  
 tail command [1-105](#)  
 telnet command [5-117](#)  
 telnet server enable command [5-118](#)  
 terminal length command [1-107](#)  
 terminal session-timeout command [1-108](#)  
 terminal terminal-type command [1-109](#)  
 terminal width command [1-110](#)  
 traceroute command [1-111](#)  
 trunk protocol enable command [7-144](#)

---

## **U**

update license command [1-112](#)  
 username command [5-121](#)  
 use-vrf command [5-119](#)

---

## **V**

vlan (EXEC mode) command [2-103](#)  
 vlan access-map command [5-123](#)  
 vlan filter command [5-124](#)

***Send comments to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

vlan policy deny command [5-126](#)

vrf context command [2-105](#)

vrf policy deny command [5-127](#)

vsan database command [7-145](#)

---

## W

write erase command [1-113](#)

wwn secondary-mac command [7-148](#)

wwn vsan command [7-149](#)

---

## Z

zone clone command [7-150](#)

zone commit command [7-151](#)

zone compact command [7-152](#)

zone copy command [7-153](#)

zone default-zone command [7-155](#)

zone merge-control restrict vsan command [7-156](#)

zone mode enhanced command [7-157](#)

zone name (configuration mode) command [7-158](#)

zone name (zone set configuration mode) command [7-160](#)

zone rename command [7-161](#)

zoneset (configuration mode) command [7-162](#)

zoneset (EXEC mode) command [7-164](#)