



Send comments to nx5000-docfeedback@cisco.com

INDEX

A

- aaa accounting default command **6-2**
 - aaa authentication login console command **6-3**
 - aaa authentication login default command **6-5**
 - aaa authentication login error-enable command **6-7**
 - aaa authentication login mschap command **6-8**
 - aaa group server radius command **6-9**
 - action command **6-10**
 - attach fex command **4-2**
-

B

- bandwidth (interface) command **2-2**
 - banner motd command **1-2**
 - beacon command **4-3**
 - boot command **1-3**
-

C

- cd command **1-5**
- cdp command **2-4**
- cdp enable command **2-6**
- cfs distribute command **8-2**
- cfs ipv4 distribute command **8-3**
- cfs ipv4 mcast-address command **8-5**
- cfs ipv6 distribute command **8-7**
- cfs ipv6 mcast-address command **8-9**
- cfs region command **8-11**
- cfs staggered-merge command **8-12**
- channel-group (Ethernet) command **2-7**
- class-map command **5-2**
- clear access-list counters command **6-11**

- clear accounting log command **6-12**
- clear cli history command **1-6**
- clear cores command **1-7**
- clear debug-logfile command **1-8**
- clear device-alias command **8-13**
- clear fcdomain command **8-14**
- clear fcflow stats command **8-15**
- clear fcns statistics command **8-16**
- clear fcsm log command **8-17**
- clear fcs statistics command **8-18**
- clear fctimer session command **8-19**
- clear fspf counters command **8-20**
- clear install failure-reason command **1-9**
- clear license command **1-10**
- clear logging nvram command **7-2**
- clear logging onboard command **7-3**
- clear logging session command **7-4**
- clear mac access-list counters command **2-10**
- clear mac-address-table dynamic command **2-12**
- clear mac dynamic command **2-11**
- clear ntp session command **7-5**
- clear ntp statistics command **7-6**
- clear port-security command **8-21**
- clear rlir command **8-22**
- clear rscn session command **8-23**
- clear rscn statistics command **8-24**
- clear spanning-tree counters command **2-14**
- clear spanning-tree detected-protocol command **2-15**
- clear user command **1-11**
- clear zone command **8-25**
- cli var name command **1-12**
- clock set command **1-14**
- clock summer-time command **1-15**

Send comments to nx5000-docfeedback@cisco.com

clock timezone command **1-17**
 configure session command **1-18**
 configure terminal command **1-19**
 copy command **1-20**
 copy running-config startup-config command **1-24**

D

databits command **1-25**
 deadtime command **6-13**
 debug logfile command **1-26**
 debug logging command **1-27**
 delay (interface) command **2-16**
 delete command **1-28**
 deny (IPv4) command **6-15**
 deny (IPv6) command **6-25**
 deny (MAC) command **6-34**
 description (fex) command **4-4**
 description (interface) command **2-17**
 description (user role) command **6-37**
 device-alias abort command **8-26**
 device-alias commit command **8-27**
 device-alias database command **8-28**
 device-alias distribute command **8-29**
 device-alias import command **8-30**
 device-alias mode command **8-31**
 device-alias name command **8-32**
 device-alias rename command **8-33**
 dir command **1-30**
 discover custom-list command **8-34**
 discover scsi-target command **8-35**

E

echo command **1-32**
 end command **1-33**
 exec-timeout command **1-34**
 exit (EXEC) command **1-36**

exit (global) command **1-37**

F

fabric-binding activate command **8-38**
 fabric-binding database command **8-39**
 fabric-binding database diff command **8-40**
 fabric-binding database vsan command **8-41**
 fabric-binding enable command **8-43**
 fabric profile command **8-37**
 fcalias clone command **8-44**
 fcalias name command **8-45**
 fcalias rename command **8-46**
 fcdomain abort vsan command **8-49**
 fcdomain command **8-47**
 fcdomain commit vsan command **8-50**
 fcdomain distribute command **8-51**
 fcdomain rfc-reject command **8-52**
 fcdroplatency command **8-53**
 fcflow stats command **8-54**
 fcid-allocation command **8-56**
 fcinterop fcid-allocation command **8-57**
 fcns no-auto-poll command **8-58**
 fcns proxy-port command **8-59**
 fcns reject-duplicate-pwnn command **8-60**
 fcoe mode command **5-3**
 fcping command **8-61**
 fcroute command **8-63**
 fcsp command **8-68**
 fcsp dhchap command **8-70**
 fcsp enable command **8-72**
 fcs plat-check-global command **8-65**
 fcsp reauthenticate command **8-73**
 fcsp timeout command **8-74**
 fcs register command **8-66**
 fcs virtual-device-add command **8-67**
 fctimer abort command **8-76**
 fctimer command **8-75**
 fctimer commit command **8-77**

Send comments to nx5000-docfeedback@cisco.com

fctimer distribute command **8-78**
fctrace command **8-79**
fdmi suppress-updates command **8-80**
feature (user role feature group) command **6-38**
feature fcoe command **1-38**
feature interface-vlan command **1-39**
feature lacp command **1-40**
feature lldp command **1-41**
feature private-vlan command **1-42**
feature tacacs+ command **1-43**
feature udld command **1-44**
fex associate command **4-6**
fex command **4-5**
fex pinning redistribute command **4-7**
find command **1-45**
flowcontrol command **5-4**
format command **1-46**
fspf config command **8-81**
fspf cost command **8-83**
fspf dead-interval command **8-84**
fspf enable command **8-85**
fspf hello-interval command **8-86**
fspf passive command **8-87**
fspf retransmit-interval command **8-88**

G

gunzip command **1-47**
gzip command **1-48**

H

hostname command **1-49**

I

in-order-guarantee command **8-89**
install all command **1-50**

install license command **1-53**
instance vlan command **2-18**
interface ethernet command **2-20**
interface fc command **8-90**
interface policy deny command **6-39**
interface port-channel command **2-21**
interface san-port-channel command **8-92**
interface vfc command **8-94**
ip access-list command **6-40**
ip igmp snooping (EXEC) command **2-23**
ip igmp snooping (VLAN) command **2-24**
ip port access-group command **6-42**
ipv6 access-list command **6-44**
ipv6 port traffic-filter command **6-45**

L

lacp port-priority command **2-26**
lacp system-priority command **2-27**
line console command **1-54**
line vty command **1-55**
link debounce command **2-28**
lldp (interface) command **8-98**
lldp command **8-96**
logging abort command **8-99**
logging commit command **8-100**
logging console command **7-7**
logging distribute command **8-101**
logging event command **7-8**
logging event port command **7-9**
logging fex command **4-8**
logging level command **7-10**
logging logfile command **7-12**
logging module command **7-14**
logging monitor command **7-15**
logging server command **7-16**
logging timestamp command **7-18**

Send comments to nx5000-docfeedback@cisco.com

M

mac access-list command **6-47**
 mac-address-table aging-time command **2-29**
 mac-address-table notification command **2-31**
 mac-address-table static command **2-32**
 mac port access-group command **6-49**
 match command **6-51**
 match cos command **5-5**
 member (fcalias configuration mode) command **8-102**
 member (zone configuration mode) command **8-104**
 member (zoneset configuration mode) command **8-106**
 modem in command **1-56**
 modem init-string command **1-57**
 modem set-string user-input command **1-59**
 monitor session command **2-34**
 move command **1-60**

N

name (MST configuration) command **2-36**
 name (VLAN configuration) command **2-35**
 npiv enable command **8-107**
 npv auto-load-balance disruptive command **8-108**
 npv enable command **8-109**
 npv traffic-map command **8-110**
 ntp abort command **7-20**
 ntp command **7-19**
 ntp commit command **7-21**
 ntp distribute command **7-22**
 ntp sync-retry command **7-23**

P

parity command **1-62**
 permit (IPv4) command **6-52**
 permit (IPv6) **6-62**
 permit (MAC) command **6-71**
 permit interface command **6-74**

permit vlan command **6-76**
 permit vrf command **6-78**
 ping6 command **1-65**
 ping command **1-63**
 pinning max-links command **4-9**
 policy-map command **5-6**
 port-channel load-balance ethernet command **2-37**
 port-security abort command **8-113**
 port-security command **8-111**
 port-security commit command **8-114**
 port-security database command **8-115**
 port-security distribute command **8-117**
 port-security enable command **8-118**
 port-track enable command **8-119**
 port-track force-shut command **8-120**
 port-track interface command **8-121**
 priority-flow-control command **5-8**
 private-vlan association command **2-41**
 private-vlan command **2-39**
 private-vlan synchronize command **2-43**
 purge fcdomain fcid command **8-122**

R

radius-server deadtime command **6-79**
 radius-server directed-request command **6-80**
 radius-server host command **6-81**
 radius-server key command **6-83**
 radius-server retransmit command **6-84**
 radius-server timeout command **6-85**
 reload command **1-67**
 remark command **6-86**
 resequence command **6-88**
 revision command **2-44**
 rlir preferred-cond fcid command **8-123**
 rmdir command **1-68**
 role feature-group name command **6-90**
 role name command **6-91**
 rscn abort command **8-126**

Send comments to nx5000-docfeedback@cisco.com

rscn command **8-125**
rscn commit command **8-127**
rscn distribute command **8-128**
rscn event-tov command **8-129**
rule command **6-92**
run-script command **1-69**

S

san-port-channel persistent command **8-130**
save command **1-70**
scsi-target command **8-131**
send command **1-71**
serial command **4-11**
server command **6-94**
service-policy command **5-9**
session-limit command **1-73**
setup command **1-72**
show aaa accounting command **6-96**
show aaa authentication command **6-97**
show aaa groups command **6-98**
show access-lists command **6-99**
show accounting log command **6-100**
show banner motd command **1-74**
show boot command **1-75**
show cfs command **9-2**
show class-map command **5-11**
show cli alias command **1-76**
show cli history command **1-77**
show cli variables command **1-78**
show clock command **1-79**
show copyright command **1-80**
show debug logfile command **1-81**
show debug npv command **9-4**
show device-alias command **9-5**
show diagnostic result fex command **4-13**
show environment command **1-82**
show environment fex command **4-14**
show fabric-binding command **9-7**

show fc2 command **9-9**
show fcalias command **9-11**
show fcdomain command **9-12**
show fcdroplatency command **9-14**
show fcflow stats command **9-15**
show fcid-allocation command **9-16**
show fcns database command **9-17**
show fcns statistics command **9-19**
show fcoe command **9-20**
show fcroute command **9-21**
show fcs command **9-23**
show fcsp command **9-25**
show fctimer command **9-27**
show fdmi command **9-28**
show fex command **4-15**
show fex transceiver command **4-16**
show fex version command **4-17**
show file command **1-83**
show flogi command **9-29**
show fspf command **9-31**
show hardware internal command **1-84**
show hostname command **1-85**
show incompatibility system command **1-86**
show in-order-guarantee command **9-32**
show install all command **1-87**
show interface fex-fabric command **4-18**
show interface fex-intf command **4-19**
show interface mac-address command **3-2**
show interface priority-flow-control command **5-14**
show interface private-vlan mapping command **3-3**
show interface switchport command **3-4**
show interface transceiver fex-fabric command **4-20**
show interface vlan command **3-5**
show inventory command **1-88**
show ip access-lists command **6-101**
show ip igmp snooping command **3-7**
show ipv6 access-lists command **6-102**
show lacp command **3-8**
show license command **1-89**

Send comments to nx5000-docfeedback@cisco.com

- show license host-id command **1-90**
- show license usage command **1-91**
- show line command **1-93**
- show lldp command **9-33**
- show loadbalancing command **9-36**
- show logging console command **7-24**
- show logging info command **7-25**
- show logging last command **7-26**
- show logging level command **7-27**
- show logging logfile command **7-28**
- show logging module command **7-29**
- show logging monitor command **7-30**
- show logging nvram command **7-31**
- show logging onboard command **7-32**
- show logging server command **7-37**
- show logging session status command **7-38**
- show logging status command **7-39**
- show logging timestamp command **7-40**
- show mac access-lists command **6-104**
- show mac-address-table aging-time command **3-9**
- show mac-address-table command **3-12**
- show mac-address-table count command **3-10**
- show mac-address-table notification command **3-11**
- show module command **1-94**
- show monitor session command **3-14**
- show npv flogi-table command **9-37**
- show npv status command **9-38**
- show npv traffic-map command **9-39**
- show ntp peers command **7-42**
- show ntp peer-status command **7-41**
- show ntp statistics command **7-43**
- show ntp timestamp-status command **7-44**
- show policy-map command **5-12**
- show policy-map interface command **5-15**
- show port-channel capacity command **3-15**
- show port-channel compatibility-parameters command **3-16**
- show port-channel database command **3-17**
- show port-channel load-balance command **3-18**
- show port-channel summary command **3-20**
- show port-channel traffic command **3-21**
- show port-channel usage command **3-22**
- show port index-allocation command **9-40**
- show port-security command **9-41**
- show processes command **1-95**
- show processes cpu command **1-96**
- show processes log command **1-97**
- show processes memory command **1-98**
- show radius-server command **6-105**
- show rlir command **9-43**
- show role command **6-107**
- show role feature command **6-108**
- show role feature-group command **6-109**
- show rscn command **9-44**
- show running-config aaa command **6-110**
- show running-config command **1-99, 3-23**
- show running-config diff command **1-100**
- show running-config radius command **6-111**
- show running-config security command **6-112**
- show running-config spanning-tree command **3-24**
- show running-config vlan command **3-25**
- show san-port-channel command **9-45**
- show scsi-target command **9-47**
- show spanning-tree active command **3-29**
- show spanning-tree bridge command **3-30**
- show spanning-tree brief command **3-32**
- show spanning-tree command **3-26**
- show spanning-tree detail command **3-33**
- show spanning-tree interface command **3-34**
- show spanning-tree mst command **3-36**
- show spanning-tree root command **3-38**
- show spanning-tree summary command **3-40**
- show spanning-tree vlan command **3-41**
- show sprom command **1-102**
- show ssh key command **6-113**
- show ssh server command **6-114**
- show startup-config aaa command **6-115**
- show startup-config command **1-104, 3-44**

Send comments to nx5000-docfeedback@cisco.com

- show startup-config radius command **6-116**
- show startup-config security command **6-117**
- show switchname command **1-105**
- show system cores command **1-106**
- show system qos command **5-13**
- show system reset-reason command **1-107**
- show system uptime command **1-108**
- show tacacs-server command **6-118**
- show tech-support command **1-109, 9-48**
- show telnet server command **6-120**
- show terminal command **1-110**
- show topology command **9-49**
- show trunk protocol command **9-50**
- show user-account command **6-121**
- show users command **6-122**
- show version command **1-111**
- show vig command **9-50**
- show vlan access-list command **6-123**
- show vlan access-map command **6-124**
- show vlan command **3-45**
- show vlan filter command **6-125**
- show vlan id command **3-47**
- show vlan private-vlan command **3-48**
- show vsan command **9-51**
- show wwn command **9-53**
- show zone analysis command **9-56**
- show zone command **9-54**
- show zoneset command **9-59**
- shutdown (VLAN configuration) command **2-45**
- sleep command **1-112**
- spanning-tree bpdufilter command **2-47**
- spanning-tree bpduguard command **2-49**
- spanning-tree cost command **2-51**
- spanning-tree guard command **2-53**
- spanning-tree link-type command **2-54**
- spanning-tree loopguard default command **2-55**
- spanning-tree mode command **2-56**
- spanning-tree mst configuration command **2-57**
- spanning-tree mst cost command **2-59**
- spanning-tree mst forward-time command **2-61**
- spanning-tree mst hello-time command **2-62**
- spanning-tree mst max-age command **2-63**
- spanning-tree mst max-hops command **2-64**
- spanning-tree mst port-priority command **2-65**
- spanning-tree mst priority command **2-66**
- spanning-tree mst root command **2-67**
- spanning-tree mst simulate pvst command **2-69**
- spanning-tree mst simulate pvst global command **2-71**
- spanning-tree pathcost method command **2-73**
- spanning-tree port-priority command **2-86**
- spanning-tree port type edge bpdufilter default command **2-76**
- spanning-tree port type edge bpduguard default command **2-78**
- spanning-tree port type edge command **2-74**
- spanning-tree port type edge default command **2-80**
- spanning-tree port type network command **2-82**
- spanning-tree port type network default command **2-84**
- spanning-tree vlan command **2-87**
- speed (Ethernet) command **2-89**
- speed command **1-113**
- ssh6 command **6-127**
- ssh command **6-126**
- ssh key command **6-128**
- ssh server enable command **6-130**
- state command **2-90**
- stopbits command **1-114**
- storm-control level command **6-131**
- svi enable command **2-91**
- switchname command **1-117**
- switchport access vlan command **2-92**
- switchport block command **2-93**
- switchport command **8-133**
- switchport ignore bit-errors command **8-136**
- switchport mode fex-fabric command **4-21**
- switchport mode private-vlan host command **2-94**
- switchport mode private-vlan promiscuous command **2-95**
- switchport private-vlan host-association command **2-96**

Send comments to nx5000-docfeedback@cisco.com

switchport private-vlan mapping command **2-98**
 system cores command **1-115**
 system default switchport command **8-138**
 system default zone default-zone permit command **8-140**
 system default zone distribute full command **8-141**
 system jumbomtu command **5-16**
 system qos command **5-17**
 system startup-config unlock command **1-116**

T

tacacs-server deadtime command **6-133**
 tacacs-server directed-request command **6-134**
 tacacs-server host command **6-135**
 tacacs-server key command **6-137**
 tacacs-server timeout command **6-138**
 tail command **1-118**
 telnet6 command **6-141**
 telnet command **6-139**
 telnet server enable command **6-140**
 terminal length command **1-119**
 terminal session-timeout command **1-120**
 terminal terminal-type command **1-121**
 terminal width command **1-122**
 traceroute6 command **1-124**
 traceroute command **1-123**
 trunk protocol enable command **8-142**

U

udld (configuration mode) command **2-100**
 udld (Ethernet) command **2-102**
 untagged cos command **5-18**
 update license command **1-125**
 username command **6-144**
 use-vrf command **6-142**

V

vlan (EXEC mode) command **2-103**
 vlan access-map command **6-146**
 vlan filter command **6-147**
 vlan policy deny command **6-149**
 vrf context command **2-105**
 vrf policy deny command **6-150**
 vsan database command **8-143**

W

write erase command **1-126**
 wwn secondary-mac command **8-146**
 wwn vsan command **8-147**

Z

zone clone command **8-148**
 zone commit command **8-149**
 zone compact command **8-150**
 zone copy command **8-151**
 zone default-zone command **8-152**
 zone merge-control restrict vsan command **8-153**
 zone mode enhanced command **8-154**
 zone name (configuration mode) command **8-155**
 zone name (zone set configuration mode) command **8-157**
 zone rename command **8-158**
 zoneset (configuration mode) command **8-159**
 zoneset (EXEC mode) command **8-161**