

Send comments to nexus5k-docfeedback@cisco.com



A Commands

This chapter describes the system management commands that begin with A.

Send comments to nexus5k-docfeedback@cisco.com

abort (session)

To discard the current configuration session, use the **abort** command.

abort

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Session configuration mode

Command History	Release	Modification
	4.0(0)N1(1)	This command was introduced.

Examples This example shows how to abort the current configuration session:

```
switch# configure session MySession1
switch(config-s)# abort
switch#
```

Related Commands	Command	Description
	commit	Commits a session.
	configure session	Creates a configuration session.
	show configuration session	Displays the contents of the session.
	verify	Verifies a session.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

acllog match-log-level

To specify the minimum severity level to log ACL matches, use the **acllog match-log-level** command. To remove the acllog match log level, use the **no** form of this command.

acllog match-log-level *severity-level*

no acllog match-log-level *severity-level*

Syntax Description

severity-level

Number of the desired severity level at which messages should be logged. Messages at or numerically lower than the specified level are logged. Severity levels are as follows:

- **0**—emergency: System unusable
- **1**—alert: Immediate action needed
- **2**—critical: Critical condition
- **3**—error: Error condition
- **4**—warning: Warning condition
- **5**—notification: Normal but significant condition—default level
- **6**—informational: Informational message only (default)
- **7**—debugging: Appears during debugging only

Command Default

None

Command Modes

Global configuration mode

Command History

Release	Modification
5.2(1)N1(1)	This command was introduced.

Examples

This example shows how to set the acllog match-log-level to 6, informational:

```
switch(config)# acllog match-log-level 6
switch(config)#
```

Related Commands

Command	Description
logging level	Enables logging messages from a specified facility and configures the logging severity level.
logging logfile	Configures the name of the log file used to store system messages and sets the minimum severity level to log.

Send comments to nexus5k-docfeedback@cisco.com