

Send comments to nexus5k-docfeedback@cisco.com



D Commands

This chapter describes the system management commands that begin with D.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

diagnostic bootup level

To configure the bootup diagnostic level to trigger diagnostics when the device boots, use the **diagnostic bootup level** command. To remove bootup diagnostic level configuration, use the **no** form of this command.

diagnostic bootup level {bypass | complete}

no diagnostic bootup level {bypass | complete}

Syntax Description

bypass	Specifies that all bootup tests are skipped.
complete	Specifies that all bootup diagnostics are performed. This is the default value.

Command Default

Complete

Command Modes

Global configuration mode

Command History

Release	Modification
4.0(0)N1(1)	This command was introduced.
4.2(1)N2(1)	Support was added to control the diagnostic level of all the Cisco Nexus 2000 Series Fabric Extenders connected to the switch.

Examples

This example shows how to configure the bootup diagnostics level to trigger the complete diagnostics:

```
switch(config)# diagnostic bootup level complete
switch(config)#
```

This example shows how to remove the bootup diagnostics level configuration:

```
switch(config)# no diagnostic bootup level complete
switch(config)#
```

Related Commands

Command	Description
show diagnostic bootup level	Displays the bootup diagnostics level.
show diagnostic bootup result	Displays the results of the diagnostics tests.