

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*



## C Commands

---

This chapter describes the Cisco NX-OS unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) commands that begin with C.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

## clear forwarding route

To clear forwarding information, use the **clear forwarding route** command.

**clear forwarding** {**ip** | **ipv4**} **route** [**\*** | *prefix*] [**vrf** *vrf-name*]

Syntax Description		
<b>ip</b>		Clears an IPv4 route.
<b>ipv4</b>		Clears an IPv4 route.
<b>*</b>		(Optional) Clears all routes.
<i>prefix</i>		(Optional) IPv4 prefix. The IPv4 format is x.x.x.x/length.
<b>vrf</b> <i>vrf-name</i>		(Optional) Specifies a particular virtual routing and forwarding (VRF) instance. The VRF name can be any case-sensitive, alphanumeric string up to 32 characters.

Command Default	None
-----------------	------

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Examples

This example shows how to clear a route from the FIB:

```
switch# clear forwarding ip 10.0.0.1/8
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## clear forwarding inconsistency

To clear the Layer 3 inconsistency checker for the Forwarding Information Base (FIB), use the **clear forwarding inconsistency** command.

**clear forwarding inconsistency**

<b>Syntax Description</b>	This command has no arguments or keywords.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>
----------------------

Release	Modification
5.0(3)N1(1)	This command was introduced.

<b>Examples</b>	This example shows how to clear the Layer 3 inconsistency checker for all modules:
-----------------	--

```
switch# clear forwarding inconsistency module all
```

<b>Related Commands</b>	Command	Description
	<b>show forwarding inconsistency</b>	Displays information about the FIB inconsistencies.
	<b>test forwarding inconsistency</b>	Triggers the forwarding inconsistency checker.

*[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

# clear ip adjacency statistics

To clear adjacency statistics, use the **clear ip adjacency statistics** command.

**clear ip adjacency statistics**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** None

---

**Command Modes**

Release	Modification
5.0(3)N1(1)	This command was introduced.

---

**Examples** This example shows how to clear the adjacency statistics:

```
switch# clear ip adjacency statistics
```

---

Related Commands	Command	Description
	show ip adjacency	Displays adjacency information.

---

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

## clear ip route

To clear individual routes from the unicast Routing Information Base (RIB), use the **clear ip route** command.

```
clear ip route [* | addr | prefix]] [vrf vrf-name]
```

### Syntax Description

<b>*</b>	(Optional) Clears all routes.
<i>addr</i>	(Optional) Clears this route. The format is x.x.x.x.
<i>prefix</i>	(Optional) Clears this prefix. The format is x.x.x.x/length.
<b>vrf</b> <i>vrf-name</i>	(Optional) Specifies the virtual routing and forwarding (VRF) context name. The name can be any case-sensitive, alphanumeric string up to 32 characters.

### Command Default

None

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Usage Guidelines

Use the **clear ip route** command to clear individual routes from the route table.



#### Caution

The **\*** keyword is severely disruptive to routing.

### Examples

This example shows how to clear the individual route:

```
switch(config)# clear ip route 192.0.2.1
```

### Related Commands

Command	Description
<b>show ip route</b>	Displays entries in the route table.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## clear sockets statistics

To clear the socket statistics, use the **clear sockets statistics** command.

**clear sockets statistics** [**all** | **raw** | **tcp** | **udp**]

### Syntax Description

<b>all</b>	(Optional) Clears all the socket statistics.
<b>raw</b>	(Optional) Clears the socket statistic for the raw IPv4 protocols.
<b>tcp</b>	(Optional) Clears the socket statistic for the TCP IPv4 protocols.
<b>udp</b>	(Optional) Clears the socket statistic for the UDP IPv4 protocols.

### Command Default

None

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Examples

This example shows how to clear the TCP socket statistics:

```
switch# clear sockets statistics tcp
```

### Related Commands

Command	Description
<b>show sockets client</b>	Displays information about the socket client information.
<b>show sockets connection</b>	Displays information about the socket connection.
<b>show sockets statistics</b>	Displays information about the socket statistics.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***