

Send comments to nexus5k-docfeedback@cisco.com



H Commands

This chapter describes the Cisco NX-OS unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) commands that begin with H.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

hardware profile ucast6 max-limit

To set the maximum number of unicast IPv6 entry limit for the host table, use the **hardware profile ucast6 max-limit** command.

hardware profile ucast6 max-limit *max-limit*

Syntax Description	<i>max-limit</i>	Maximum limit for the unicast IPv6 entries. The range is from 0 to 8000.
---------------------------	------------------	--

Defaults	4000
-----------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.

Usage Guidelines	Use the hardware profile ucast6 max-limit command to limit the maximum number of host entries in the host table.
	After setting the limit for multicast and IPv6 in the host table, the remaining number of entries are allocated for IPv4 host entries.



Note

A limit set by using the **hardware profile multicast max-limit** command overrides the limit set by using the **hardware profile ucast6 max-limit** command.

This example shows how to set the maximum number of unicast IPv6 entry limit in the host table:

```
switch# configure terminal
switch(config)# hardware profile ucast6 max-limit 2500
Warning!!: The host (v4 & v6) unicast route limits have been changed.
switch(config)#
```

Related Commands	Command	Description
	hardware profile multicast max-limit	Sets the maximum number of entries in the multicast routing table.
	show hardware profile status	Displays information about the multicast and unicast routing table limits.