

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*



## I Commands

---

This chapter describes the Cisco NX-OS Layer 3 interfaces commands that begin with I.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

# ip address

To set a primary or secondary IP address for an interface, use the **ip address** command. To remove an IP address or disable IP processing, use the **no** form of this command.

**ip address** *ip-address mask* [**secondary**]

**no ip address** *ip-address mask* [**secondary**]

## Syntax Description

<i>ip-address</i>	IPv4 address in the format <i>A.B.C.D</i> or <i>A.B.C.D/length</i> .
<i>mask</i>	Mask for the associated IP subnet.
<b>secondary</b>	(Optional) Specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address.

## Command Default

No IP address is defined for the interface.

## Command Modes

Interface configuration mode  
Subinterface configuration mode

## Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

## Usage Guidelines



### Note

Before you use this command, make sure that you use the **no switchport** command on the interface to use the Layer 3 features.

An interface can have one primary IP address and one secondary IP address.

You can disable IP processing on a particular interface by removing its IP address with the **no ip address** command.

The optional **secondary** keyword allows you to specify a secondary IP address. Secondary addresses are treated like primary addresses, except the system never generates datagrams other than routing updates with secondary source addresses. IP broadcasts and Address Resolution Protocol (ARP) requests are handled, as are interface routes in the IP routing table.



### Note

When you are routing using the Open Shortest Path First (OSPF) algorithm, ensure that the secondary address of an interface fall into the same OSPF area as the primary addresses.

## Examples

This example shows how to configure the IP address 192.168.0.27 as the primary address and 192.168.0.5 as the secondary address for Ethernet interface 1/5:

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
switch(config)# interface ethernet 1/5  
switch(config-if)# no switchport  
switch(config-if)# ip address 192.168.0.27 255.255.255.0  
switch(config-if )# ip address 192.168.0.5 255.255.255.0 secondary  
switch(config-if)#
```

**Related Commands**

Command	Description
<b>copy running-config startup-config</b>	Saves the configuration change to the startup configuration file.
<b>no switchport</b>	Enables an interface for Layer 3 configuration.
<b>show ip interface</b>	Displays interfaces configured for IPv4.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## ip arp

To configure a static Address Resolution Protocol (ARP) entry, use the **ip arp** command. To remove a static ARP entry, use the **no** form of this command.

**ip arp** *ip-address mac-address*

**no ip arp** *ip-address*

<b>Syntax Description</b>	<i>ip-address</i>	IPv4 address, in <i>A.B.C.D</i> format.
	<i>mac-address</i>	MAC address in one of the following formats: <ul style="list-style-type: none"> <li>E.E.E</li> <li>EE-EE-EE-EE-EE-EE</li> <li>EE:EE:EE:EE:EE:EE</li> <li>EEEE.EEEE.EEEE</li> </ul>

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	<b>Release</b>	<b>Modification</b>
	5.0(3)N1(1)	This command was introduced.

<b>Usage Guidelines</b>	Use this command on Layer 3 interfaces and Layer 3 subinterfaces.
-------------------------	---

**Examples** This example shows how to configure a static ARP entry on interface Ethernet 1/2:

```
switch(config)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# ip arp 192.0.2.1 0150.5a03.efab
switch(config-if)#
```

This example shows how to configure a static ARP entry on a subinterface:

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# interface ethernet 1/1.1
switch(config-subif)# ip arp 192.0.2.1 0150.5a03.efab
switch(config-subif)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show ip arp</b>	Displays ARP entries.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## ip arp gratuitous

To enable gratuitous Address Resolution Protocol (ARP), use the **ip arp gratuitous** command. To disable gratuitous ARP, use the **no** form of this command.

**ip arp gratuitous {request | update}**

**no ip arp gratuitous {request | update}**

Syntax Description	request	Enables sending gratuitous ARP requests when a duplicate address is detected.
	update	Enables ARP cache updates for gratuitous ARP.

Command Default	Enabled
-----------------	---------

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Examples

This example shows how to disable gratuitous ARP request on interface Ethernet 2/1:

```
switch(config)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# ip arp gratuitous
switch(config-if)#
```

Related Commands	Command	Description
	ip arp	Configures a static ARP entry.
	show ip arp	Displays ARP configuration information.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

# ip arp timeout

To configure an Address Resolution Protocol (ARP) timeout, use the **ip arp timeout** command. To revert to the default value, use the **no** form of this command.

**ip arp timeout** *timeout-value*

**no ip arp timeout**

Syntax Description	<i>timeout-value</i>	Time (in seconds) that an entry remains in the ARP cache. Valid values are from 60 to 28800, and the default is 1500.
--------------------	----------------------	---

Command Default	1500 seconds
-----------------	--------------

Command Modes	Global configuration mode
---------------	---------------------------

Command History	Release	Modification
	5.0(2)N1(1)	This command was introduced.

**Examples** This example shows how to configure the ARP timeout value to 120 seconds:

```
switch(config)# ip arp timeout 120
switch(config)#
```

This example shows how to revert to the default ARP timeout value of 1500 seconds:

```
switch(config)# no ip arp timeout
switch(config)#
```

Related Commands	Command	Description
	<b>show running-config arp all</b>	Displays the ARP configuration, including the default configurations.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## ip directed-broadcast

To enable the translation of a directed broadcast to physical broadcasts, use the **ip directed-broadcast** command. To disable this function, use the **no** form of this command.

**ip directed-broadcast**

**no ip directed-broadcast**

### Syntax Description

This command has no arguments or keywords.

### Command Default

Disabled; all IP directed broadcasts are dropped.

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Usage Guidelines

An IP directed broadcast is an IP packet whose destination address is a valid broadcast address for some IP subnet but which originates from a node that is not itself part of that destination subnet.

A device that is not directly connected to its destination subnet forwards an IP directed broadcast in the same way it would forward unicast IP packets destined to a host on that subnet. When a directed broadcast packet reaches a device that is directly connected to its destination subnet, that packet is broadcast on the destination subnet. The destination address in the IP header of the packet is rewritten to the configured IP broadcast address for the subnet, and the packet is sent as a link-layer broadcast.

If directed broadcast is enabled for an interface, incoming IP packets whose addresses identify them as directed broadcasts intended for the subnet to which that interface is attached are broadcast on that subnet.

If the **no ip directed-broadcast** command has been configured for an interface, directed broadcasts destined for the subnet to which that interface is attached are dropped, rather than being broadcast.



#### Note

Because directed broadcasts, and particularly Internet Control Message Protocol (ICMP) directed broadcasts, have been abused by malicious persons, we recommend that you disable the **ip directed-broadcast** command on any interface where directed broadcasts are not needed. We also recommend that you use access lists to limit the number of broadcast packets.

### Examples

This example shows how to enable forwarding of IP directed broadcasts on Ethernet interface 2/1:

```
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip directed-broadcast
switch(config-if)#
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Related Commands**

Command	Description
show ip interface	Displays IP information for an interface.



[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

## interface ethernet (Layer 3)

To configure a Layer 3 Ethernet IEEE 802.3 routed interface, use the **interface ethernet** command.

**interface ethernet** [*chassis\_ID*] *slot/port* [*.subintf-port-no*]

Syntax Description	<i>chassis_ID</i>	(Optional) Specifies the Fabric Extender chassis ID. The chassis ID is from 100 to 199.  <b>Note</b> This argument is not optional when addressing the host interfaces of a Cisco Nexus 2000 Series Fabric Extender.
	<i>slot</i>	Slot from 1 to 3. The following list defines the slots available: <ul style="list-style-type: none"><li>Slot 1 includes all the fixed ports. A Fabric Extender only has one slot.</li><li>Slot 2 includes the ports on the upper expansion module (if populated).</li><li>Slot 3 includes the ports on the lower expansion module (if populated).</li></ul>
	<i>port</i>	Port number within a particular slot. The port number is from 1 to 128.
	.	(Optional) Specifies the subinterface separator.
	<i>subintf-port-no</i>	(Optional) Port number for the subinterface. The range is from 1 to 48.

Command Default	None
-----------------	------

Command Modes	Global configuration mode Interface configuration mode
---------------	---

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	<p>You must use the <b>no switchport</b> command in the interface configuration mode to configure the interface as a Layer 3 routed interface. When you configure the interface as a Layer 3 interface, all Layer 2 specific configurations on this interface are deleted.</p> <p>Use the <b>switchport</b> command to convert a Layer 3 interface into a Layer 2 interface. When you configure the interface as a Layer 2 interface, all Layer 3 specific configurations on this interface are deleted.</p>
------------------	--

Examples	<p>This example shows how to enter configuration mode for a Layer 3 Ethernet interface 1/5:</p> <pre>switch(config)# interface ethernet 1/5 switch(config-if)# no switchport switch(config-if)# ip address 10.1.1.1/24 switch(config-if)#</pre>
----------	---

This example shows how to enter configuration mode for a host interface on a Fabric Extender:

```
switch(config)# interface ethernet 101/1/1
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
switch(config-if)# no switchport
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)#
```

This example shows how to configure a Layer 3 subinterface for Ethernet interface 1/5 in the global configuration mode:

```
switch(config)# interface ethernet 1/5.2
switch(config-if)# no switchport
switch(config-subif)# ip address 10.1.1.1/24
switch(config-subif)#
```

This example shows how to configure a Layer 3 subinterface in interface configuration mode:

```
switch(config)# interface ethernet 1/5
switch(config-if)# interface ethernet 1/5.1
switch(config-if)# no switchport
switch(config-subif)# ip address 10.1.1.1/24
switch(config-subif)#
```

This example shows how to convert a Layer 3 interface to a Layer 2 interface:

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# switchport
switch(config-if)#
```

#### Related Commands

Command	Description
<b>bandwidth</b>	Sets the bandwidth parameters for an interface.
<b>delay</b>	Configures the interface throughput delay value.
<b>encapsulation</b>	Sets the encapsulation type for an interface.
<b>ip address</b>	Sets a primary or secondary IP address for an interface.
<b>inherit</b>	Assigns a port profile to an interface.
<b>interface vethernet</b>	Configures a virtual Ethernet interface.
<b>no switchport</b>	Configures an interface as a Layer 3 interface.
<b>service-policy</b>	Configures a service policy for an interface.
<b>show fex</b>	Displays all configured Fabric Extender chassis connected to the switch.
<b>show interface ethernet</b>	Displays various parameters of an Ethernet IEEE 802.3 interface.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## ip local-proxy-arp

To enable the local proxy Address Resolution Protocol (ARP) feature, use the **ip local-proxy-arp** command. To disable this feature, use the **no** form of this command.

**ip local-proxy-arp**

**no ip local-proxy-arp**

<b>Syntax Description</b>	This command has no arguments or keywords.
---------------------------	--

<b>Command Default</b>	Disabled
------------------------	----------

<b>Command Modes</b>	Interface configuration mode Subinterface configuration mode
----------------------	---

<b>Command History</b>	Release	Modification
	5.0(3)N1(1)	This command was introduced.

<b>Usage Guidelines</b>	Before the local proxy ARP feature can be used, you must enable the IP proxy ARP feature by using the <b>ip proxy-arp</b> command. The IP proxy ARP feature is disabled by default.
-------------------------	---



**Note**

This command is not applicable to Layer 3 loopback interfaces.
--

<b>Examples</b>	This example shows how to enable the local proxy ARP:
-----------------	---

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# ip arp local-proxy-arp
switch(config-if)#
```

<b>Related Commands</b>	Command	Description
	<b>copy running-config startup-config</b>	Saves the configuration to the startup configuration file.
	<b>ip proxy-arp</b>	Enables proxy ARP on an interface.
	<b>show ip arp</b>	Displays ARP configuration information.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

# interface loopback

To create a loopback interface and enter interface configuration mode, use the **interface loopback** command. To remove a loopback interface, use the **no** form of this command.

**interface loopback** *number*

**no interface loopback** *number*

<b>Syntax Description</b>	<i>number</i>	Interface number; valid values are from 0 to 1023.
---------------------------	---------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Global configuration mode
----------------------	---------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	5.0(3)N1(1)	This command was introduced.

<b>Usage Guidelines</b>	Use the <b>interface loopback</b> command to create or modify loopback interfaces.
	From the loopback interface configuration mode, the following parameters are available: <ul style="list-style-type: none"> <li>• <b>description</b>—Provides a description of the purpose of the interface.</li> <li>• <b>ip</b>—Configures IP features, such as the IP address for the interface, Address Resolution Protocol (ARP) attributes, load balancing, Unicast Reverse Path Forwarding (RPF) or IP Source Guard.</li> <li>• <b>logging</b>—Configure logging of events.</li> <li>• <b>shutdown</b>—Shut down traffic on the interface.</li> </ul>
	This command does not require a license.

<b>Examples</b>	<p>This example shows how to create a loopback interface:</p> <pre>switch(config)# <b>interface loopback</b> 50 switch(config-if)# <b>ip address</b> 10.1.1.1/24 switch(config-if)#</pre>
-----------------	---

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show interface loopback</b>	Displays information about the traffic on the specified loopback interface.

***Send comments to nexus5k-docfeedback@cisco.com***

## interface port-channel

To create an EtherChannel interface and enter interface configuration mode, use the **interface port-channel** command. To remove an EtherChannel interface, use the **no** form of this command.

**interface port-channel** *channel-number* [*.subintf-channel-no*]

**no interface port-channel** *channel-number* [*.subintf-channel-no*]

Syntax Description	<i>channel-number</i>	Channel number that is assigned to this EtherChannel logical interface. The range is from 1 to 4096.
	.	(Optional) Specifies the subinterface separator. <b>Note</b> Applies to Layer 3 interfaces.
	<i>subintf-channel-no</i>	(Optional) Port number of the EtherChannel subinterface. The range is from 1 to 4093. <b>Note</b> Applies to Layer 3 interfaces.

Command Default	None
-----------------	------

Command Modes	Global configuration mode Interface configuration mode
---------------	---

Command History	<b>Release</b>	<b>Modification</b>
	4.0(0)N1(1a)	This command was introduced.
	5.0(3)N1(1)	Support for Layer 3 interfaces and subinterfaces was added.

Usage Guidelines	A port can belong to only one channel group.
	When you use the <b>interface port-channel</b> command for Layer 2 interfaces, follow these guidelines:
	<ul style="list-style-type: none"><li>• If you are using CDP, you must configure it only on the physical interface and not on the EtherChannel interface.</li><li>• If you do not assign a static MAC address on the EtherChannel interface, a MAC address is automatically assigned. If you assign a static MAC address and then later remove it, the MAC address is automatically assigned.</li><li>• The MAC address of the EtherChannel is the address of the first operational port added to the channel group. If this first-added port is removed from the channel, the MAC address comes from the next operational port added, if there is one.</li></ul>
You must use the <b>no switchport</b> command in the interface configuration mode to configure the EtherChannel interface as a Layer 3 interface. When you configure the interface as a Layer 3 interface, all Layer 2 specific configurations on this interface are deleted.	

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

Use the **switchport** command to convert a Layer 3 EtherChannel interface into a Layer 2 interface. When you configure the interface as a Layer 2 interface, all Layer 3 specific configurations on this interface are deleted.

You can configure one or more subinterfaces on a port channel made from routed interfaces.

### Examples

This example shows how to create an EtherChannel group interface with channel-group number 50:

```
switch(config)# interface port-channel 50
switch(config-if)#
```

This example shows how to create a Layer 3 EtherChannel group interface with channel-group number 10:

```
switch(config)# interface port-channel 10
switch(config-if)# no switchport
switch(config-if)# ip address 192.0.2.1/24
switch(config-if)#
```

This example shows how to configure a Layer 3 EtherChannel subinterface with channel-group number 1 in interface configuration mode:

```
switch(config)# interface port-channel 10
switch(config-if)# no switchport
switch(config-if)# interface port-channel 10.1
switch(config-subif)# ip address 192.0.2.2/24
switch(config-subif)#
```

This example shows how to configure a Layer 3 EtherChannel subinterface with channel-group number 20.1 in global configuration mode:

```
switch(config)# interface port-channel 20.1
switch(config-subif)# ip address 192.0.2.3/24
switch(config-subif)#
```

### Related Commands

Command	Description
<b>encapsulation</b>	(Layer 3 interfaces) Sets the encapsulation type for an interface.
<b>ip address</b>	(Layer 3 interfaces) Sets a primary or secondary IP address for an interface.
<b>no switchport</b>	(Layer 3 interfaces) Configures an interface as a Layer 3 interface.
<b>show interface</b>	Displays configuration information about interfaces.
<b>show lacp</b>	Displays LACP information.
<b>show port-channel summary</b>	Displays information on the EtherChannels.
<b>vtp (interface)</b>	Enables VLAN Trunking Protocol (VTP) on an interface.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## ip port-unreachable

To enable the generation of Internet Control Message Protocol (ICMP) port unreachable messages, use the **ip port-unreachable** command. To disable this function, use the **no** form of this command.

**ip port-unreachable**

**no ip port-unreachable**

<b>Syntax Description</b>	This command has no arguments or keywords.
---------------------------	--

<b>Command Default</b>	Enabled
------------------------	---------

Command Modes	Release	Modification
	5.0(3)N1(1)	This command was introduced.

<b>Examples</b>	This example shows how to enable the generation of ICMP port unreachable messages, as appropriate, on an interface:
-----------------	---

```
switch# configure terminal
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip port-unreachable
```

Related Commands	Command	Description
	<b>ip unreachable</b>	Sends ICMP unreachable messages.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## ip proxy-arp

To enable proxy Address Resolution Protocol (ARP) on an interface, use the **ip proxy-arp** command. To disable proxy ARP on the interface, use the **no** form of this command.

**ip proxy-arp**

**no ip proxy-arp**

### Syntax Description

This command has no arguments or keywords.

### Command Default

Disabled

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Examples

This example shows how to enable proxy ARP:

```
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip proxy-arp
switch(config-if)#
```

### Related Commands

Command	Description
<b>copy running-config startup-config</b>	Saves the configuration to the startup configuration file.
<b>show ip arp</b>	Displays ARP configuration information.



*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## ip tcp path-mtu-discovery

To enable path maximum transmission unit (MTU) discovery on an IPv4 interface, use the **ip tcp path-mtu discovery** command. To disable this feature, use the **no** form of this command.

**ip tcp path-mtu discovery**

**no ip tcp path-mtu discovery**

<b>Syntax Description</b>	This command has no arguments or keywords.
---------------------------	--

<b>Command Default</b>	Disabled
------------------------	----------

<b>Command Modes</b>	
----------------------	--

Release	Modification
5.0(3)N1(1)	This command was introduced.

<b>Examples</b>	
-----------------	--

This example shows how to enable path MTU discovery for IPv4:

```
switch# configure terminal
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip tcp path-mtu-discovery
switch(config-if)#
```

<b>Related Commands</b>	
-------------------------	--

Command	Description
show ip arp	Displays ARP configuration information.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

# ip tcp synwait-time

To set a period of time the Cisco NX-OS software waits while attempting to establish a TCP connection before it times out, use the **ip tcp synwait-time** command. To restore the default time, use the **no** form of this command.

**ip tcp synwait-time** *seconds*

**no ip tcp synwait-time**

<b>Syntax Description</b>	<i>seconds</i>	Time, in seconds, the software waits while attempting to establish a TCP connection. It can be an integer from 5 to 300 seconds.
---------------------------	----------------	--

<b>Command Default</b>	5 seconds
------------------------	-----------

<b>Command Modes</b>	Global configuration mode
----------------------	---------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	5.1(3)N1(1)	This command was introduced.

<b>Usage Guidelines</b>	This command does not require a license.
-------------------------	--

<b>Examples</b>	This example shows how to configure the switch software to continue attempting to establish a TCP connection for 10 seconds:
-----------------	--

```
switch# configure terminal
switch(config)# ip tcp synwait-time 10
Setting syn time to 10 seconds
switch(config)#
```

This example shows how to disable TCP synchronization on interfaces:

```
switch# configure terminal
switch(config)# no ip tcp synwait-time
switch(config)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show running-config</b>	Displays the running system configuration information.

***Send comments to nexus5k-docfeedback@cisco.com***

## ip unreachable

To enable the generation of Internet Control Message Protocol (ICMP) unreachable messages, use the **ip unreachable** command. To disable this function, use the **no** form of this command.

**ip unreachable**

**no ip unreachable**

### Syntax Description

This command has no arguments or keywords.

### Command Default

Enabled

### Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

### Examples

This example shows how to enable the generation of ICMP unreachable messages on an interface:

```
switch# configure terminal
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip unreachable
```

### Related Commands

Command	Description
<b>ip port-unreachable</b>	Sends ICMP port unreachable messages.

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

## ipv6 nd

To configure IPv6 neighbor discovery (ND), use the **ipv6 nd** command. To remove the IPv6 ND configuration, use the **no** form of this command.

```
ipv6 nd {hop-limit hop-limit | managed-config-flag | mtu | ns-interval ns-interval |
other-config-flag | prefix {A:B::C:D/LEN | default {0-4294967295 | infinite {infinite
[no-autoconfig | no-onlink | off-link]}} | no-advertise}} | ra-interval ra-interval | ra-lifetime
ra-lifetime | reachable-time reachable-time | redirects | retrans-timer retrans-timer |
suppress-ra [mtu]}
```

```
no ipv6 nd {hop-limit hop-limit | managed-config-flag | mtu mtu-size | ns-interval ns-interval |
other-config-flag | prefix {A:B::C:D/LEN | default {0-4294967295 | infinite {infinite
[no-autoconfig | no-onlink | off-link]}} | no-advertise}} | ra-interval ra-interval | ra-lifetime
ra-lifetime | reachable-time reachable-time | redirects | retrans-timer retrans-timer |
suppress-ra [mtu]}
```

### Syntax Description

<b>hop-limit</b>	Specifies the hop limit in the IPv6 header.
<i>hop-limit</i>	Hop limit. The range is from 0 to 255.
<b>managed-config-flag</b>	Informs hosts to use stateful address autoconfiguration to obtain address information.
<b>mtu</b>	Specifies the MTU size.
<i>mtu-size</i>	MTU size. The range is from 1280 to 65535.
<b>ns-interval</b>	Specifies the retransmission interval between sending the neighbor-solicitation messages.
<i>ns-interval</i>	Interval in milliseconds. The range is from 1000 to 3600000.
<b>other-config-flag</b>	Informs hosts to use stateful autoconfiguration to obtain non-address related information.
<b>prefix</b>	Specifies the IPv6 prefix to advertise in the router-advertisement message.
<b>A:B::C:D/LEN</b>	Specifies the IPv6 address prefix.
<b>default</b>	Specifies the prefix default parameters.
<b>0-4294967295</b>	Valid value for the life time.
<b>infinite</b>	Specifies the indefinite lifetime.
<b>no-autoconfig</b>	(Optional) Specifies no to use the prefix for autoconfiguration.
<b>no-onlink</b>	(Optional) Specifies not use the prefix for the onlink determination.
<b>off-link</b>	Indicates the prefix is offlink.
<b>no-advertise</b>	Specifies not to advertise the prefix.
<b>ra-interval</b>	Specifies the interval between sending the router-advertisement message.
<i>ra-interval</i>	Router-advertisement message interval. The range is from 4 to 1800.
<b>ra-lifetime</b>	Specifies the router lifetime of a default router.
<i>ra-lifetime</i>	Router-advertisement message lifetime. The range is from 4 to 1800. The value for the default router cannot be 0.
<b>reachable-time</b>	Specifies the advertised time when a node considers a neighbor is up after receiving a reachability confirmation.
<i>reachable-time</i>	Reachable time. The range is from 0 to 3600000.

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

<b>redirects</b>	Enables sending ICMPv6 Redirect messages.
<b>retrans-timer</b>	Specifies the advertised time between NS messages.
<i>retrans-timer</i>	Time between messages. The range is from 0 to 4294967295.
<b>suppress-ra</b>	Disables sending router-advertisement messages.

### Defaults

hop-limit-64  
mtu-1500  
ns-interval-1000  
ra-interval-600  
reachable-time-0  
retrans-timer-0

### Command Modes

Interface configuration mode

### Command History

Release	Modification
5.2(1)U3(1)	This command was introduced.

### Usage Guidelines

This command does not require a license.

### Examples

This example shows how to configure IPv6 neighbor discovery:

```
switch# configure terminal  
switch(config)# interface ethernet 1/5  
switch(config-if)# ipv6 nd  
switch(config-if)# ipv6 nd reachable time 30
```

This example shows how to remove IPv6 neighbor discovery:

```
switch(config-if)# no ipv6 nd reachable time 30  
switch(config-if)#
```

### Related Commands

Command	Description
<b>show ipv6 nd interface</b>	Displays neighbor discovery interface information.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***