

Send comments to nexus5k-docfeedback@cisco.com



Show Commands

This chapter describes the Cisco NX-OS Layer 3 interfaces **show** commands.

Send comments to nexus5k-docfeedback@cisco.com

show interface brief

To display a brief summary of the interface configuration information, use the **show interface brief** command.

show interface brief

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	4.0(0)N1(1a)	This command was introduced.
	5.0(3)N1(1)	Support for Layer 3 interfaces was added.
	5.1(3)N1(1)	Support to display FabricPath ports was added.

Examples This example shows how to display the summary configuration information of the specified interface:

```
switch# show interface brief
```

Ethernet Interface	VLAN	Type	Mode	Status	Reason	Speed	Port Ch #
Eth1/1	1	eth	trunk	up	none	10G (D)	4000
Eth1/2	1	eth	trunk	up	none	10G (D)	4000
Eth1/3	1	eth	trunk	up	none	10G (D)	4000
Eth1/4	1	eth	trunk	up	none	10G (D)	4000
Eth1/5	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/6	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/7	1	eth	trunk	up	none	10G (D)	10
Eth1/8	1	eth	trunk	up	none	10G (D)	10
Eth1/9	1	eth	trunk	up	none	10G (D)	10
Eth1/10	1	eth	trunk	up	none	10G (D)	10
Eth1/11	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/12	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/13	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/14	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/15	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/16	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/17	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/18	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/19	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/20	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/21	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/22	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/23	1	eth	access	down	Link not connected	10G (D)	--
Eth1/24	1	eth	access	down	Link not connected	10G (D)	--

Send comments to nexus5k-docfeedback@cisco.com

```

Eth1/25      1      eth  access down    SFP not inserted      10G(D) --
Eth1/26      1      eth  access down    SFP not inserted      10G(D) --
Eth1/27      1      eth  access down    SFP not inserted      10G(D) --
Eth1/28      1      eth  access down    SFP not inserted      10G(D) --
Eth1/29      1      eth  access down    SFP not inserted      10G(D) --
Eth1/30      1      eth  access down    SFP not inserted      10G(D) --
Eth1/31      1      eth  access down    SFP not inserted      10G(D) --
Eth1/32      1      eth  access down    SFP not inserted      10G(D) --
Eth1/33      1      eth  access down    SFP not inserted      10G(D) --
Eth1/34      1      eth  access down    SFP not inserted      10G(D) --
Eth1/35      1      eth  access down    SFP not inserted      10G(D) --
Eth1/36      1      eth  access down    SFP not inserted      10G(D) --
Eth1/37      1      eth  access down    SFP not inserted      10G(D) --
Eth1/38      1      eth  access down    SFP not inserted      10G(D) --
Eth1/39      1      eth  access down    SFP not inserted      10G(D) --
Eth1/40      1      eth  trunk  up      none                   10G(D) --
Eth2/1       1      eth  access down    SFP not inserted      10G(D) --
Eth2/2       1      eth  access up      none                   10G(D) --
Eth2/3       1      eth  access down    SFP not inserted      10G(D) --
Eth2/4       1      eth  access up      none                   10G(D) --
Eth2/5       1      eth  access up      none                   10G(D) --
Eth2/6       1      eth  access down    SFP not inserted      10G(D) --

```

```

-----
Port-channel VLAN  Type Mode   Status Reason                      Speed  Protocol
Interface
-----
Po10          1      eth  trunk  up      none                      a-10G(D) lACP
Po4000        1      eth  trunk  up      none                      a-10G(D) lACP

```

```

-----
Port    VRF          Status IP Address                      Speed  MTU
-----
mgmt0   --           up      192.168.10.37                  100    1500

```

```

-----
Interface Secondary VLAN(Type)                      Status Reason
-----
Vlan1     --                      down  Administratively down

```

switch#

This example shows how to display the summary configuration information of interfaces, including routed interfaces:

switch# **show interface brief**

```

-----
Ethernet      VLAN  Type Mode   Status Reason                      Speed  Port
Interface                                           Ch  #
-----
Eth1/1        1      eth  access down    Link not connected      10G(D) --
Eth1/2        1      eth  trunk  up      none                    10G(D) --
Eth1/3        1      eth  access down    SFP not inserted        10G(D) --
Eth1/4        1      eth  access down    SFP not inserted        10G(D) --
Eth1/5        --      eth  routed up      none                    10G(D) --
Eth1/5.2      --      eth  routed down    Configuration Incomplete 10G(D) --
Eth1/6        1      eth  access up      none                    10G(D) --
Eth1/7        1      eth  access up      none                    10G(D) --
Eth1/8        1      eth  trunk  up      none                    10G(D) 100
Eth1/9        1      eth  access up      none                    10G(D) --
Eth1/10       1      eth  access down    Link not connected      10G(D) --
Eth1/11       1      eth  access down    SFP not inserted        10G(D) --
Eth1/12       1      eth  access down    SFP not inserted        10G(D) --

```

Send comments to nexus5k-docfeedback@cisco.com

Eth1/13	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/14	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/15	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/16	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/17	1	eth	access	up	none	10G(D)	--
Eth1/18	1	eth	access	up	none	10G(D)	--
Eth1/19	1	eth	fabric	up	none	10G(D)	--
Eth1/20	1	eth	access	down	Link not connected	10G(D)	--
Eth1/21	1	eth	access	up	none	10G(D)	--
Eth1/22	1	eth	access	down	Link not connected	10G(D)	--
Eth1/23	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/24	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/25	1	eth	access	down	Link not connected	10G(D)	--
Eth1/26	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/27	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/28	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/29	1	eth	access	down	Link not connected	10G(D)	--
Eth1/30	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/31	1	eth	access	down	SFP not inserted	10G(D)	--
Eth1/32	1	eth	access	up	none	10G(D)	--

Port-channel Interface	VLAN	Type	Mode	Status	Reason	Speed	Protocol
------------------------	------	------	------	--------	--------	-------	----------

Po100	1	eth	trunk	up	none	a-10G(D)	none
-------	---	-----	-------	----	------	----------	------

Port	VRF	Status	IP Address	Speed	MTU
------	-----	--------	------------	-------	-----

mgmt0	--	up	172.29.231.33	1000	1500
-------	----	----	---------------	------	------

Interface	Secondary VLAN	Type	Status	Reason
-----------	----------------	------	--------	--------

Vlan1	--		up	--
Vlan100	--		up	--

Ethernet Interface	VLAN	Type	Mode	Status	Reason	Speed	Port Ch #
--------------------	------	------	------	--------	--------	-------	-----------

Eth100/1/1	1	eth	access	up	none	10G(D)	--
Eth100/1/2	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/3	1	eth	access	up	none	10G(D)	--
Eth100/1/4	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/5	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/6	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/7	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/8	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/9	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/10	1	eth	access	up	none	10G(D)	--
Eth100/1/11	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/12	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/13	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/14	1	eth	access	down	Link not connected	auto(D)	--
Eth100/1/15	1	eth	access	up	none	10G(D)	--
Eth100/1/16	1	eth	access	down	Link not connected	auto(D)	--

Interface	Status	Description
-----------	--------	-------------

Lo10	up	--
switch#		

Send comments to nexus5k-docfeedback@cisco.com

Note the following in the above display:

- Ethernet 1/5 is a Layer 3-ready interface. The following fields in the display help identify an interface as a configured Layer 3 interface:
 - Mode—routed
 - Status—up
 - Reason—none
- Ethernet 1/5.2 is a Layer 3 subinterface; however, the interface is not ready for Layer 3 configuration (Status—down).
- Interface Lo10 is a Layer 3 loopback interface.

This example shows how to display a brief summary of interfaces configured as FabricPath interfaces on a switch that runs Cisco NX-OS Release 5.1(3)N1(1):

```
switch# show interface brief
```

Ethernet Interface	VLAN	Type	Mode	Status	Reason	Speed	Port Ch#
Eth1/1	1	eth	access	down	SFP not inserted	1000 (D)	--
Eth1/2	--	eth	routed	down	SFP not inserted	1000 (D)	--
Eth1/3	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/4	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/5	1	eth	f-path	down	SFP not inserted	10G (D)	--
Eth1/6	1	eth	access	down	Link not connected	10G (D)	--
Eth1/7	1	eth	fabric	down	Link not connected	10G (D)	--
Eth1/8	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/9	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/10	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/11	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/12	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/13	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/14	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/15	1	eth	pvlan	up	none	1000 (D)	--
Eth1/16	1	eth	access	down	SFP not inserted	10G (D)	--
Eth1/17	1	eth	access	down	SFP not inserted	10G (D)	--

In the above display, Ethernet 1/5 has the mode shown as “f-path” indicating that it has been configured as a FabricPath port.

Related Commands

Command	Description
interface ethernet	Configures an Ethernet IEEE 802.3 interface.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show interface ethernet

To display information about the interface configuration, use the **show interface ethernet** command.

show interface ethernet *slot/port* [*.subintf-port-no*] [**brief** | **counters** | **description** | **status** | **switchport**]

Syntax Description

<i>slot/port</i>	Ethernet interface slot number and port number. The <i>slot</i> number is from 1 to 255, and the <i>port</i> number is from 1 to 128.
.	(Optional) Specifies the subinterface separator.
	Note This keyword applies to Layer 3 interfaces.
<i>subintf-port-no</i>	(Optional) Port number for the subinterface. The range is from 1 to 48.
	Note This argument applies to Layer 3 interfaces.
brief	(Optional) Displays brief information about the interfaces.
counters	(Optional) Displays information about the counters configured on an interface.
description	(Optional) Displays the description of an interface configuration.
status	(Optional) Displays the operational state of the interface.
switchport	(Optional) Displays the switchport information of an interface.

Command Default

Displays all information for the interface.

Command Modes

EXEC mode

Command History

Release	Modification
4.0(0)N1(1a)	This command was introduced.
5.0(3)N1(1)	Support for Layer 3 interfaces and subinterfaces was added.
	The switchport keyword was added.

Examples

This example shows how to display the detailed configuration of the specified interface:

```
switch# show interface ethernet 1/1
Ethernet1/1 is up
  Hardware: 1000/10000 Ethernet, address: 000d.ece7.df48 (bia 000d.ece7.df48)
  MTU 1500 bytes, BW 10000000 Kbit, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA
  Port mode is fex-fabric
  full-duplex, 10 Gb/s, media type is 1/10g
  Beacon is turned off
  Input flow-control is off, output flow-control is off
  Rate mode is dedicated
  Switchport monitor is off
  Last link flapped 09:03:57
```

Send comments to nexus5k-docfeedback@cisco.com

```

Last clearing of "show interface" counters never
30 seconds input rate 2376 bits/sec, 0 packets/sec
30 seconds output rate 1584 bits/sec, 0 packets/sec
Load-Interval #2: 5 minute (300 seconds)
  input rate 1.58 Kbps, 0 pps; output rate 792 bps, 0 pps
RX
  0 unicast packets  10440 multicast packets  0 broadcast packets
  10440 input packets  11108120 bytes
  0 jumbo packets  0 storm suppression packets
  0 runs  0 giants  0 CRC  0 no buffer
  0 input error  0 short frame  0 overrun  0 underrun  0 ignored
  0 watchdog  0 bad etype drop  0 bad proto drop  0 if down drop
  0 input with dribble  0 input discard
  0 Rx pause
TX
  0 unicast packets  20241 multicast packets  105 broadcast packets
  20346 output packets  7633280 bytes
  0 jumbo packets
  0 output errors  0 collision  0 deferred  0 late collision
  0 lost carrier  0 no carrier  0 babble
  0 Tx pause
1 interface resets

```

switch#

This example shows how to display the counters configured on a specified interface:

switch# **show interface ethernet 1/1 counters**

```

-----
Port                InOctets      InUcastPkts  InMcastPkts  InBcastPkts
-----
Eth1/1              17193136      0            16159         0
-----
Port                OutOctets      OutUcastPkts  OutMcastPkts  OutBcastPkts
-----
Eth1/1              11576758      0            28326         106
-----
switch#

```

This example shows how to display the detailed configuration information of a specified subinterface:

```

switch# show interface ethernet 1/5.2
Ethernet1/5.2 is up
  Hardware: 1000/10000 Ethernet, address: 0005.73a6.1dbc (bia 0005.73a6.1d6c)
  Description: Eth 1/5.2 subinterfaces
  Internet Address is 192.0.0.3/24
  MTU 1500 bytes, BW 1500 Kbit, DLY 2000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation 802.1Q Virtual LAN, Vlan ID 100
  EtherType is 0x8100

```

switch#

This example shows how to display the brief configuration information of a specified subinterface:

switch# **show interface ethernet 1/5.2 brief**

```

-----
Ethernet  VLAN   Type Mode   Status Reason          Speed   Port
Interface                                     Ch #
-----
Eth1/5.2    100   eth  routed up    none          10G(D)  --
switch#

```

Send comments to nexus5k-docfeedback@cisco.com

This example shows how to display the purpose of a specified subinterface:

```
switch# show interface ethernet 1/5.2 description
```

```
-----
Port          Type    Speed  Description
-----
Eth1/5.2      eth     10G    Eth 1/5.2 subinterfaces
switch#
```

This example shows how to display the switchport information for a specific interface:

```
switch# show interface ethernet 1/2 switchport
```

```
Name: Ethernet1/2
  Switchport: Enabled
  Switchport Monitor: Not enabled
  Operational Mode: trunk
  Access Mode VLAN: 1 (default)
  Trunking Native Mode VLAN: 1 (default)
  Trunking VLANs Enabled: 1,300-800
  Pruning VLANs Enabled: 2-1001
  Administrative private-vlan primary host-association: none
  Administrative private-vlan secondary host-association: none
  Administrative private-vlan primary mapping: none
  Administrative private-vlan secondary mapping: none
  Administrative private-vlan trunk native VLAN: none
  Administrative private-vlan trunk encapsulation: dot1q
  Administrative private-vlan trunk normal VLANs: none
  Administrative private-vlan trunk private VLANs: none
  Operational private-vlan: none
  Unknown unicast blocked: disabled
  Unknown multicast blocked: disabled
  Monitor destination rate-limit: 1G
```

```
switch#
```

In the above display, the Monitor destination rate-limit field displays the rate limit configured on a switchport interface on a Cisco Nexus 5010 Series switch.



Note

You can configure the monitor destination rate-limit only on a Cisco Nexus 5010 Series switch or Cisco Nexus 5020 Series switch.

Related Commands

Command	Description
interface ethernet	Configures an Ethernet IEEE 802.3 interface.
interface ethernet (Layer 3)	Configures a Layer 3 Ethernet IEEE 802.3 interface.
switchport mode vntag	Configures an Ethernet interface as a VNTag port.
switchport monitor rate-limit	Configures the rate limit for traffic on an interface.

Send comments to nexus5k-docfeedback@cisco.com

show interface loopback

To display information about the loopback interface, use the **show interface loopback** command.

show interface loopback *lo-number* [**brief** | **description**]

Syntax Description	<i>lo-number</i>	Loopback interface number. The range is from 0 to 1023.
	brief	(Optional) Displays a brief summary of the loopback interface information.
	description	(Optional) Displays the description provided for the loopback interface.

Command Default	None
-----------------	------

Command Modes	EXEC mode
---------------	-----------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples This example shows how to display the configuration information for a specific loopback interface:

```
switch# show interface loopback 10
loopback10 is up
  Hardware: Loopback
  MTU 1500 bytes, BW 8000000 Kbit, DLY 5000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation LOOPBACK
    0 packets input 0 bytes
    0 multicast frames 0 compressed
    0 input errors 0 frame 0 overrun 0 fifo
    0 packets output 0 bytes 0 underruns
    0 output errors 0 collisions 0 fifo

switch#
```

Table 1 describes the significant fields shown in the display.

Table 1 *show interface loopback* Field Description

Field	Description
Loopback is ...	Indicates whether the interface hardware is currently active (whether carrier detect is present), is currently inactive (down), or has been taken down by an administrator (administratively down).
Hardware	Hardware is Loopback.
MTU	Maximum transmission unit (MTU) of the interface.
BW	Bandwidth (BW) of the interface in kilobits per second.
DLY	Delay (DLY) of the interface in microseconds.

Send comments to nexus5k-docfeedback@cisco.com

Table 1 *show interface loopback Field Description (continued)*

Field	Description
reliability	Reliability of the interface as a fraction of 255 (255/255 is 100 percent reliability), calculated as an exponential average over 5 minutes.
txload	Load on the interface for transmitting packets as a fraction of 255 (255/255 is completely saturated), calculated as an exponential average over 5 minutes.
rxload	Load on the interface for receiving packets as a fraction of 255 (255/255 is completely saturated), calculated as an exponential average over 5 minutes.
Encapsulation	Encapsulation method assigned to interface.
LOOPBACK	Indicates whether loopback is set.
packets input	Total number of error-free packets received by the system.
bytes	Total number of bytes, including data and MAC encapsulation, in the error-free packets received by the system.
multicast frames	Total number of multicast frames enabled on the interface.
compressed	Total number of multicast frames compressed on the interface.
input errors	Sum of all errors that prevented the receipt of datagrams on the interface being examined. This may not balance with the sum of the enumerated output errors, because some datagrams may have more than one error and others may have errors that do not fall into any of the specifically tabulated categories.
frame	Number of packets received incorrectly having a CRC error and a noninteger number of octets. On a serial line, this is usually the result of noise or other transmission problems.
overrun	Number of times the serial receiver hardware was unable to hand received data to a hardware buffer because the input rate exceeded the receiver's ability to handle the data.
fifo	Number of First In, First Out (FIFO) errors in the receive direction.
packets output	Total number of messages transmitted by the system.
bytes	Total number of bytes, including data and MAC encapsulation, transmitted by the system.
underruns	Number of times that the far-end transmitter has been running faster than the near-end router's receiver can handle. This may never happen (be reported) on some interfaces.
output errors	Sum of all errors that prevented the final transmission of datagrams out of the interface being examined. Note that this may not balance with the sum of the enumerated output errors, as some datagrams may have more than one error, and others may have errors that do not fall into any of the specifically tabulated categories.
collisions	Loopback interface does not have collisions.
fifo	Number of First In, First Out (FIFO) errors in the transmit direction.

Send comments to nexus5k-docfeedback@cisco.com

This example shows how to display the brief information for a specific loopback interface:

```
switch# show interface loopback 10 brief
```

```
-----
Interface      Status      Description
-----
loopback10    up          --
switch#
```

Related Commands

Command	Description
interface loopback	Configures a loopback interface.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show interface port-channel

To display the information about an EtherChannel interface configuration, use the **show interface port-channel** command.

show interface port-channel *number* [*.subinterface-number*] [**brief** | **counters** | **description** | **status**]

Syntax Description		
	<i>number</i>	EtherChannel number. The range is from 1 to 4096.
	<i>.subinterface-number</i>	(Optional) Port-channel subinterface configuration. Use the EtherChannel number followed by a dot (.) indicator and the subinterface number. The format is: <i>portchannel-number.subinterface-number</i>
	counters	(Optional) Displays information about the counters configured on the EtherChannel interface.
	description	(Optional) Displays the description of the EtherChannel interface configuration.
	status	(Optional) Displays the operational state of the EtherChannel interface.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	4.0(0)N1(1a)	This command was introduced.
	5.0(3)N1(1)	Support for Layer 3 interfaces and subinterfaces was added.

Examples This example shows how to display the configuration information of a specified EtherChannel interface:

```
switch# show interface port-channel 21
port-channel21 is up
  Hardware: Port-Channel, address: 000d.ece7.df72 (bia 000d.ece7.df72)
  MTU 1500 bytes, BW 10000000 Kbit, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA
  Port mode is trunk
  full-duplex, 10 Gb/s
  Beacon is turned off
  Input flow-control is on, output flow-control is on
  Switchport monitor is off
  Members in this channel: Eth2/3
  Last clearing of "show interface" counters never
  30 seconds input rate 0 bits/sec, 0 packets/sec
  30 seconds output rate 352 bits/sec, 0 packets/sec
  Load-Interval #2: 5 minute (300 seconds)
    input rate 0 bps, 0 pps; output rate 368 bps, 0 pps
```

Send comments to nexus5k-docfeedback@cisco.com

```

RX
 0 unicast packets  0 multicast packets  0 broadcast packets
 0 input packets  0 bytes
 0 jumbo packets  0 storm suppression packets
 0 runts  0 giants  0 CRC  0 no buffer
 0 input error  0 short frame  0 overrun  0 underrun  0 ignored
 0 watchdog  0 bad etype drop  0 bad proto drop  0 if down drop
 0 input with dribble  0 input discard
 0 Rx pause
TX
 0 unicast packets  15813 multicast packets  9 broadcast packets
15822 output packets  1615917 bytes
 0 jumbo packets
 0 output errors  0 collision  0 deferred  0 late collision
 0 lost carrier  0 no carrier  0 babble
 0 Tx pause
1 interface resets

switch#

```

Related Commands

Command	Description
interface port-channel	Configures an EtherChannel interface.

Send comments to nexus5k-docfeedback@cisco.com

show ip arp

To display the Address Resolution Protocol (ARP) information, use the **show ip arp** command.

show ip arp [*ip-addr*] { **ethernet** *slot/port* | **loopback** *if_number* | **mgmt** *mif_number* | **port-channel** *number* } [**client**] [**static**] [**statistics**] [**vrf** *vrf-name*]

Syntax Description		
ip-addr	(Optional) IPv4 source address. The format is x.x.x.x.	
ethernet <i>slot/port</i>	(Optional) Specifies the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128.	
loopback <i>if_number</i>	(Optional) Specifies the loopback interface. The loopback interface number is from 0 to 1023.	
mgmt <i>mif_number</i>	(Optional) Specifies the management interface. The management interface number is from 0 to 1023.	
port-channel <i>number</i>	(Optional) Specifies the EtherChannel interface and EtherChannel number. The range is from 1 to 4096.	
client	(Optional) Displays the ARP client table	
static	(Optional) Displays static ARP entries.	
statistics	(Optional) Displays ARP statistics.	
vrf <i>vrf-name</i>	(Optional) Specifies the virtual router context (VRF) name. The name can be any case-sensitive, alphanumeric string up to 32 characters.	

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples

This example shows how to display the ARP information:

```
switch# show ip arp
```

```
Flags: D - Static Adjacencies attached to down interface
```

```
IP ARP Table for context default
```

```
Total number of entries: 1
```

```
Address      Age      MAC Address      Interface
2.2.2.100    -        000a.000a.000a   Ethernet1/2
switch#
```

Send comments to nexus5k-docfeedback@cisco.com

Related Commands

Command	Description
ip arp	Configures a static ARP entry.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show ip arp summary

To display ARP adjacency summary, use the **show ip arp summary** command.

show ip arp summary

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples	This example shows how to display ARP adjacency summary:
-----------------	--

```
switch# show ip arp summary
```

```
IP ARP Table - Adjacency Summary
```

```
Resolved      : 0
Incomplete    : 0
Unknown       : 0
Total         : 0
```

```
switch#
```

Related Commands	Command	Description
	ip arp timeout	Configures ARP.

Send comments to nexus5k-docfeedback@cisco.com

show ip client

To display information about the internal IP clients, use the **show ip client** command.

show ip client [*name*]

Syntax Description	<i>name</i> (Optional) Name of the client.	
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.
Examples	This example shows how to display the IP client information for the Address Resolution Protocol (ARP): <pre>switch(config)# show ip client arp</pre>	
Related Commands	Command	Description
	show ip process	Displays information about the IP process.

Send comments to nexus5k-docfeedback@cisco.com

show ip interface

To display IP information for an interface, use the **show ip interface** command.

show ip interface [*type number*] [**brief**] [**vrf** *vrf-name*]

Syntax Description	<i>type</i>	(Optional) Interface type. Use ? to see the options.
	<i>number</i>	(Optional) Interface number. Use ? to see the range.
	brief	(Optional) Displays a summary of IP information.
	vrf <i>vrf-name</i>	(Optional) Specifies the name of the virtual routing and forwarding (VRF) instance. The <i>vrf-name</i> argument can be specified as any case-sensitive, alphanumeric string up to 32 characters. The strings “default” and “all” are reserved VRF names.

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples This example shows how to display the IP information for Ethernet 1/5:

```
switch# show ip interface ethernet 1/5
IP Interface Status for VRF "default"(1)
Ethernet1/5, Interface status: protocol-down/link-down/admin-up, iod: 11,
  IP address: 192.0.0.1, IP subnet: 192.0.0.0/24
  IP broadcast address: 255.255.255.255
  IP multicast groups locally joined: none
  IP MTU: 1500 bytes (using link MTU)
  IP primary address route-preference: 0, tag: 0
  IP proxy ARP : disabled
  IP Local Proxy ARP : disabled
  IP multicast routing: disabled
  IP icmp redirects: enabled
  IP directed-broadcast: disabled
  IP icmp unreachable (except port): disabled
  IP icmp port-unreachable: enabled
  IP unicast reverse path forwarding: none
  IP load sharing: none
  IP interface statistics last reset: never
  IP interface software stats: (sent/received/forwarded/originated/consumed)
    Unicast packets   : 0/0/0/0/0
    Unicast bytes     : 0/0/0/0/0
    Multicast packets  : 0/0/0/0/0
    Multicast bytes    : 0/0/0/0/0
    Broadcast packets  : 0/0/0/0/0
    Broadcast bytes    : 0/0/0/0/0
```

Send comments to nexus5k-docfeedback@cisco.com

```
Labeled packets    : 0/0/0/0/0
Labeled bytes      : 0/0/0/0/0
switch#
```

Related Commands

Command	Description
ip address	Assigns a primary IP address for a network interface.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

show running-config arp

To display the Address Resolution Protocol (ARP) configuration in the running configuration, use the **show running-config arp** command.

show running-config arp [all]

Syntax Description	all (Optional) Displays configured and default information.	
Command Default	None	
Command Modes	Any command mode	
Command History	Release	Modification
	5.0(2)N1(1)	This command was introduced.

Examples

This example shows how to display the ARP configuration:

```
switch# show running-config arp

!Command: show running-config arp
!Time: Mon Aug 23 07:33:15 2010

version 5.0(2)N1(1)
ip arp timeout 2100
ip arp event-history errors size medium

interface Vlan10
  ip arp 192.0.11.37 00C0.4F00.0000

switch#
```

This example shows how to display the ARP configuration with the default information:

```
switch# show running-config arp all

!Command: show running-config arp all
!Time: Mon Aug 23 07:33:52 2010

version 5.0(2)N1(1)
ip arp timeout 1500
ip arp event-history cli size small
ip arp event-history snmp size small
ip arp event-history client-errors size small
ip arp event-history client-event size small
ip arp event-history lcache-errors size small
ip arp event-history lcache size small
ip arp event-history errors size small
ip arp event-history ha size small
ip arp event-history event size small
ip arp event-history packet size small
```

Send comments to nexus5k-docfeedback@cisco.com

```
interface Vlan10
  ip arp 192.0.11.37 00C0.4F00.0000
  ip arp gratuitous update
  ip arp gratuitous request

switch#
```

Related Commands

Command	Description
copy running-config startup-config	Copies the running configuration to the startup configuration file.
ip arp timeout	Configures an ARP timeout.
show startup-config arp	Displays the ARP startup configuration.

Send comments to nexus5k-docfeedback@cisco.com

show startup-config arp

To display the Address Resolution Protocol (ARP) configuration in the startup configuration, use the **show startup-config arp** command.

show startup-config arp [all]

Syntax Description	all	(Optional) Displays configured and default information.
--------------------	-----	---

Command Default	None
-----------------	------

Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	5.0(2)N1(1)	This command was introduced.

Examples	This example shows how to display the ARP startup configuration: <pre>switch# show startup-config arp !Command: show running-config arp !Time: Mon Aug 23 07:33:15 2010 version 5.0(2)N1(1) ip arp timeout 2100 ip arp event-history errors size medium interface Vlan10 ip arp 192.0.1.37 00C0.4F00.0000 switch#</pre>
----------	--

Related Commands	Command	Description
	copy running-config startup-config	Copies the running configuration to the startup configuration file.
	ip arp timeout	Configures an ARP timeout.
	show running-config arp	Displays the ARP running configuration.