

V Commands

This chapter describes the Cisco NX-OS object tracking commands that begin with V.

Send comments to nexus5k-docfeedback@cisco.com

vrf member

To add an interface to a virtual routing and forwarding (VRF) instance or to configure object tracking on a VRF instance, use the **vrf member** command. To remove the object tracking for this route, use the **no** form of this command.

vrf member vrf-name

no vrf member vrf-name

Syntax Description

vrf-name	VRF name. The name can be any case-sensitive, alphanumeric string up to
	32 characters.

Command Default

None

Command Modes

Interface configuration mode
Object tracking configuration mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

Usage Guidelines

Use the **vrf member** command in object tracking configuration mode to track objects in a nondefault VRF.

Examples

This example shows how to track an IP route in VRF Red:

```
switch(config) # track 1 ip route 10.10.10.0/8 reachability
switch(config-track) # vrf member Red
switch(config-track) #
```

This example shows how to add the Ethernet interface 1/5 to VRF RemoteOfficeVRF:

```
switch(config) # interface ethernet 1/5
switch(config-if) # no switchport
switch(config-if) # vrf member RemoteOfficeVRF
switch(config-if) #
```

Related Commands

Command	Description
show ip eigrp	Displays Enhanced Interior Gateway Routing Protocol (EIGRP) information.
show ip ospf interface	Displays Open Shortest Path First (OSPF) interface-related information.
show ip rip	Displays a summary of RIP information for all RIP instances.

Send comments to nexus5k-docfeedback@cisco.com

Command	Description
show track	Displays information about object tracking.
track ip route	Tracks an interface.

Send comments to nexus5k-docfeedback@cisco.com