

Send comments to nexus5k-docfeedback@cisco.com



C Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with C.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

clear ip interface statistics

To clear IP interface statistics, use the **clear ip interface statistics** command.

clear ip interface statistics

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	Any command mode
----------------------	------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples	<p>This example shows how to clear the IP interface statistics:</p> <pre>switch# clear ip interface statistics</pre>
-----------------	--

Related Commands	Command	Description
	show ip interface	Displays IP interface information.

Send comments to nexus5k-docfeedback@cisco.com

clear vrrp

To clear the Virtual Router Redundancy Protocol (VRRP) statistics, use the **clear vrrp** command.

clear vrrp *vr id* **interface** {*ethernet slot/port* | **port-channel** *number* [*.sub_if_number*] }

Syntax Description	<i>vr id</i>	Clears VRRP statistics in a VRRP group on an interface. The range is from 1 to 255.
	interface	Specifies an Ethernet or EtherChannel interface or a subinterface.
	ethernet <i>slot/port</i>	Clears VRRP statistics on the Ethernet interface. The slot number is from 1 to 255, and the port number is from 1 to 128.
	port-channel <i>number</i>	Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096.
	<i>.sub_if_number</i>	(Optional) Subinterface number. The range is from 1 to 4093.

Command Default	None
-----------------	------


Command Modes	Any command mode
---------------	------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples This example shows how to clear VRRP statistics from a specific Ethernet interface:

```
switch(config)# clear vrrp vr 1 interface ethernet 1/5
switch(config)#
```

Related Commands	Command	Description
	feature vrrp	Enables the VRRP feature.

 clear vrrp

Send comments to nexus5k-docfeedback@cisco.com