

Send comments to nexus5k-docfeedback@cisco.com



F Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with F.

Send comments to nexus5k-docfeedback@cisco.com

feature vrrp

To enable the Virtual Router Redundancy Protocol (VRRP), use the **feature vrrp** command. To disable VRRP, use the **no** form of this command.

feature vrrp
no feature vrrp


Syntax Description This command has no arguments or keywords.

Command Default Disabled


Command Modes Global configuration mode

Command History	Release	Modified
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines You must enable the VRRP feature before you can configure VRRP.

 **Note** In Cisco NX-OS Release 5.0(3)N1(1), a software upgrade on the Cisco Nexus 5548 switch and the Cisco Nexus 5596 switch that has the Layer 3 features enabled is disruptive. You must reload the switch and the Cisco Nexus 2000 Series Fabric Extender.

This command does not require a license.

 **Note** Make sure the LAN Base Services license is installed on the switch to enable Layer 3 interfaces.

Examples This example shows how to enable the VRRP feature:

```
switch# configure terminal
switch(config)# feature vrrp
switch(config)#
```

This example shows how to disable the VRRP feature:

```
switch# configure terminal
switch(config)# no feature vrrp
switch(config)#
```

Send comments to nexus5k-docfeedback@cisco.com

Related Commands	Command	Description
	clear vrrp	Clears all the software counters for the specified virtual router.
	show feature	Displays the status of features on a switch.
	show vrrp	Displays VRRP configuration information.
	vrrp	Configures a VRRP group on an interface.

Send comments to nexus5k-docfeedback@cisco.com