

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*



## F Commands

---

This chapter describes the Cisco NX-OS virtual port channel (vPC) commands that begin with F.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

## feature vpc

To enable a virtual port channel (vPC), which allows links that are physically connected to two different Cisco Nexus 5000 Series devices to appear as a single port channel to a third device, use the **feature vpc** command. To disable vPC on the switch, use the **no** form of this command.

**feature vpc**

**no feature vpc**

<b>Syntax Description</b>	This command has no arguments or keywords.
---------------------------	--

<b>Command Default</b>	Disabled
------------------------	----------

<b>Command Modes</b>	Global configuration mode
----------------------	---------------------------

<b>Command History</b>	Release	Modification
	4.1(3)N1(1)	This command was introduced.

<b>Usage Guidelines</b>	In a vPC configuration, the third device can be a Cisco Nexus 2000 Series Fabric Extender, switch, server, or any other networking device.
-------------------------	--

<b>Examples</b>	<p>This example shows how to enable vPC on the switch:</p> <pre>switch(config)# <b>feature vpc</b></pre>
-----------------	--

<b>Related Commands</b>	Command	Description
	<b>show vpc</b>	Displays the vPC configuration status.
	<b>show feature</b>	Displays whether or not vPC is enabled on the switch.