

Send comments to nexus5k-docfeedback@cisco.com



G Commands

This chapter describes the Cisco NX-OS virtual port channel (vPC) commands that begin with G.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

graceful consistency-check

To enable the Graceful Type-1 Consistency feature in a virtual port channel (vPC) domain, use the **graceful consistency-check** command. To disable the Graceful Type-1 Consistency feature, use the **no** form of this command.

graceful consistency-check

no graceful consistency-check

Syntax Description This command has no arguments or keywords.

Command Default Enabled

Command Modes vPC domain configuration mode

Command History	Release	Modification
	5.0(2)N2(1)	This command was introduced.

Examples This example shows how to enable the Graceful Type-1 Consistency feature in vPC domain 100:

```
switch# configuration terminal
switch(config)# vpc domain 100
switch(config-vpc-domain)# graceful consistency-check
switch(config-vpc-domain)#
```

Related Commands	Command	Description
	vpc domain	Configures a vPC domain.
	show vpc brief	Displays information about vPCs. If the vPC feature is not enabled, the system displays an error when you enter this command.
