

# **D** Commands

This chapter describes the Cisco NX-OS FabricPath commands that begin with D.

## description (FabricPath)

To configure the topology description, use the **description** command.

 ${\bf description}\ desc$ 

no description desc

•		_	-		
<b>~</b> 1	ntax	HACC	rii	1ti C	۱n
•	IIILUA	<b>D C 3 C</b>		JUL	ш

desc	Line description	. The maximum	n size is 64 characters.	
------	------------------	---------------	--------------------------	--

**Command Default** 

None

**Command Modes** 

Global configuration mode (config)

## **Command History**

Release	Modification
5.2(1)N1(1)	This command was introduced.

## **Usage Guidelines**

This command requires an Enhanced Layer 2 license.

#### **Examples**

This example shows how to configure the topology description:

switch# configure terminal

switch#(config)fabricpath topology 50

switch#(config-fp-topology)# description FabricPath Topology 50 Configuration

#### **Related Commands**

Command	Description
fabricpath domain	Enables FabricPath Layer 2 IS-IS.
default	

## description (fabricpath-oam)

To configure a description for a FabricPath Operation, Administration, and Maintenance (OAM) profile, use the **description** command in FabricPath OAM profile configuration mode. To remove the FabricPath OAM profile description, use the **no** form of this command.

description description

no description

Syntax	1162611	
<b>O j</b> ca		P

description	The description for the FabricPath OAM profile. The range is 1 to 64
	characters.

## **Command Default**

A description for the FabricPath OAM profile is not configured.

#### **Command Modes**

FabricPath OAM profile configuration (config-fp-oam-profile)

#### **Command History**

Release	Modification
7.0(0)N1(1)	This command was introduced

## Examples

This exampleshows how to configure a description for a FabricPath OAM profile:

switch(config)# fabricpath oam profile 100
switch(config-fp-oam-profile)# description profile-description

### **Related Commands**

Command	Description	

## dot1q

To specify that a fabricpath Operation, Administration, and Maintenance (OAM) flow profile must include a dot1q tag, use the **dot1q** command. To remove the dot1q tag, use the **no** form of this command.

**dot1q** vlan-id [cos service-value]

#### no dot1q

#### **Syntax Description**

vlan-id	Specifies the flow profile VLAN ID. The range is from 1 to 4094.
cos service-value	(Optional) Specifies class of service (CoS). The range is from 0 to 7.

#### **Command Default**

Dot1q tag is not included in the FabricPath OAM flow profile.

#### **Command Modes**

FabricPath OAM flow profile (config-fp-oam-profile-flow)

#### **Command History**

Release	Modification
7.0(0)N1(1)	This command was introduced.

#### Usage Guidelines

802.1Q tunneling enables service providers to use a single VLAN to support customers who have multiple VLANs, while preserving customer VLAN IDs and keeping traffic in different customer VLANs segregated. Use this command to enter 802.1Q or 802.1ad configuration with CoS value.

## Examples

This example shows how to configure a fabricpath OAM flow profile and specify a 802.1Q tag.

switch# configure terminal
switch#(config)fabricpath oam profile 1
switch#(config-fp-oam-profile)flow forward
switch#(config-fp-oam-profile-flow)dot1q 20 cos 3

#### **Related Commands**

Command	Description