



E Commands

This chapter describes the Cisco NX-OS FabricPath commands that begin with E.

ether-type

To configure the fabricpath Operation, Administration, and Maintenance (OAM) flow profile ether type (payload of an Ethernet Frame), use the **ether-type** command in fabricpath OAM flow profile configuration mode. To remove the ether-type, use the **no** form of this command.

ether-type *ether-type*

no ether-type

Syntax Description	<i>ether-type</i>	
--------------------	-------------------	--