



H Commands

This chapter describes the Cisco NX-OS FabricPath commands that begin with H.

hostname dynamic (FabricPath)

To configure a dynamic hostname exchange for Intermediate-System-to-Intermediate System (IS-IS), use the **hostname dynamic** command. To return to the default setting, use the **no** form of this command.

hostname dynamic

no hostname dynamic

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	ON
------------------------	----

Command Modes	FabricPath IS-IS configuration mode
----------------------	-------------------------------------

Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.

Usage Guidelines	This command requires an Enhanced Layer 2 license.
-------------------------	--

Examples	This example shows how to configure a dynamic hostname exchange for IS-IS:
-----------------	--

```
switch# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.  
switch(config)# fabricpath domain default  
switch(config-fabricpath-isis)# hostname dynamic  
switch(config-fabricpath-isis)#
```

Related Commands	Command	Description
	show hostname	Displays the system's hostname.