

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## **B Commands**

---

This chapter describes the Cisco NX-OS commands that begin with B that are used to manage a Cisco Nexus 2000 Series Fabric Extender from a Cisco Nexus 5000 Series switch.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

# beacon

To turn on the locator beacon LED of a Fabric Extender, use the **beacon** command. To turn off the locator beacon LED, use the **no** form of this command.

**beacon**

**no beacon**

**Syntax Description** This command has no arguments or keywords.

**Command Default** None

**Command Modes** Fabric extender configuration mode

Command History	Release	Modification
	4.0(1a)N2(1)	This command was introduced.
	4.1(3)N1(1)	This command was deprecated, and the <b>locator-led</b> command was introduced.

**Usage Guidelines** Use the **beacon** command to toggle the locator beacon LED of a Fabric Extender, which allows you to easily identify the machine in a busy data center.

**Examples** This example shows how to turn on the locator beacon LED for a specific Fabric Extender chassis:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# beacon
```

This example shows how to turn off the locator beacon LED for a specific Fabric Extender chassis:

```
switch# configure terminal
switch(config)# fex 101
switch(config-fex)# no beacon
```

Related Commands	Command	Description
	<b>fex</b>	Creates a Fabric Extender and enters Fabric Extender configuration mode.
	<b>show fex</b>	Displays all configured Fabric Extender chassis connected to the switch.