



L Commands

This chapter describes the Cisco NX-OS commands that begin with L that are used to manage a Cisco Nexus 2000 Series Fabric Extender from a Cisco Nexus 5500 switch.

locator-led fex

To turn on the locator LED of a Fabric Extender, use the **locator-led** command. To turn off the locator LED, use the **no** form of this command.

locator-led fex *chassis_ID*

no locator-led fex *chassis_ID*

Syntax Description	<i>chassis_ID</i>	Fabric Extender chassis ID. The range is from 100 to 199.
---------------------------	-------------------	---

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	5.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the locator-led command to toggle the locator LED of a Fabric Extender, which allows you to easily identify the machine in a busy data center.
-------------------------	---

Examples	This example shows how to turn on the locator LED for a specific Fabric Extender chassis:
	<pre>switch# locator-led fex 100 switch#</pre>
	This example shows how to turn off the locator beacon LED for a specific Fabric Extender chassis:
	<pre>switch# no locator-led fex 100 switch#</pre>

Related Commands	Command	Description
	show fex	Displays all configured Fabric Extender chassis connected to the switch.
	show locator-led	Displays the status of the locator LED in Fabric Extender modules.

logging fex

To set the logging alert level for Fabric Extender events, use the **logging fex** command. To reset the logging level, use the **no** form of this command.

logging fex [*severity-level*]

no logging fex [*severity-level*]

Syntax Description

<i>severity-level</i>	(Optional) Number of the desired severity level at which messages should be logged. Messages at or numerically lower than the specified level are logged. Severity levels are as follows: <ul style="list-style-type: none">0—emergency: System unusable1—alert: Immediate action needed2—critical: Critical condition—default level3—error: Error condition4—warning: Warning condition5—notification: Normal but significant condition6—informational: Informational message only7—debugging: Appears during debugging only
-----------------------	--

Command Default

None

Command Modes

Global configuration mode

Command History

Release	Modification
5.0(2)N1(1)	This command was introduced.

Examples

This example shows how to set the logging alert level for Fabric Extender events:

```
switch(config)# logging fex 4
```

This example shows how to reset the logging level:

```
switch(config)# no logging fex
```

Related Commands

Command	Description
show fex	Displays all configured Fabric Extender chassis connected to the switch.

