## **V** Commands

This chapter describes the Cisco NX-OS interface commands that begin with V.

## vpc domain

To create a virtual port-channel (vPC) domain, use the **vpc domain** command. To remove a vPC domain, use the **no** form of this command.

vpc domain domain-id

no vpc domain domain-id

| Syntax Description | domain-id  | Domain ID for the vPC. The range of numbers is from 1 to 1000. You must use unique vPC IDs for each vPC within a single virtual device context (VDC). |  |
|--------------------|--|---|--|
| Defaults           | None   |   |  |
| Command Modes      | Any command mo   | de  |  |
| SupportedUserRoles | network-admin  |   |  |
| Command History    | Release  | Modification  |  |
|                    | 5.2(1)N1(1)  | This command was introduced.  |  |
| Usage Guidelines   | You must enable the vPC feature before you can create a vPC domain.<br>You put all vPC interfaces, including the vPC peer link, on both of the vPC peer devices into the identical       |   |  |
|                    | vPC domain. You must have unique vPC domain numbers within each VDC. Once you create a vPC domain, the system automatically creates a vPC system MAC address that is unique to that vPC. |   |  |
|                    | You also use this command to enter the vpc-domain command mode in order to configure vPC parameters.   |   |  |
|                    | This command doe   | es not require a license.   |  |
| Examples           | This example shows how to create a vPC domain:   |   |  |
|                    | switch# <b>config t</b><br>switch(config)# <b>vpc domain 5</b><br>switch(config-vpc-domain)#   |   |  |
|                    | This example shows how to enter the vpc-domain command mode to configure an existing vPC domain:   |   |  |
|                    | switch# <b>config t</b><br>switch(config)# <b>vpc domain 5</b><br>switch(config-vpc-domain)#   |   |  |
|                    |  |   |  |

| <b>Related Commands</b> | Command        | Description  |
|-------------------------|----------------|--|
|                         | show vpc brief | Displays information about vPCs. If the feature is not enabled, the system |
|                         |                | displays an error when you enter this command.                             |

## Cisco Nexus 5500 Series NX-OS Interfaces Command Reference