



R Commands

This chapter describes the Cisco NX-OS PIM commands that begin with R.

restart pim

To restart the IPv4 Protocol Independent Multicast (PIM) process, use the **restart pim** command.

restart pim

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Any command mode

Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.

Usage Guidelines This command requires the LAN Base Services license.

Examples This example shows how to restart the PIM process:

```
switch(config)# restart pim
```

Related Commands	Command	Description
	ip pim flush-routes	Enables flushing routes when the PIM process is restarted.