

Preface

This preface describes the audience, organization, and conventions of the *Cisco Nexus 5500 Series NX-OS Multicast Routing Command Reference*. It also provides information on how to obtain related documentation.

This preface includes the following sections:

- [Audience, page xi](#)
- [Supported Switches, page xi](#)
- [Document Conventions, page xii](#)
- [Related Documentation, page xiii](#)
- [Obtaining Documentation and Submitting a Service Request, page xiv](#)

Audience

This publication is for experienced users who configure and maintain Cisco NX-OS devices.

Supported Switches

This section includes the following topics:

- [Cisco Nexus 5500 Platform Switches, page xi](#)

Cisco Nexus 5500 Platform Switches

[Table 1](#) lists the Cisco switches supported in the Cisco Nexus 5500 Platform.



Note

For more information on these switches, see the *Cisco Nexus 5500 Platform and Cisco Nexus 5000 Platform Hardware Installation Guide* available at the following URL:
http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html

Table 1 Supported Cisco Nexus 5500 Platform Switches

Switch	Description
Cisco Nexus 5548P Switch	The Cisco Nexus 5548P switch is the first switch in the Cisco Nexus 5500 Platform. It is a one-rack-unit (1 RU), 10-Gigabit Ethernet and Fibre Channel over Ethernet (FCoE) switch that offers up to 960-Gbps throughput and up to 48 ports.
Cisco Nexus 5596P Switch	The Cisco Nexus 5596P switch is a top-of-rack, 10-Gigabit Ethernet and FCoE switch offering up to 1920-Gigabit throughput and up to 96 ports.

Document Conventions

Command descriptions use these conventions:

Convention	Description
boldface font	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.

Screen examples use these conventions:

<i>screen font</i>	Terminal sessions and information that the switch displays are in screen font.
boldface screen font	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.

**Caution**

Means reader *be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation

Documentation for Cisco Nexus 5000 Series Switches and Cisco Nexus 2000 Series Fabric Extender is available at the following URL:

http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html

The following are related Cisco Nexus 5000 Series and Cisco Nexus 2000 Series Fabric Extender documents:

Release Notes

Cisco Nexus 5500 Series Release Notes

Configuration Guides

Cisco Nexus 5500 Series Configuration Limits for Cisco NX-OS Release 6.0(2)N1(1)

Cisco Nexus 5500 Series NX-OS Fibre Channel over Ethernet Configuration Guide

Cisco Nexus 5500 Series NX-OS Layer 2 Switching Configuration Guide

Cisco Nexus 5500 Series NX-OS Multicast Routing Configuration Guide

Cisco Nexus 5500 Series NX-OS Quality of Service Configuration Guide

Cisco Nexus 5500 Series NX-OS SAN Switching Configuration Guide

Cisco Nexus 5500 Series NX-OS Security Configuration Guide

Cisco Nexus 5000 Series NX-OS System Management Configuration Guide

Cisco Nexus 5500 Series NX-OS Unicast Routing Configuration Guide

Cisco Nexus 5500 Series NX-OS Fundamentals Configuration Guide

Maintain and Operate Guides

Cisco Nexus 5500 Series NX-OS Operations Guide

Installation and Upgrade Guides

Cisco Nexus 5500 Platform Hardware Installation Guide

Cisco Nexus 5500 Series NX-OS Software Upgrade and Downgrade Guide

Regulatory Compliance and Safety Information for the Cisco Nexus 5500 Series Switches

Licensing Guide

Cisco NX-OS Licensing Guide

Command References

Cisco Nexus 5500 Series NX-OS Fibre Channel Command Reference

Cisco Nexus 5500 Series NX-OS Fundamentals Command Reference

Cisco Nexus 5500 Series NX-OS Layer 2 Interfaces Command Reference

Cisco Nexus 5500 Series NX-OS Multicast Routing Command Reference

Cisco Nexus 5500 Series NX-OS QoS Command Reference

Cisco Nexus 5500 Series NX-OS Security Command Reference

Cisco Nexus 5500 Series NX-OS System Management Command Reference

Cisco Nexus 5500 Series NX-OS Unicast Routing Command Reference

Error and System Messages

Cisco NX-OS System Messages Reference

Troubleshooting Guide

Cisco Nexus 5500 Troubleshooting Guide

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.