

I Commands

This chapter describes the Cisco NX-OS quality of service (QoS) commands that begin with I.

ip dscp (ERSPAN)

ip dscp (ERSPAN)

To configure the differentiated services code point (DSCP) value of the packets in the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic, use the **ip dscp** command. To revert to the default value, use the **no** form of this command.

ip dscp *dscp_value*

no ip dscp *dscp_value*

Syntax Description	<i>dscp_value</i> DSCP value of the packets in the ERSPAN traffic. The range is from 0 to 63.								
Command Default	0								
Command Modes	ERSPAN session configuration mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>5.2(1)N1(1)</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	5.2(1)N1(1)	This command was introduced.				
Release	Modification								
5.2(1)N1(1)	This command was introduced.								
Usage Guidelines	This command does not require a license.								
Examples	<p>This example shows how to configure the DSCP value of the packets in the ESRSPAN traffic:</p> <pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# ip dscp 10 switch(config-erspan-src) #</pre>								
Related Commands	<table border="1"> <thead> <tr> <th>Command</th><th>Description</th></tr> </thead> <tbody> <tr> <td>ip prec</td><td>Configures the IP precedence value of the ERSPAN traffic.</td></tr> <tr> <td>ip ttl</td><td>Configures the IP time-to-live (TTL) value of the ERSPAN traffic.</td></tr> <tr> <td>monitor-session</td><td>Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.</td></tr> </tbody> </table>	Command	Description	ip prec	Configures the IP precedence value of the ERSPAN traffic.	ip ttl	Configures the IP time-to-live (TTL) value of the ERSPAN traffic.	monitor-session	Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.
Command	Description								
ip prec	Configures the IP precedence value of the ERSPAN traffic.								
ip ttl	Configures the IP time-to-live (TTL) value of the ERSPAN traffic.								
monitor-session	Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.								

ip ttl (ERSPAN)

To configure the IP time-to-live (TTL) value of the Encapsulated Remote Switched Port Analyzer (ERSPAN) traffic, use the **ip ttl** command. To revert to the default configuration, use the **no** form of this command.

ip ttl *ttl_value*

no ip ttl *ttl_value*

Syntax Description	<i>ttl_value</i>	IP TTL value of the ERSPAN traffic. The range is from 1 to 255.
Command Default	255	
Command Modes	ERSPAN session configuration mode	
Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.
Usage Guidelines	This command does not require a license.	
Examples	<p>This example shows how to configure the IP TTL value of the ESRSPAN source:</p> <pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# ip ttl 30 switch(config-erspan-src)# </pre> <p>This example shows how to remove the IP TTL value from the ESRSPAN source:</p> <pre>switch# configure terminal switch(config)# monitor session 1 type erspan-source switch(config-erspan-src)# no ip ttl 30 switch(config-erspan-src)# </pre>	
Related Commands	Command	Description
	ip dscp	Configures the DSCP value of the packets in the ERSPAN traffic.
	monitor-session	Enters the monitor configuration mode for configuring an ERSPAN session for analyzing traffic between ports.

