



F Commands

This chapter describes the system management commands that begin with F.

feature ptp

To enable the PTP feature, use the **feature ptp** command. To unconfigure the PTP feature, use the **no** form of this command.

feature ptp

no feature ptp

Syntax Description There are no arguments or keywords for this command.

Command Default None

Command Modes Global configuration mode

Release	Modification
5.2(1)N1(1)	This command was introduced.

Examples This example shows how to enable PTP on the device:

```
switch# configure terminal
switch(config)# feature ptp
```

Command	Description
feature ptp	Enables or disables PTP on the device.
ptp source	Configures the source IP address for all PTP packets.
ptp domain	Configures the domain number to use for this clock.
ptp priority1	Configures the priority 1 value to use when advertising this clock.
ptp priority2	Configures the priority 1 value to use when advertising this clock.
show ptp brief	Displays the PTP status.
show ptp clock	Displays the properties of the local clock.