

# **C** Commands

This chapter describes the Cisco NX-OS Layer 3 interfaces commands that begin with C.

# clear ip arp

To clear the Address Resolution Protocol (ARP) information, use the clear ip arp command.

clear ip arp [ip-addr | {[event-history | all | cli | client-errors | client event | control | errors |
event | ha | lcache | lcache-errors | packet | snmp | sync-event]} | [force-delete | statistics] |
[mgmt mgmt-inteface-number] | [statistics] | [tunnel-statistics] | [vlan vlan-interface-number] |
[vpc-statistics] | [vrf vrf-name | all | default | management]

#### **Syntax Description**

ip-addr	(Optional) IPv4 source address. The format is x.x.x.x.	
event-history	(Optional) Clears the event history buffers.	
all	(Optional) Clears all event history buffers.	
cli	(Optional) Clears CLI logs.	
client-errors	(Optional) Clears client_error logs.	
client-event	(Optional) Clears client_event logs.	
control	(Optional) Clears ARP control event logs.	
errors	(Optional) Clears inst error logs.	
event	(Optional) Clears internal event logs.	
ha	(Optional) Clears HA and GR logs.	
lcache	(Optional) Clears lcache logs.	
lcache-errors	(Optional) Clears lcache_error logs.	
packet	(Optional) Inst packet logs.	
snmp	(Optional) SNMP logs.	
sync-event	(Optional) CFS and MCECM related event logs.	
force-delete	(Optional) Clears the entries from the ARP table without a refresh.	
mgmt	(Optional) Management interface	
mgmt-inteface-number		
statistics	(Optional) Clears ARP statistics.	
ethernet	(Optional) Ethernet IEEE 802.3z	
loopback	(Optional) Loopback interface	
mgmt	(Optional) Management Interface	
port-channel	(Optional) Port channel interface	
vlan	(Optional) VLAN interface	
vrf	(Optional) Displays per-VRF information	
tunnel-statistics	(Optional) Clears ARP statistics for tunneled packets	
vlan	(Optional) VLAN interface	
vlan-interface-number		
vpc-statistics	(Optional) Clears ARP vPC statistics	
vrf vrf-name	(Optional) Specifies the virtual routing and forwarding (VRF) context name. The name can be any case-sensitive, alphanumeric string up to 32 characters.	
all	(Optional) Clears the ARP information from all VRF entries.	
The state of the s		

default	(Optional) Clears the ARP information from the default VRF.
management (Optional) Clears the ARP information from the management VRF.	

### **Command Default**

None

#### **Command Modes**

Any command mode

### **Command History**

Release	Modification
6.0(2)N1(2)	Support for the QSFP+ GEM was added.
5.2(1)N1(1)	This command was introduced.

## Examples

This example shows how to clear the ARP table:

switch# clear ip arp

Command	Description
show ip arp	Displays information about ARP.

# clear ip interface statistics

To clear IP interface statistics, use the clear ip interface statistics command.

clear ip interface statistics

Syntax Description

This command has no arguments or keywords.

**Command Default** 

None

**Command Modes** 

Any command mode

**Command History** 

Release	Modification
5.2(1)N1(1)	This command was introduced.

Examples

This example shows how to clear the IP interface statistics:

switch# clear ip interface statistics

Command	Description
show ip interface	Displays IP interface information.

# clear ipv6 icmp interface statistics

To clear statistics about ICMPv6, use the clear ipv6 icmp interface statistics command.

clear ipv6 icmp interface statistics [type number]

Syntax	

type	(Optional) Interface type. Use ? to see the list of supported interfaces.
number	(Optional) Interface number. Use ? to see the range.

Defaults

None

**Command Modes** 

Any command mode

**Command History** 

Release	Modification
5.2(1)N1(1)	This command was introduced.

**Usage Guidelines** 

This command does not require a license.

**Examples** 

This example shows how to clear the ICMPv6 statistics:

switch(config-if)# clear ipv6 icmp interface statistics

Command	Description
ipv6 icmp	Configures ICMPv6 on an interface.

# clear ipv6 nd interface statistics

To clear information about Neighbor Discovery (ND), use the **clear ipv6 nd interface statistics** command.

clear ipv6 nd interface statistics [type number]

•		-	
<b>~</b> 1	/ntav	Descri	ntınn
•	IIIUA	DUSUII	puon

type	(Optional) Interface type. Use ? to see the list of supported interfaces.
number	(Optional) Interface number. Use ? to see the range.

Defaults

None

**Command Modes** 

Any command mode

#### **Command History**

Release	Modification
5.2(1)N1(1)	This command was introduced.

#### **Usage Guidelines**

This command does not require a license.

#### **Examples**

This example shows how to clear the ND information:

switch(config-if)# clear ipv6 nd interface statistics

Command	Description
ipv6 nd	Configures ICMPv6 ND on an interface.

# clear ipv6 neighbor

To clear IPv6 neighbors, use the clear ipv6 neighbor command.

clear ipv6 neighbor [type number] [force-clear] [vrf vrf-name]

#### **Syntax Description**

type	(Optional) Interface type. Use ? to see the list of supported interfaces.
number	(Optional) Interface number. Use ? to see the range.
force-clear	(Optional) Clears the IPv6 neighbor cache withouth a refresh.
vrf vrf-name	(Optional) Specifies the virtual router context (VRF) name. The name can be any case-sensitive, alphanumeric string up to 63 characters.

Defaults

None

#### **Command Modes**

Any command mode

### **Command History**

Release	Modification
5.2(1)N1(1)	This command was introduced.

### **Usage Guidelines**

Use the clear ipv6 neighbor command to clear the IPv6 adjacency table.

This command does not require a license.

#### **Examples**

This example shows how to clear the IPv6 neighbors:

switch# clear ipv6 neighbor

Command	Description
ipv6 nd	Configures ICMPv6 ND on an interface.

clear ipv6 neighbor