

M Commands

This chapter describes the Cisco NX-OS Routing Information Protocol (RIP) commands that begin with M.

maximum-paths (RIP)

To configure the maximum number of equal cost parallel routes that the Routing Information Protocol (RIP) can install into the routing table, use the **maximum-paths** command. To remove the **maximum-paths** command and restore the system to its default condition, use the **no** form of this command.

maximum-paths maximum

no maximum-paths

Syntax Description

maximum	Maximum number of parallel routes that RIP can install in a routing table.
	The range is from 1 to 16.

Command Default

8 paths

Command Modes

Router address-family configuration mode

Command History

Release	Modification
5.2(1)N1(1)	This command was introduced.

Examples

This example shows how to allow a maximum of 16 equal cost paths to a destination:

```
switch(config)# router rip Enterprise
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# maximum-paths 16
```

Related Commands

Command	Description
address-family	Enters address-family configuration mode.
copy running-config startup-config	Saves the configuration to the startup configuration file.
show ip rip	Displays a summary of RIP information for all RIP instances.