

C Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with C.

clear ip interface statistics

To clear IP interface statistics, use the **clear ip interface statistics** command.

clear ip interface statistics

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
5.2(1)N1(1)	This command was introduced.

Examples

This example shows how to clear the IP interface statistics:

switch# clear ip interface statistics

Related Commands

Command	Description
show ip interface	Displays IP interface information.

clear vrrp

To clear the Virtual Router Redundancy Protocol (VRRP) statistics, use the clear vrrp command.

clear vrrp vr id interface {ethernet slot/[QSFP-module/]port| port-channel
 number[.sub_if_number]}

Syntax Description

vr id	Clears VRRP statistics in a VRRP group on an interface. The range is from 1 to 255.
interface	Specifies an Ethernet or EthreChannel interface or a subinterface.
ethernet slot/[QSFP-module/]port	Clears VRRP statistics on the Ethernet interface. The <i>slot</i> number is from 1 to 255. The <i>QSFP-module</i> number is from 1 to 4. The <i>port</i> number is from 1 to 128.
	Note The <i>QSFP-module</i> number applies only to the QSFP+ Generic Expansion Module (GEM).
port-channel number	Clears VRRP statistics on the EtherChannel interface. The EtherChannel number is from 1 to 4096.
.sub_if_number	(Optional) Subinterface number. The range is from 1 to 4093.

Command Default

None

Command Modes

Any command mode

Command History

Release	Modification
6.0(2)N1(2)	Support for the QSFP+ GEM was added.
5.2(1)N1(1)	This command was introduced.

Examples

This example shows how to clear VRRP statistics from a specific Ethernet interface:

switch(config)# clear vrrp vr 1 interface ethernet 1/5
switch(config)#

Related Commands

Command	Description
feature vrrp	Enables the VRRP feature.

clear vrrp