



P Commands

This chapter describes the Cisco NX-OS Border Gateway Protocol (BGP) commands that begin with P.

password (BGP)

To configure Border Gateway Protocol (BGP) to use MD5 authentication, use the **password** command. To disable this function, use the **no** from of this command.

password [*auth-key string* | *string*]

no password [*auth-key string* | *string*]

Syntax Description	<i>auth-key</i> (Optional) MD5 authentication key. You can enter an unencrypted (cleartext) key, or one of these values followed by a space and the MD5 authentication key: 0—Specifies an unencrypted (cleartext) key 3—Specifies a 3-DES encrypted key 7—Specifies a Cisco Type 7 encrypted key The key can be from 1 to 16 characters.
	<i>string</i> (Optional) Neighbor password.

Command Default	None
------------------------	------

Command Modes	BGP neighbor configuration mode
----------------------	---------------------------------

Command Modes	BGP neighbor configuration mode
----------------------	---------------------------------

Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.

Usage Guidelines	This command requires the LAN Enterprise Services license.
-------------------------	--

Examples	This example shows how to enable an unencrypted key for a BGP neighbor: <pre>switch(config)# router bgp 101 switch(config-router)# neighbor 192.0.2.1 remote-as 1.2 switch(config-route-neighbor)# password 0 myauthkey switch(config-route-neighbor)#</pre> This example shows how to disable an unencrypted authentication key for a BGP neighbor: <pre>switch(config)# router bgp 101 switch(config-router)# neighbor 192.0.2.1 remote-as 1.2 switch(config-route-neighbor)# no password 0 myauthkey switch(config-route-neighbor)#</pre>
-----------------	--

Related Commands

Command	Description
show ip bgp	Displays information about BGP routes.

■ password (BGP)