



F Commands

This chapter describes the Cisco NX-OS Hot Standby Router Protocol (HSRP) commands that begin with F.

feature hsrp

To enter Hot Standby Router Protocol (HSRP) configuration mode and enable HSRP, use the **feature hsrp** command. To disable HSRP, use the **no** form of this command.

feature hsrp

no feature hsrp

| | |
|---------------------------|---|
| Syntax Description | The command has no arguments or keywords. |
|---------------------------|---|

| | |
|------------------------|----------|
| Command Default | Disabled |
|------------------------|----------|

| | |
|----------------------|---------------------------|
| Command Modes | Global configuration mode |
|----------------------|---------------------------|

| | | |
|------------------------|----------------|------------------------------|
| Command History | Release | Modification |
| | 5.2(1)N1(1) | This command was introduced. |

| | |
|-------------------------|---|
| Usage Guidelines | You must enable the HSRP feature before you can configure HSRP. |
|-------------------------|---|

**Note**

In Cisco NX-OS Release 5.2(1)N1(1), a software upgrade on the Cisco Nexus 5548 switch and the Cisco Nexus 5596 switch that has the Layer 3 features enabled is disruptive. You must reload the switch and the Cisco Nexus 2000 Series Fabric Extender.

This command does not require a license.

| | |
|-----------------|--|
| Examples | This example shows how to enable HSRP on the switch: |
|-----------------|--|

```
switch# configure terminal
switch(config)# feature hsrp
switch(config)#
```

This example shows how to disable HSRP:

```
switch# configure terminal
switch(config)# no feature hsrp
switch(config)#
```

| | | |
|-------------------------|---------------------|--|
| Related Commands | Command | Description |
| | hsrp group | Creates and activates an HSRP group. |
| | show feature | Displays the status of features on a switch. |
| | show hsrp | Displays HSRP information. |

