

M Commands

This chapter describes the Cisco NX-OS Routing Information Protocol (RIP) commands that begin with M.

maximum-paths (RIP)

To configure the maximum number of equal cost parallel routes that the Routing Information Protocol (RIP) can install into the routing table, use the **maximum-paths** command. To remove the **maximum-paths** command and restore the system to its default condition, use the **no** form of this command.

maximum-paths maximum

no maximum-paths

Syntax Description	maximum	Maximum number of parallel routes that RIP can install in a routing table. The range is from 1 to 16.
Command Default	8 paths	
Command Modes	Router address-family	configuration mode
Command History	Release	Modification
	5.2(1)N1(1)	This command was introduced.
Examples	This example shows how to allow a maximum of 16 equal cost paths to a destination: switch(config)# router rip Enterprise	
	<pre>switch(config-router)# address-family ipv4 unicast switch(config-router-af)# maximum-paths 16</pre>	
Related Commands	Command	Description
	address-family	Enters address-family configuration mode.
	copy running-config startup-config	Saves the configuration to the startup configuration file.
	show ip rip	Displays a summary of RIP information for all RIP instances.