



T Commands

This chapter describes the Cisco NX-OS FabricPath commands that begin with T.

topology

To configure a Layer 2 topology for FabricPath Intermediate System-to-Intermediate System (ISIS), use the **topology** command. To return to the default setting, use the **no** form of this command.


Note

The Cisco Nexus switch supports only two topologies; the default or base topology (topology 0), and another optional topology (for example, topology 1).

topology *topology-number*

no topology [*topology-number*]

| | | |
|---------------------------|------------------------|---|
| Syntax Description | <i>topology-number</i> | Topology number. The range is from 1 to 63. |
|---------------------------|------------------------|---|

| | |
|------------------------|------|
| Command Default | None |
|------------------------|------|

| | |
|----------------------|-------------------------------------|
| Command Modes | FabricPath IS-IS configuration mode |
|----------------------|-------------------------------------|

| Command History | Release | Modification |
|------------------------|----------------|------------------------------|
| | 6.0(2)N1(1) | This command was introduced. |

| | |
|-------------------------|--|
| Usage Guidelines | This command requires an Enhanced Layer 2 license. |
|-------------------------|--|

| | |
|--|--|
| Examples | This example shows how to configure a FabricPath IS-IS topology: |
| <pre>switch# configure terminal Enter configuration commands, one per line. End with CNTL/Z. switch(config)# fabricpath domain default switch(config-fabricpath-isis)# topology 1 switch(config-fabricpath-isis)#</pre> | |

| Related Commands | Command | Description |
|-------------------------|---|-----------------------------------|
| | fabricpath domain <i>default</i> | Enables FabricPath Layer 2 IS-IS. |