



# M Commands

---

This chapter describes the Cisco NX-OS Fibre Channel, virtual Fibre Channel, and Fibre Channel over Ethernet (FCoE) commands that begin with M.

## member (fcalias configuration mode)

To add a member name to a Fibre Channel alias on a Virtual SAN (VSAN), use the **member** command. To remove a member name from a Fibre Channel alias, use the **no** form of this command.

```
member { device-alias aliasname | domain-id domain-id port-number port-number | fcid fc-id |
fwwn fwwn-id | interface fc slot/port [domain-id domain-id | swwn swwn-id] | pwwn pwwn-id
| symbolic-nodename nodename }
```

```
no member { device-alias aliasname | domain-id domain-id port-number port-number | fcid fc-id
| fwwn fwwn-id | interface fc slot/port [domain-id domain-id | swwn swwn-id] | pwwn pwwn-id
| symbolic-nodename nodename }
```

Syntax Description	
<b>device-alias</b> <i>aliasname</i>	Specifies the member device alias. The name can be a maximum of 64 characters.
<b>domain-id</b> <i>domain-id</i>	Specifies the member domain ID. The range is from 1 to 239.
<b>port-number</b> <i>port-number</i>	Specifies a port number in the range of 0 to 255.
<b>fcid</b> <i>fc-id</i>	Specifies the member FC ID. The format is <i>0xhhhhhh</i> , where <i>h</i> is a hexadecimal digit.
<b>fwwn</b> <i>fwwn-id</i>	Specifies the member fWWN ID. The format is <i>hh:hh:hh:hh:hh:hh:hh:hh</i> , where <i>h</i> is a hexadecimal digit.
<b>interface fc</b> <i>slot/port</i>	Specifies the member interface ID and its slot number and port number.
<b>swwn</b> <i>swwn-id</i>	(Optional) Specifies the member sWWN ID. The format is <i>hh:hh:hh:hh:hh:hh:hh:hh</i> , where <i>h</i> is a hexadecimal digit.
<b>pwwn</b> <i>pwwn-id</i>	Specifies the member pWWN ID. The format is <i>hh:hh:hh:hh:hh:hh:hh:hh</i> , where <i>h</i> is a hexadecimal digit.
<b>symbolic-nodename</b> <i>nodename</i>	Specifies the member symbolic node name. The maximum length is 255 characters.

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Fcalias configuration mode
----------------------	----------------------------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

### Examples

This example shows how to add a member to an alias called samplealias:

```
switch(config)# fcalias name samplealias
```

This example shows how to define a Fibre Channel interface for the member:

```
switch(config-fcalias)# member interface fc3/1
```

This example shows how to delete the specified member:

```
switch(config-fcalias)# no member interface fc3/1
```

**Related Commands**

Command	Description
<b>fcalias name</b>	Configures an alias.
<b>show fcalias</b>	Displays the member name information in an alias.

## member (zone configuration mode)

To add a member name to a Fibre Channel zone, use the **member** command. To remove a member name from a zone, use the **no** form of this command.

**member** { **device-alias** *aliasname* | **domain-id** *domain-id* **port-number** *port* | **fcalias** *alias-name* | **fcid** *fc-id* | **fwwn** *fwwn-id* | **interface fc** *slot/port* [**domain-id** *domain-id* | **swwn** *swwn-id*] | **pwwn** *pwwn-id* [**lun** *lun-id*] | **symbolic-nodename** *nodename* }

**no member** { **device-alias** *aliasname* | **domain-id** *domain-id* **port-number** *port* | **fcalias** *alias-name* | **fcid** *fc-id* | **fwwn** *fwwn-id* | **interface fc** *slot/port* [**domain-id** *domain-id* | **swwn** *swwn-id*] | **pwwn** *pwwn-id* [**lun** *lun-id*] | **symbolic-nodename** *nodename* }

Syntax Description	
<b>device-alias</b> <i>aliasname</i>	Specifies the member device alias. The name can be a maximum of 64 characters.
<b>domain-id</b> <i>domain-id</i>	Specifies the member domain ID. The range is from 1 to 239.
<b>port-number</b> <i>port</i>	Specifies the member port number. The range is from 0 to 255.
<b>fcalias</b> <i>alias-name</i>	Specifies a Fibre Channel alias name. The name can be a maximum of 64 characters.
<b>fcid</b> <i>fc-id</i>	Specifies the member FC ID. The format is <i>0xhhhhhh</i> , where <i>h</i> is a hexadecimal digit.
<b>fwwn</b> <i>fwwn-id</i>	Specifies the member fWWN ID. The format is <i>hh:hh:hh:hh:hh:hh:hh:hh</i> , where <i>h</i> is a hexadecimal digit.
<b>interface fc</b> <i>slot/port</i>	Specifies the member interface ID and its slot number and port number.
<b>swwn</b> <i>swwn-id</i>	(Optional) Specifies the member sWWN ID. The format is <i>hh:hh:hh:hh:hh:hh:hh:hh</i> , where <i>h</i> is a hexadecimal digit.
<b>pwwn</b> <i>pwwn-id</i>	Specifies the member pWWN ID. The format is <i>hh:hh:hh:hh:hh:hh:hh:hh</i> , where <i>h</i> is a hexadecimal digit.
<b>lun</b> <i>lun-id</i>	(Optional) Specifies the member Logical Unit Number (LUN) ID. The format is <i>0xhhhh[:hhhh[:hhhh[:hhhh]]]</i> , where <i>h</i> is a hexadecimal digit.
<b>symbolic-nodename</b> <i>nodename</i>	Specifies the member symbolic node name. The name can be a maximum of 255 characters.

**Command Default** None

**Command Modes** Zone set zone configuration mode and zoneset-zone configuration mode

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

**Usage Guidelines** Create a zone set zone member only if you need to add member to a zone from the zone set prompt.

## Examples

This example shows how to add a member to a zone called zs1 on VSAN 1:

```
switch(config)# zone name zs1 vsan 1
switch(config-zone)# member fcid 0x111112
```

This example shows how to add a zone to a zone set called Zoneset1 on VSAN 1:

```
switch(config)# zoneset name ZoneSet1 vsan 1
switch(config-zoneset-zone)# member fcid 0x111112
```

This example shows how to assign a Fibre Channel interface member into a zone:

```
switch(config)# zoneset name ZoneSet1 vsan 1
switch(config-zoneset-zone)# member interface fc 3/1
```

This example shows how to delete the specified device from a zone:

```
switch(config-zoneset-zone)# no member interface fc 3/1
```

## Related Commands

Command	Description
<b>zoneset (configuration mode)</b>	Specifies a name for a zone set.
<b>zone name (zone set configuration mode)</b>	Configures a zone in a zone set.
<b>show zoneset</b>	Displays zone set information.

## member (zoneset configuration mode)

To configure zone set members, use the **member** command. To remove a zone set member, use the **no** form of this command.

**member** *member-name*

**no member** *member-name*

Syntax Description	<i>member-name</i> Member name. The name can be a maximum of 64 characters.							
Command Default	None							
Command Modes	Zone set configuration mode							
Command History	<table><tr><th>Release</th><th>Modification</th></tr><tr><td>6.0(2)N1(1)</td><td>This command was introduced.</td></tr></table>		Release	Modification	6.0(2)N1(1)	This command was introduced.		
Release	Modification							
6.0(2)N1(1)	This command was introduced.							
Examples	<p>This example shows how to add a member zone to a zone set:</p> <pre>switch(config)# <b>zoneset name Zoneset1 vsan 10</b> switch(config-zoneset)# <b>member ZoneA</b></pre>							
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td><b>show zone</b></td><td>Displays zone information.</td></tr><tr><td><b>zoneset name</b></td><td>Creates a zone set.</td></tr></table>		Command	Description	<b>show zone</b>	Displays zone information.	<b>zoneset name</b>	Creates a zone set.
Command	Description							
<b>show zone</b>	Displays zone information.							
<b>zoneset name</b>	Creates a zone set.							