



# A Commands

---

This chapter describes the Cisco NX-OS commands that begin with A that are used to manage a Cisco Nexus 2000 Series Fabric Extender from a Cisco Nexus 6000 switch.

# attach fex

To access the command-line interface (CLI) of a connected Fabric Extender to run diagnostic commands, use the **attach fex** command.

**attach fex** *chassis\_ID*

Syntax Description	<i>chassis_ID</i>	Fabric Extender chassis ID. The chassis ID range is from 100 to 199.
--------------------	-------------------	----------------------------------------------------------------------

Command Default	None
-----------------	------

Command Modes	EXEC mode
---------------	-----------

Command History	Release	Modification
	6.0(2)N1(1)	This command was introduced.

Usage Guidelines	Use the <b>attach fex</b> command to access the CLI on a connected Fabric Extender and performing diagnostic commands. We recommend that you use this command only following direction from Cisco technical support personnel.
------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Examples	This example shows how to access the CLI of a connected Fabric Extender to run diagnostic commands: switch# <b>attach fex 101</b>
----------	--------------------------------------------------------------------------------------------------------------------------------------

Related Commands	Command	Description
	<b>show fex</b>	Displays all configured Fabric Extender chassis connected to the switch.